

[Manuals.plus](#) /

› [SURFOU](#) /

› SURFOU Wireless Doorbell Instruction Manual

SURFOU N128

SURFOU Wireless Doorbell Instruction Manual

Model: N128

Brand: SURFOU

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your SURFOU Wireless Doorbell. Please read this manual thoroughly before use to ensure proper function and longevity of your device.

PACKAGE CONTENTS

Verify that all items are included in your package:

- 2 x Plug-in Receivers
- 2 x Battery-powered Push Buttons (batteries included)
- 2 x Door Plate Signs
- 4 x Screws
- 1 x Mini Screwdriver
- 3 x Double-sided Adhesive Tapes
- 1 x English Instruction Manual (this document)



The complete SURFOU Wireless Doorbell kit, including two plug-in receivers and two battery-powered push buttons, ready for installation.

PRODUCT OVERVIEW AND FEATURES

The SURFOU Wireless Doorbell system is designed for convenience and reliability, offering a wide range of features to enhance your home or office security and communication.


Key Features

- **Wide Wireless Coverage:** Up to 1300 feet (400 meters) in open areas, ensuring signal reach throughout large homes or multi-story buildings.
- **Expandable System:** Multiple learning codes allow for unlimited expansion with additional receivers and buttons.
- **Customizable Chimes:** 55 classic ringtones to choose from.
- **Adjustable Volume:** 5 levels of volume adjustment, from 0dB (mute) to 110dB.
- **LED Indicator:** Flashing LED light provides a visual alert, beneficial for the hearing impaired.
- **Weatherproof Design:** IP55 dustproof and waterproof push button, suitable for various climates (-22°F to 158°F / -30°C to 70°C).
- **Long Battery Life:** Push button powered by a 12V 23A battery with up to 3 years of service life.
- **Memory Function:** Retains previously set chime and volume settings after power loss.

Never Miss Any Visitor



1300 FT (400 M) Of Ultra-long Wireless Range

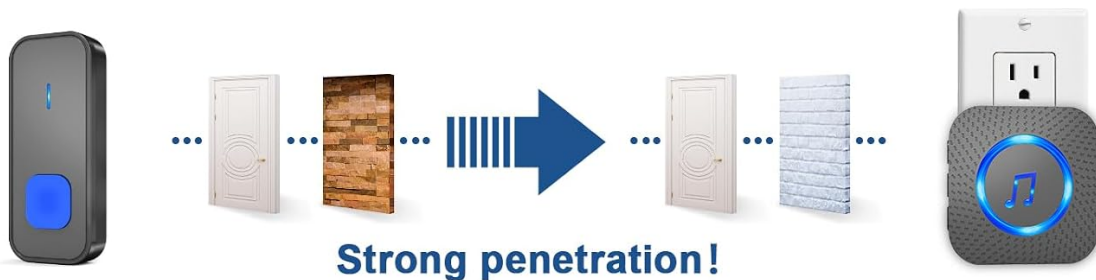

This diagram demonstrates the system's ability to expand, allowing multiple receivers to be placed throughout a home or office, ensuring you never miss a visitor.



IP55 Dustproof And Waterproof

The button is powered by a battery.



3 years

Powered by 12V 23A battery,
up to 3 years of service life.



Snow



Sun



Rain

Easily handle any weather.

-22°F
-30°C



158°F
70°C

Operating temperature range.



The doorbell offers an ultra-long wireless range of up to 1300 feet (400 meters), providing strong signal penetration through various obstacles.

55 Chimes & 5 Adjustable Volume

LED flashing light



Sleeping



Classroom



The IP55 rated push button is designed to withstand diverse weather conditions, operating reliably from -22°F to 158°F (-30°C to 70°C).

Easy Installation Simple And Convenient



The receiver features 55 selectable chimes and 5 adjustable volume levels, including a mute option, along with an LED flashing light for visual alerts.

SETUP AND INSTALLATION

The SURFOU Wireless Doorbell is designed for quick and easy installation.

Step-by-Step Installation

1. **Unpack and Prepare:** Remove all components from the packaging. Ensure the plastic insulating sheet is removed from the battery compartment of the push button.
2. **Plug in Receiver(s):** Insert the plug-in receiver(s) into a standard electrical outlet in your desired location(s). The receiver will light up, indicating it is powered on.
3. **Mount Push Button:** Choose a suitable location for the push button, typically near your front door.
 - **Option 1: Adhesive Mounting**
 - Clean the mounting surface thoroughly to ensure it is dry and free of dust or grease.

- Peel off one side of the double-sided adhesive tape and apply it firmly to the back of the push button.
- Peel off the other side of the adhesive tape and press the push button firmly onto the desired surface for at least 30 seconds.


◦ **Option 2: Screw Mounting**

- Carefully open the push button casing using the provided mini screwdriver.
- Mark the drilling points on the wall through the screw holes on the back plate.
- Drill holes and insert the provided dowels.
- Secure the back plate to the wall with the screws.
- Reattach the front casing of the push button.

4. **Test Functionality:** Press the push button to ensure the receiver rings and the LED flashes.

Mini Wireless Doorbell

Does Not Occupy Your Socket Space

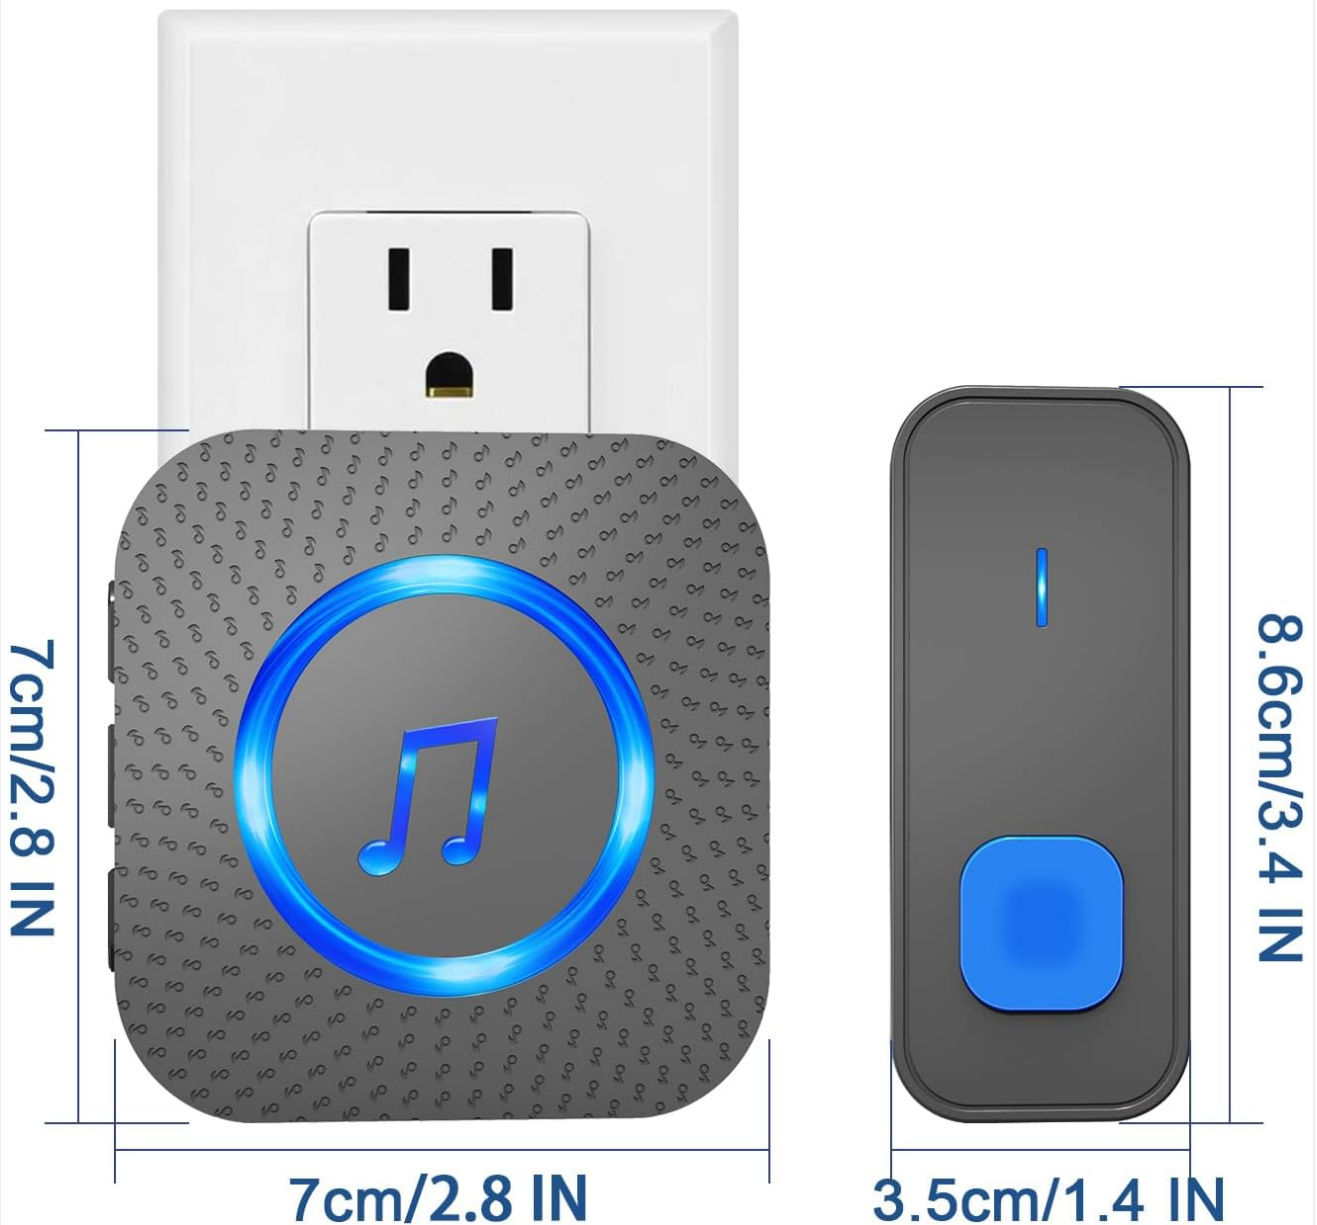

The doorbell system is designed for simple and convenient installation, allowing for quick setup without complex wiring.

OPERATING INSTRUCTIONS

Changing Chime/Ringtone

1. On the receiver, press the **Forward Button** or **Backward Button** to cycle through the 55 available chimes.
2. Stop at your desired chime. The receiver will play the selected chime.

Adjusting Volume

1. On the receiver, press the **Volume Button** repeatedly to cycle through the 5 volume levels (0dB to 110dB).
2. Select the volume level that best suits your needs.

Pairing Additional Buttons/Receivers (Re-pairing)

If you need to pair a new push button with an existing receiver, or re-pair an existing one:

1. **Select Chime:** First, choose your desired chime on the receiver by pressing the **Forward** or **Backward** button.
2. **Enter Pairing Mode:** Long press the **Volume Button** on the receiver for approximately 8 seconds until the receiver emits a "ding" sound and the LED flashes rapidly. This indicates it is in pairing mode.
3. **Activate Transmitter:** Quickly press the push button (transmitter) within 8 seconds. The receiver will emit two "ding" sounds and the LED light will flash, confirming successful pairing.
4. **Exit Pairing Mode:** The receiver will automatically exit pairing mode after 8 seconds if no button is pressed, or after successful pairing.

This video demonstrates how to change the ringtone on your doorbell receiver and how to re-pair the push button with the receiver.

MAINTENANCE

Cleaning

Wipe the doorbell units with a soft, dry cloth. Do not use abrasive cleaners or solvents.

Battery Replacement (Push Button)

The push button is powered by a 12V 23A battery. When the button's LED indicator no longer lights up or the signal becomes weak, it's time to replace the battery.

1. Using the provided mini screwdriver, gently insert it into the small notch at the bottom of the push button casing at a 45-degree angle.
2. Carefully pry off the back cover.
3. Remove the old 12V 23A battery.
4. Insert a new 12V 23A battery, ensuring correct polarity (negative contact spring).
5. Snap the back cover firmly back into place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell does not ring	- Battery in push button is dead or incorrectly installed. - Receiver is unplugged or not powered. - Doorbell units are out of range. - Units are not paired.	- Replace battery in push button, ensuring correct polarity. - Ensure receiver is plugged into a working outlet. - Move receiver closer to the push button. - Re-pair the push button and receiver (see "Pairing Additional Buttons/Receivers").
Short range or intermittent signal	- Obstructions (thick walls, metal structures). - Interference from other electronic devices. - Low battery in push button.	- Relocate receiver or push button to minimize obstructions. - Move doorbell away from other electronics. - Replace battery in push button.
Receiver LED flashes but no sound	Volume is set to mute (0dB).	Increase the volume using the Volume Button on the receiver.


If you encounter issues not listed here, please contact SURFOU customer support.

SPECIFICATIONS

- **Model:** N128
- **Wireless Range:** Up to 1300 feet (400 meters) in open areas
- **Chimes:** 55 selectable melodies
- **Volume Levels:** 5 levels (0dB to 110dB)
- **Waterproof Rating (Button):** IP55
- **Operating Temperature:** -22°F to 158°F (-30°C to 70°C)
- **Receiver Power:** AC100-260V / 50-60Hz (US style plug)
- **Button Battery:** 12V 23A (included), approx. 3 years life
- **Dimensions (Receiver):** Approximately 2.8 x 2.8 inches (7 x 7 cm)
- **Dimensions (Button):** Approximately 3.4 x 1.4 inches (8.6 x 3.5 cm)
- **Weight:** 8.8 ounces (total package)

Mini Wireless Doorbell

Does Not Occupy Your Socket Space

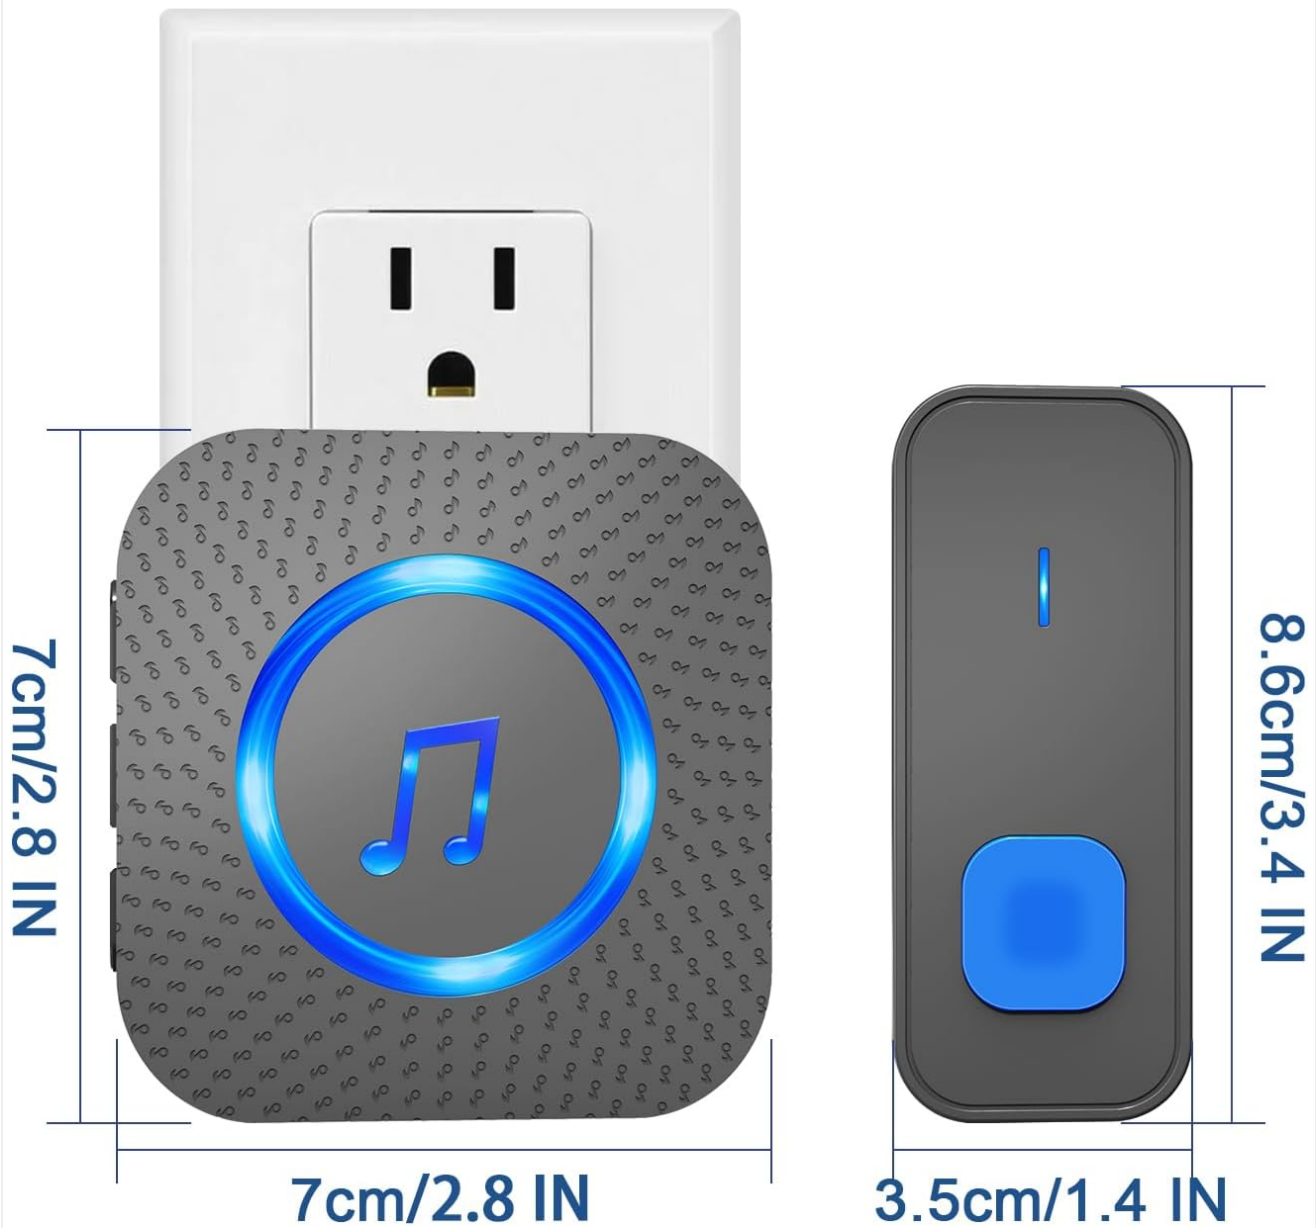

The compact design of the receiver ensures it does not obstruct adjacent outlets, and the push button is also designed for discreet placement.

WARRANTY AND SUPPORT

SURFOU provides customer support for this product. If you have any questions or require assistance, please contact us. We aim to respond within 24 hours.

For further assistance, please refer to the contact information provided with your purchase or visit the official SURFOU store online.

Note: Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question