

[Manuals.plus](#) /

› [LEXiBOOK](#) /

› Lexibook Unicorn Bluetooth CD Player User Manual

LEXiBOOK RCD109UNI

Lexibook Unicorn Bluetooth CD Player User Manual

Model: RCD109UNI

INTRODUCTION

Thank you for choosing the Lexibook Unicorn Bluetooth CD Player. This portable multimedia device is designed to provide hours of entertainment for children, featuring CD playback, Bluetooth connectivity, USB and AUX-in options, and captivating multicolour light effects. Please read this manual carefully to ensure proper use and to maximize your enjoyment of the product.

IMPORTANT SAFETY INFORMATION

This product is designed for children aged 2 years and older. Please observe the following safety precautions:

- Always supervise young children during use.
- Do not expose the device to water or excessive moisture.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided AC adapter or specified batteries.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep the device away from heat sources and direct sunlight.
- Ensure proper ventilation around the unit during operation.

PACKAGE CONTENTS

- Lexibook Unicorn Bluetooth CD Player
- AC Power Cable
- User Manual



Image: The Lexibook Unicorn Bluetooth CD Player shown in its colorful retail packaging, indicating the product and its accessories are included.

PRODUCT OVERVIEW AND FEATURES

The Lexibook Unicorn CD Player combines multiple audio functionalities with a fun, child-friendly design.

- **CD Player:** Compatible with CD, CD-R, and CD-RW discs.
- **Bluetooth 5.0:** Seamless wireless connection to smartphones, tablets, and other Bluetooth-enabled devices.
- **USB Slot:** For playing audio files from USB drives.
- **AUX-In Jack:** Connect external audio sources like MP3 players.
- **Microphone Jack:** Transform your player into a karaoke machine (microphone not included).
- **Multicolour Light Effects:** Dynamic lights add to the fun.
- **Program/Repeat Function:** Customize your playback experience.
- **Portable Design:** Easy to carry with a built-in handle.
- **Dual Power Options:** Operates via AC power or batteries.



Image: A vibrant pink Lexibook Unicorn Bluetooth CD Player, showcasing its front panel with control buttons, digital display, USB port, and the side speaker grille with active multicolour light effects.

SETUP GUIDE

Powering the Device

Your Lexibook Unicorn CD Player can be powered by either the included AC power cable or batteries.

1. AC Operation:

- Insert the small end of the AC power cable into the DC IN jack on the back of the unit.
- Plug the other end of the AC power cable into a standard wall outlet.

2. Battery Operation:

- Locate the battery compartment on the bottom of the unit.
- Open the battery compartment cover.
- Insert 6 x C/LR14 batteries (not included), ensuring correct polarity (+/-).
- Close the battery compartment cover securely.



Image: The Lexibook Unicorn CD Player with its top-loading CD compartment open, revealing the CD spindle, ready for disc insertion. This view also shows the general layout of the device.

OPERATING YOUR CD PLAYER

CD Playback

1. Open the CD compartment lid.
2. Place a CD (CD, CD-R, or CD-RW) onto the center spindle with the label side facing up.
3. Close the CD compartment lid firmly.
4. Press the **PLAY/PAUSE** button to start playback.
5. Use the **SKIP FORWARD** and **SKIP BACKWARD** buttons to navigate between tracks.
6. Press the **STOP** button to stop playback.
7. Use the **VOL+** and **VOL-** buttons to adjust the volume.
8. Press the **REPEAT/ALL** button to repeat the current track or all tracks.
9. Press the **PROG** button to program a sequence of tracks.

Bluetooth Connection

1. Turn on the CD player.
2. Switch the mode selector to **BT (Bluetooth)**. The display will show "BT" and an indicator light will flash, indicating pairing mode.
3. On your smartphone, tablet, or other Bluetooth device, enable Bluetooth and search for available devices.
4. Select "LEXIBOOK" from the list of devices.
5. Once paired, the indicator light will stop flashing and remain solid. You can now play audio wirelessly from your device.



Image: The Lexibook Unicorn CD Player positioned next to a smartphone displaying a music app, illustrating its Bluetooth connectivity feature for wireless audio streaming.

USB Playback

1. Insert a USB flash drive into the USB slot on the front panel.
2. Switch the mode selector to **USB**.
3. The player will automatically detect and begin playing compatible audio files from the USB drive.

4. Use the playback controls (**PLAY/PAUSE**, **SKIP**, **REPEAT**) as you would for CD playback.

AUX-In Connection

1. Connect one end of a 3.5mm audio cable (not included) to the AUX-IN jack on the side of the CD player.
2. Connect the other end of the audio cable to the headphone jack or audio output of your external device (e.g., MP3 player, smartphone).
3. Switch the mode selector to **AUX**.
4. Play audio from your external device. The sound will be output through the CD player's speakers.



Image: A detailed view highlighting the Microphone jack and AUX-IN jack on the side of the Lexibook Unicorn CD Player, with descriptive labels pointing to each port.

Microphone Usage (Karaoke)

1. Connect a microphone (not included) to the **MIC** jack on the side of the CD player.
2. Ensure the player is in CD, Bluetooth, USB, or AUX mode.
3. Your voice will be amplified through the speakers along with the playing audio.

Multicolour Light Effects

The multicolour light effects automatically activate when the player is turned on. To turn them off or on, locate the light button (often indicated by a light bulb icon) on the control panel and press it.



Image: The Lexibook Unicorn CD Player with its side speaker grille illuminated by vibrant multicolour light effects, emphasizing its portable design with a top handle.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place. Remove batteries if storing for a long time to prevent leakage.
- **CD Care:** Handle CDs by their edges. Keep them clean and free from scratches.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Unit does not power on.	No power connection; Dead batteries.	Ensure AC cable is securely plugged in or replace batteries.
CD skipping or not playing.	Dirty or scratched CD; CD not inserted correctly.	Clean the CD with a soft cloth; Reinsert the CD properly; Try another CD.
Bluetooth not connecting.	Device not in pairing mode; Bluetooth off on external device; Too far from player.	Ensure player is in BT mode; Enable Bluetooth on your device; Move closer to the player.
No sound from speakers.	Volume too low; Incorrect mode selected; AUX cable not fully inserted.	Increase volume; Select correct mode (CD, BT, USB, AUX); Ensure AUX cable is fully inserted.
Microphone not working.	Microphone not connected; Microphone faulty.	Ensure microphone is securely plugged into the MIC jack; Test with another microphone if available.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	RCD109UNI
Product Dimensions	20.5 x 23.8 x 11.6 inches
Item Weight	2.77 pounds
Connectivity Technology	Bluetooth, Auxiliary, USB
Bluetooth Version	5.0
CD Compatibility	CD / CD-R / CD-RW
Speaker Output	3 W x 2
Power Supply	AC operation (cable included) or 6 x C/LR14 batteries (not included)
Color	Pink
Manufacturer	Lexibook
Country of Origin	China

WARRANTY AND CUSTOMER SUPPORT

Lexibook products are manufactured to high standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the contact information provided on the Lexibook official website or the product packaging. Keep your purchase receipt as proof of purchase.

You can visit the official Lexibook store for more information: [Lexibook Store on Amazon](#).



