

- Manuals.plus /
- › Arafuna /
- › Arafuna Mini DVD Player User Manual

Arafuna Mini DVD Player (B09FF1J8PG)

Arafuna Mini DVD Player User Manual

Model: Mini DVD Player (ASIN: B09FF1J8PG)

1. INTRODUCTION

Thank you for purchasing the Arafuna Mini DVD Player. This compact and versatile player is designed to provide high-quality audio and video playback from various media sources. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.



Figure 1.1: Arafuna Mini DVD Player

This image shows the Arafuna Mini DVD Player, highlighting its small form factor and the front display panel. The player is designed for portability and ease of use.

2. PACKAGE CONTENTS

Please check the package contents upon opening. If any items are missing or damaged, please contact customer support.

- Arafuna Mini DVD Player Unit
- Remote Control
- HDMI Cable
- USB Power Cable
- RCA AV Cable (Red/White/Yellow)
- User Manual (this document)



Figure 2.1: Included Accessories

This image displays the Arafuna Mini DVD Player along with its standard accessories, including the remote control, USB power cable, RCA AV cable, and HDMI cables, which are essential for setup and operation.

3. PRODUCT OVERVIEW

3.1 Front Panel

Display Screen: Shows playback status, time, and menu options.

Disc Tray: For inserting CDs and DVDs.

Power Button: Turns the player on/off.

Play/Pause Button: Starts or pauses playback.

Stop Button: Stops playback.

Previous/Next Buttons: Skips to previous/next track/chapter.

Volume Up/Down Buttons: Adjusts audio volume.

USB Port: For connecting USB flash drives.

TF Card Slot: For inserting TF (MicroSD) cards.

3.2 Rear Panel

HDMI Output: Connects to TVs or projectors for digital audio/video.

RCA AV Output: Connects to older TVs or audio systems using composite video and stereo audio.

Earphone Jack: For private listening with headphones.

Micro USB Power Input: For connecting the USB power cable.



Figure 3.1: USB and TF Card Input

This image highlights the USB port and TF (MicroSD) card slot on the Arafuna Mini DVD Player, indicating its capability to play media directly from these storage devices.

4. SETUP

4.1 Power Connection

1. Connect the supplied USB power cable to the Micro USB Power Input port on the player.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., a USB wall adapter, power bank, or car charger). The player supports 5V/2A USB power input.

TWO TYPES OF POWER SUPPLY MODE



Car Charge



Power Bank



Figure 4.1: Power Supply Options

This diagram illustrates the flexibility of the Arafuna Mini DVD Player's power supply, showing it can be powered by a car charger or a portable power bank, making it suitable for various environments.

4.2 Connecting to a Display Device (TV/Projector)

The Arafuna Mini DVD Player offers two primary connection methods:

4.2.1 HDMI Connection (Recommended for best quality)

1. Ensure both the DVD player and your TV/projector are turned off.
2. Connect one end of the HDMI cable to the HDMI Output port on the DVD player.
3. Connect the other end of the HDMI cable to an HDMI Input port on your TV/projector. Note the HDMI input number (e.g., HDMI 1, HDMI 2).
4. Turn on the TV/projector and select the corresponding HDMI input source.
5. Turn on the Arafuna Mini DVD Player. You should see the player's interface on your screen.

4.2.2 RCA AV Connection

1. Ensure both the DVD player and your TV are turned off.
2. Connect the yellow plug of the RCA AV cable to the yellow video output port on the player.
3. Connect the red and white plugs to the corresponding red (right audio) and white (left audio) output ports on the player.
4. Connect the other end of the RCA AV cable to the corresponding input ports on your TV (yellow for video, red for right audio, white for left audio).
5. Turn on the TV and select the AV input source.
6. Turn on the Arafuna Mini DVD Player. You should see the player's interface on your screen.



Figure 4.2: Two Connection Ways

This image visually explains the two primary ways to connect the Arafuna Mini DVD Player to a display: via HDMI for digital quality or RCA for analog compatibility, offering versatility for different TV setups.

5. OPERATING INSTRUCTIONS

5.1 Basic Playback

1. Ensure the player is connected to power and a display device.
2. Press the **POWER** button on the player or remote control to turn it on.
3. **For Disc Playback:** Gently insert a DVD or CD into the disc tray with the label side facing up. The player will automatically load and begin playback.
4. **For USB/TF Card Playback:** Insert a USB flash drive or TF card into the respective slot. The player will typically display a menu to select media files. Navigate using the remote control's arrow keys and press **OK** to select.
5. Use the **PLAY/PAUSE**, **STOP**, **PREV/NEXT**, and **VOL+/-** buttons on the player or remote control to manage playback.



Figure 5.1: Enjoying Media Playback

This image depicts a family enjoying content on a television, with the Arafuna Mini DVD Player connected and actively playing media, demonstrating its use in a home entertainment setting.

5.2 Remote Control Functions

The remote control provides full functionality for the DVD player. Key buttons include:

- **POWER:** Turns the player on/off.
- **SETUP:** Accesses the system settings menu.
- **TITLE/MENU:** Returns to the disc title or main menu.
- **SUBTITLE:** Toggles subtitle display.
- **AUDIO:** Switches audio tracks.
- **ZOOM:** Adjusts screen zoom level.
- **REPEAT:** Repeats current track/chapter/disc.
- **A-B:** Repeats a specific section.
- **GOTO:** Jumps to a specific time/chapter.
- **OSD:** Displays on-screen information.
- **Directional Buttons (Up/Down/Left/Right) & OK:** For menu navigation and selection.
- **Number Buttons (0-9):** For direct track/chapter selection.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Clean dirty discs with a soft, lint-free cloth wiping from the center outwards.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, high temperatures, and humidity.
- **Ventilation:** Ensure proper ventilation around the player. Do not block ventilation openings.
- **Power Off:** Always turn off the player and disconnect power when not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected properly; Power source faulty.	Check USB power cable connection. Try a different USB power source.
No picture/sound	Incorrect input selected on TV; HDMI/RCA cable loose or faulty; Disc dirty/scratched; Incorrect audio/video settings.	Select correct TV input (HDMI/AV). Reconnect cables. Clean or try another disc. Check player's audio/video settings.
Disc not playing	Disc inserted incorrectly; Disc format not supported; Disc dirty/damaged.	Insert disc label side up. Ensure disc is CD or DVD format. Clean or try another disc.
Remote control not working	Batteries low/dead; Obstruction between remote and player; Remote not pointed at sensor.	Replace batteries. Remove obstructions. Point remote directly at the player's front sensor.
USB/TF card not recognized	Card/drive not inserted correctly; Unsupported file format; Corrupted media.	Reinsert USB/TF card. Ensure files are supported (VOB, ISO, etc.). Try another USB/TF card.

8. SPECIFICATIONS

Feature	Detail
Brand	Arafuna

Feature	Detail
Model	Mini DVD Player (ASIN: B09FF1J8PG)
Compatible Devices	TV, Projector
Connectivity	HDMI, USB, RCA AV, Earphone Jack
Media Type	CD, DVD, USB Flash Drive, TF Card
Resolution	1920 x 1080 (1080P)
Supported File Formats	VOB, ISO (for video); other common audio/image formats via USB/TF card.
Supported Audio Formats	Dolby Digital, PCM
Audio Output Mode	Stereo
Total HDMI Ports	1
Power Input	Micro USB (5V/2A recommended)
Product Dimensions (L x W x H)	15.2 cm x 14 cm x 2.8 cm (approx. 6.0 in x 5.5 in x 1.1 in)
Product Weight	0.57 lbs (approx. 258 g)
Package Dimensions	16.8 x 15.6 x 7.6 cm
Package Weight	680 g

COMPACT MINI DESIGN

Easy to store and bring out



0.57 lb



Figure 8.1: Compact Mini Design with Dimensions

This image provides a visual representation of the Arafuna Mini DVD Player's compact size, showing its approximate dimensions (6.0 inches length, 5.5 inches width, 1.1 inches height) and weight (0.57 lbs), emphasizing its portability.

9. WARRANTY AND SUPPORT

Specific warranty information is not provided within this manual. For details regarding warranty coverage, technical support, or service inquiries, please refer to the manufacturer's official website or contact their customer service directly using the contact information provided with your purchase or on the product packaging.

Manufacturer: Arafuna

ASIN: B09FF1J8PG

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09FF1J8PG>

More documents and user manuals: <https://manuals.plus/>