

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AEG](#) /

› [AEG L7WEE852 Front-Load Washer Dryer Instruction Manual](#)

AEG L7WEE852

AEG L7WEE852 Front-Load Washer Dryer

Instruction Manual

[Overview](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The AEG L7WEE852 is a high-performance front-load washer dryer designed to efficiently clean and dry your laundry. It features advanced technologies to care for various fabric types, optimize energy consumption, and simplify your laundry routine.

Key Features:

- **DualSense Function:** Automatically adjusts temperature and drum movements to suit different fabric types, ensuring gentle yet effective care.
- **ProSense Function:** Weighs the laundry load to determine the optimal cycle time, water, and energy usage, preventing over-washing and protecting garments.
- **Quick 1H Program:** Provides a complete wash and dry cycle for small loads in just 60 minutes.
- **ProSteam Technology:** Utilizes steam to reduce wrinkles and refresh clothes, minimizing the need for ironing and full washes.
- **Inverter Motor:** Offers enhanced durability, superior energy efficiency, and quieter operation compared to conventional motors.
- **LCD Control Panel:** Features an intuitive interface for easy program selection and monitoring, including a quick program option under 59 minutes.
- **XL Door:** Designed for convenient loading and unloading of larger laundry items.



Figure 1: Front view of the AEG L7WEE852 Washer Dryer.

2. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your AEG L7WEE852 washer dryer. Please follow these guidelines carefully.

2.1 Unpacking and Positioning

- Remove all packaging materials, including the transport bolts located at the rear of the appliance. Keep the transport bolts for future transport.
- Place the appliance on a firm, level floor. Ensure there is adequate space around the unit for ventilation and access.
- Adjust the appliance's feet to ensure it is perfectly level. Use a spirit level to verify.

2.2 Water Connection

- Connect the cold water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- Do not use old hoses; always use the new hoses supplied with the appliance.

2.3 Drainage Connection

- Securely attach the drain hose to a standpipe or a sink trap. Ensure the hose is not kinked or obstructed.
- The drain hose should be positioned at a height between 60 cm and 100 cm from the floor.

2.4 Electrical Connection

- Plug the appliance into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate.
- Do not use extension cords or multiple adapters.

3. OPERATING INSTRUCTIONS

This section provides detailed instructions on how to operate your AEG L7WEE852 washer dryer for optimal washing and drying results.

3.1 Control Panel Overview



Figure 2: Detailed view of the LCD control panel and program selector.

The control panel features a central program selector knob, an LCD display, and touch buttons for various options such as temperature, spin speed, and special functions. Refer to the display for cycle information and status.

3.2 Loading Laundry

- Open the XL door and load your laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely.
- For best results, sort laundry by fabric type, color, and degree of soiling.



Figure 3: Example of a laundry load, demonstrating appropriate loading volume for efficient washing and drying.

3.3 Detergent Dispenser



Figure 4: The detergent dispenser with compartments for pre-wash, main wash, and fabric softener.

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment (II). If using liquid detergent, ensure the liquid detergent flap is in place.
- Add fabric softener to the compartment marked with a flower symbol. Do not exceed the MAX level.
- For programs with pre-wash, add detergent to compartment (I).

3.4 Program Selection and Start

- Turn the program selector knob to choose the desired wash program (e.g., Eco 40-60, Cotton, Synthetics, Delicates, Wool/Hand Wash, Outdoor, Anti-Allergy Vapour, Quick 20' Wash&Dry 60', Vapour, Rinse/Spin).
- The DualSense technology automatically adjusts the cycle based on the selected program and fabric type.
- Use the touch buttons to adjust temperature, spin speed, or select additional options like 'Quick', 'Delay Start', or 'Stain'.
- Press the 'Start/Pause' button to begin the cycle.

3.5 Drying Functions

- After a wash cycle, you can select a drying program. Options include 'Auto Dry' or 'Time Dry'.
- The ProSense function will optimize drying time based on the load size.
- For wrinkle reduction, consider using the 'Vapour' program or the ProSteam technology.



Figure 5: Garments refreshed and de-wrinkled using the ProSteam function.



Figure 6: Visual comparison demonstrating the effectiveness of steam in reducing fabric wrinkles.

Your browser does not support the video tag.

Video 1: Demonstrates AEG's DualSense technology, showing how it adapts washing and drying cycles for different fabrics like outdoor wear and wool, preserving their properties and ensuring optimal care. It highlights the Woolmark Blue certification for gentle wool care and the ability to restore impermeability in technical garments.

4. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your AEG L7WEE852 washer dryer.

4.1 Cleaning the Detergent Dispenser

- Periodically remove the detergent dispenser drawer by pressing the release lever.
- Rinse it under running water to remove any detergent residue. Use a brush if necessary.
- Clean the housing of the dispenser with a damp cloth.
- Reinsert the drawer until it clicks into place.

4.2 Cleaning the Drum

- Run a maintenance wash cycle (e.g., a hot wash with no laundry and a small amount of detergent or a specialized drum cleaner) once a month to prevent odors and residue buildup.
- Leave the door slightly ajar after each use to allow the drum to air dry and prevent mildew.



Figure 7: The stainless steel drum interior, designed for gentle fabric care.

4.3 Cleaning the Filter

- Locate the drain pump filter, usually at the bottom front of the appliance.
- Place a shallow container underneath to catch any residual water.
- Carefully unscrew and remove the filter. Clean any lint, debris, or foreign objects.
- Rinse the filter under running water and screw it back into place securely.

4.4 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- Clean the door seal regularly to remove any lint or residue.

5. TROUBLESHOOTING

Before contacting service, please refer to this troubleshooting guide for common issues you might encounter.

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power connection; Ensure door is fully closed; Select a program; Press Start/Pause.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and straighten drain hose; Clean the drain pump filter (refer to Maintenance section).
Excessive vibration/noise	Appliance not level; Transport bolts not removed; Uneven load.	Adjust feet to level the appliance; Remove transport bolts; Redistribute laundry in the drum.
Clothes not drying properly	Overloaded drum; Incorrect drying program selected; Lint filter clogged.	Reduce load size; Select appropriate drying level; Clean the lint filter.
Water leaks	Hose connections loose; Detergent dispenser clogged.	Tighten hose connections; Clean the detergent dispenser.

6. TECHNICAL SPECIFICATIONS

Detailed technical information for the AEG L7WEE852 washer dryer.

- **Model Number:** L7WEE852
- **Type:** Front-Load Washer Dryer
- **Wash Capacity:** 8 kg
- **Dry Capacity:** 5 kg
- **Maximum Spin Speed:** 1600 RPM
- **Motor Type:** Inverter Motor
- **Energy Efficiency Class (Wash/Dry Cycle):** E
- **Dimensions (W x H x D):** 597 mm x 847 mm x 551 mm
- **Product Weight:** 69.5 kg
- **Drum Material:** Stainless Steel
- **Voltage:** 230 Volts
- **Control Type:** Semi-automatic with LCD Display
- **Special Functions:** DualSense, ProSense, ProSteam, NonStop 60 min, Hand Wash Program, Anti-foam Rinse System, Softener Dispenser.

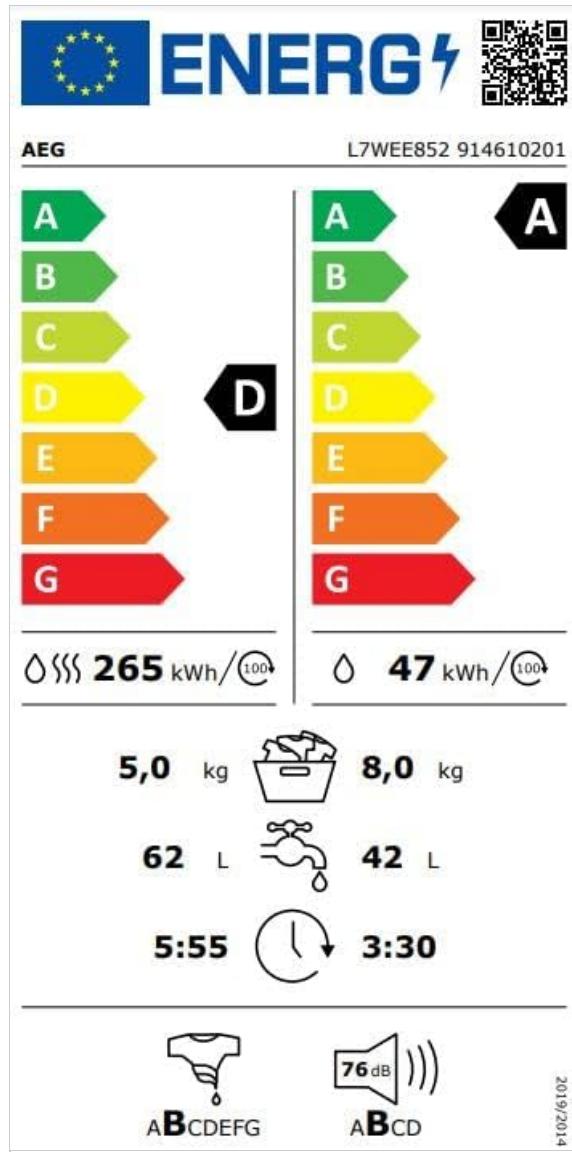


Figure 8: The energy label for the AEG L7WEE852, indicating its energy efficiency class and consumption details.

7. WARRANTY AND SUPPORT

Your AEG L7WEE852 washer dryer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

7.1 Customer Support

For technical assistance, spare parts, or warranty claims, please contact AEG customer support. You can find contact information in your product documentation or on the official AEG website.

When contacting support, please have your model number (L7WEE852) and serial number ready. The serial number is typically located on a label inside the appliance door or on the back of the unit.