

Manuals.plus /

› FDW /

› FDW 10x20 Outdoor Gazebo Wedding Party Tent Canopy Tent Instruction Manual

FDW 10x20 Outdoor Gazebo

FDW 10x20 Outdoor Gazebo Wedding Party Tent Canopy Tent Instruction Manual

Model: 10x20 Outdoor Gazebo | Brand: FDW

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your FDW 10x20 Outdoor Gazebo Wedding Party Tent. Designed for versatility and durability, this canopy tent offers shelter and a comfortable space for various outdoor events. Please read these instructions carefully before setup to ensure safe and correct usage.



Image 1: The FDW 10x20 Outdoor Gazebo Wedding Party Tent, fully assembled and ready for use in an outdoor setting.

2. IMPORTANT SAFETY INFORMATION

- **Fire Hazard:** The polyethylene fabric of this party tent is not fireproof. Keep away from all sources of fire and

extreme heat.

- **Weather Conditions:** Do not leave the gazebo up overnight or during adverse weather conditions such as strong winds (exceeding 5 MPH), heavy rain, snow, or hail. The manufacturer is not responsible for damages caused by weather.
- **Assembly:** Always assemble the tent with at least two people to ensure safety and proper construction. No additional tools are required beyond what is provided.
- **Anchoring:** Always use the provided ropes and stakes to securely anchor the tent to the ground to prevent it from being lifted or damaged by wind.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all components are present and undamaged:

- Powder-coated steel frame tubes (various lengths and connectors)
- Polyethylene canopy top (90g/sq.m, waterproof, 90% UV protection)
- 4 removable sidewalls with transparent windows
- Ropes for stability
- Stakes for ground anchoring

4. SETUP INSTRUCTIONS

4.1. Step 1: Assemble the Frame

Begin by laying out all frame components on a flat, clear surface. Connect the steel pipes according to the numbered instructions provided in the assembly diagram. Ensure all connections are securely fitted. The high-strength joint fittings are designed for easy and fast setup.

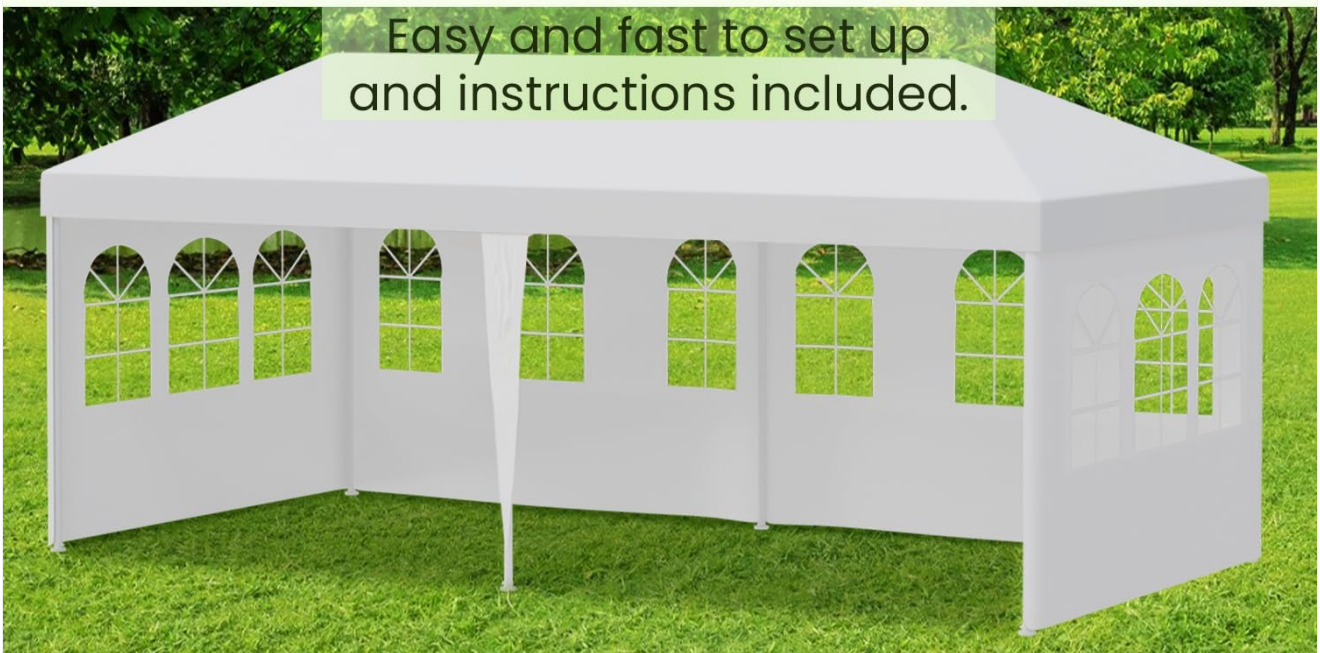


Image 2: Illustration showing the step-by-step assembly of the tent's steel frame, highlighting the connection points.

Video 1: A detailed video demonstrating the installation process for a party tent, including frame assembly.

4.2. Step 2: Attach the Canopy Top

Carefully drape the polyethylene canopy top over the assembled frame. Ensure it is centered and covers the entire frame. Secure the canopy to the frame using the integrated straps or ties. The canopy material is waterproof and provides 90% UV protection.

Weather Resistant

Polyethylene material can reflect harmful sun rays.



Image 3: The white polyethylene canopy top being installed over the tent frame, illustrating its weather-resistant properties.

4.3. Step 3: Install Sidewalls

Attach the four removable sidewalls to the tent frame. Each sidewall features transparent windows to allow light into the gazebo. Secure them using the Velcro tabs along the frame. The end panels include zippers for convenient entry and exit.

Large Space

Polyethylene material can reflect harmful sun rays.



3 tables can put.

Decorations can be installed.

Image 4: An interior view of the gazebo, showcasing the transparent sidewall windows that provide natural light.

4.4. Step 4: Secure the Tent

For added stability, especially in outdoor conditions, use the provided ropes and stakes to firmly anchor the tent to the ground. Ensure all anchor points are taut and secure to prevent movement.



Image 5: A close-up view of a ground stake and rope, demonstrating how to secure the tent for increased stability.

5. OPERATING THE GAZEBO

The FDW 10x20 Outdoor Gazebo is designed for flexible use. The four sidewalls are removable, allowing you to customize the tent's configuration based on your event needs and weather conditions. The end panels feature zippers, providing easy access and the option to create open entrances.



Image 6: The gazebo with some sidewalls removed or rolled up, illustrating its adaptability for different events and weather.

Video 2: A brief overview of the 10x20 Outdoor Gazebo, showcasing its features and overall appearance.

6. MAINTENANCE AND CARE

- **Cleaning:** Clean the polyethylene canopy and sidewalls with mild soap and water. Avoid harsh chemicals or abrasive cleaners that could damage the material. Allow all parts to dry completely before storage.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place away from direct sunlight to prolong its lifespan. The tent does not come with a carrying bag.
- **Inspection:** Regularly inspect the frame for any signs of rust or damage. Check the canopy and sidewalls for tears or wear. Replace damaged parts as needed.

7. TROUBLESHOOTING

- **Tent Instability:** Ensure all frame connections are tight and the tent is properly anchored with ropes and stakes. Avoid use in high winds.
- **Water Pooling on Roof:** Ensure the canopy is taut and properly secured to the frame to prevent water from collecting. Dislodge any accumulated water promptly.
- **Difficulty Assembling:** Refer to the assembly diagrams and ensure all pipes and connectors are correctly matched. Assembly is easier with two or more people.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	FDW
Model Number	10x20 Outdoor Gazebo
Product Dimensions	230"L x 115"W x 100"H (approx. 10'x20' footprint, 8.2' peak height)
Item Weight	25 Pounds
Frame Material	Alloy Steel, Plastic, Stainless Steel
Canopy Material	90g Polyethylene (PE) Fabric
Water Resistance Level	Waterproof
UV Protection	90%
Color	White
Sidewalls	4 removable, with windows
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact FDW customer service

through the retailer where the product was purchased. Keep your purchase receipt and product model number handy for faster service.