

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Stealth Cam](#) /

› [Stealth Cam SD Card Reader/Viewer Bundle: Instruction Manual for Model STC-CRV43XHD\\_K1](#)

### Stealth Cam STC-CRV43XHD\_K1

## Stealth Cam SD Card Reader/Viewer Bundle: Instruction Manual

Model: STC-CRV43XHD\_K1

### 1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Stealth Cam SD Card Reader/Viewer Bundle. This bundle is designed to enhance your ability to manage and review media from trail cameras efficiently. It includes a versatile SD Card Reader/Viewer, a durable SD Card Holder, multiple 32GB memory cards, and an all-in-one high-speed USB 2.0 card reader.



Figure 1: Complete Stealth Cam SD Card Reader/Viewer Bundle.

## 2. PRODUCT COMPONENTS

Your Stealth Cam SD Card Reader/Viewer Bundle includes the following items:

- **Stealth Cam SD Card Reader/Viewer:** Features a 4.3-inch color LCD screen with 5-point touch detection for viewing images and videos.
- **Stealth Cam HME SD Card Holder:** A protective case for storing your memory cards.
- **8 x 32GB Ultra UHS-I SDXC Memory Cards:** High-capacity memory cards for storing your media.
- **All-In-One High-Speed USB 2.0 Card Reader:** For connecting memory cards to a computer or other USB-compatible devices.

## 3. SETUP

### 3.1. Installing Batteries in the SD Card Reader/Viewer

The SD Card Reader/Viewer requires 4 AAA batteries (not included). To install:

1. Locate the battery compartment on the back of the device.
2. Open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

### **3.2. Inserting an SD Card into the Reader/Viewer**

To view media from an SD card:

1. Locate the SD card slot on the side of the Reader/Viewer.
2. Insert the SD card into the slot with the metal contacts facing down until it clicks into place.
3. To remove, gently push the SD card further in until it springs out.



Figure 2: Stealth Cam SD Card Reader/Viewer with its 4.3-inch LCD screen and control buttons.

### **3.3. Using the HME SD Card Holder**


The HME SD Card Holder is designed to protect your memory cards from damage and loss. It features individual slots for secure storage.



Figure 3: Stealth Cam HME SD Card Holder, designed for secure storage of multiple SD cards.

### 3.4. Using the All-In-One High-Speed USB 2.0 Card Reader

This compact USB card reader allows you to transfer data from your SD or microSD cards to a computer or other compatible device. Simply insert the memory card into the appropriate slot on the USB reader and plug the reader into a USB port on your computer.

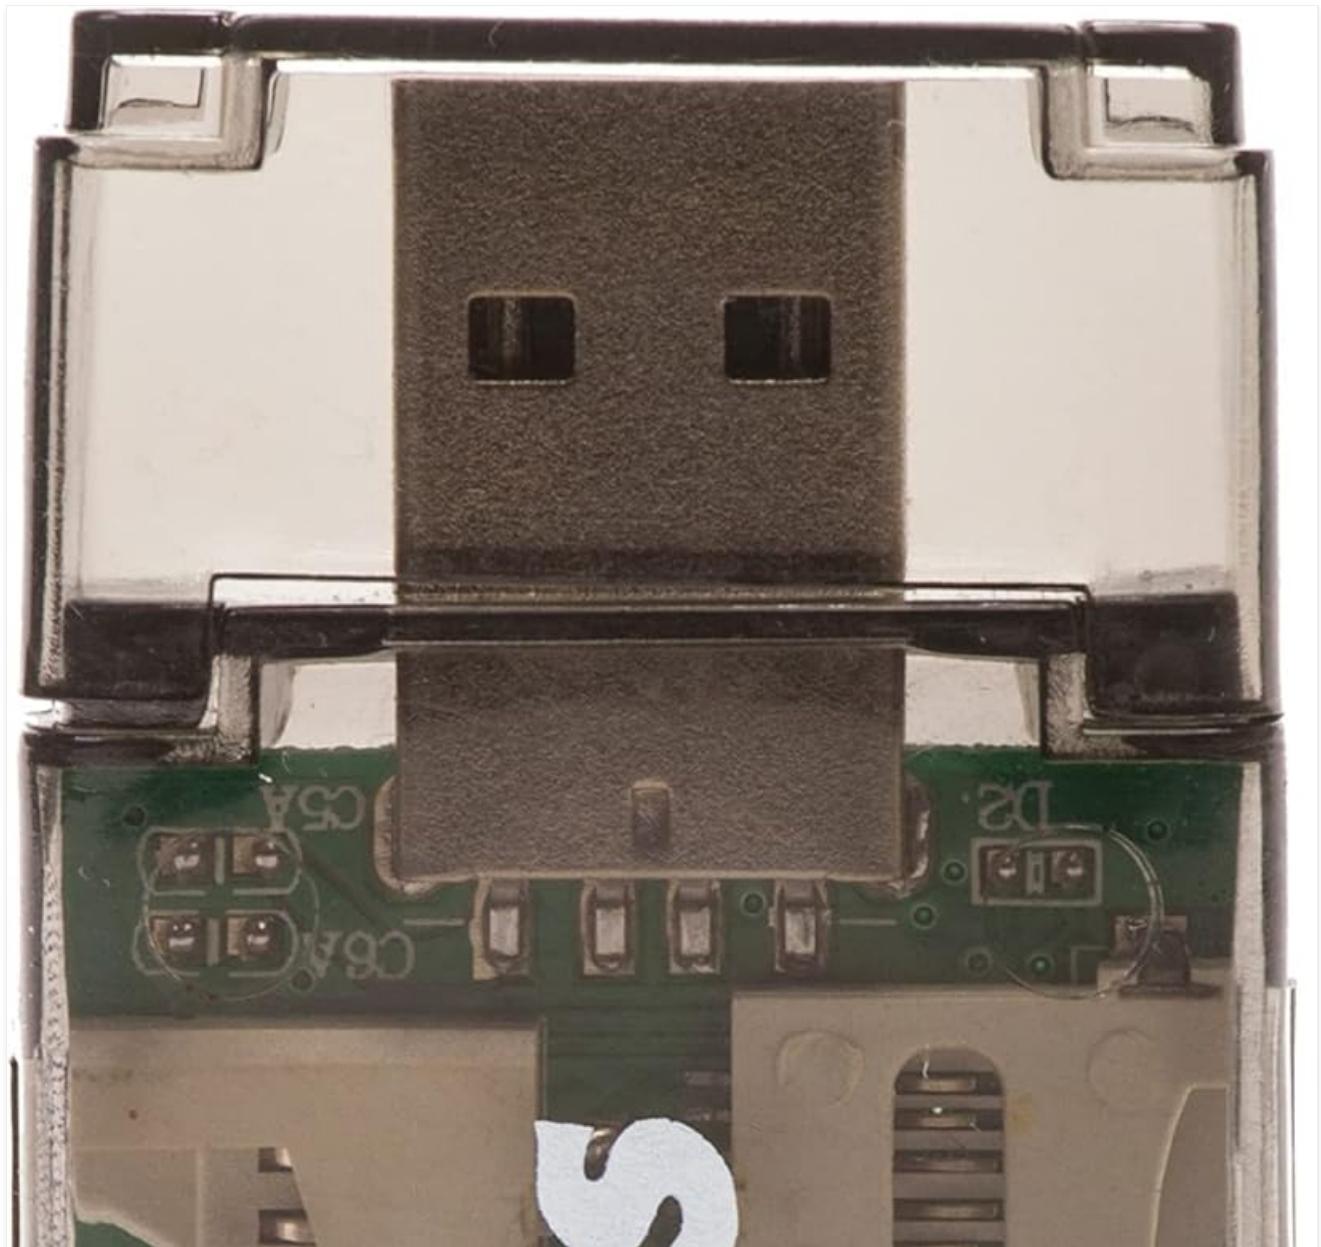

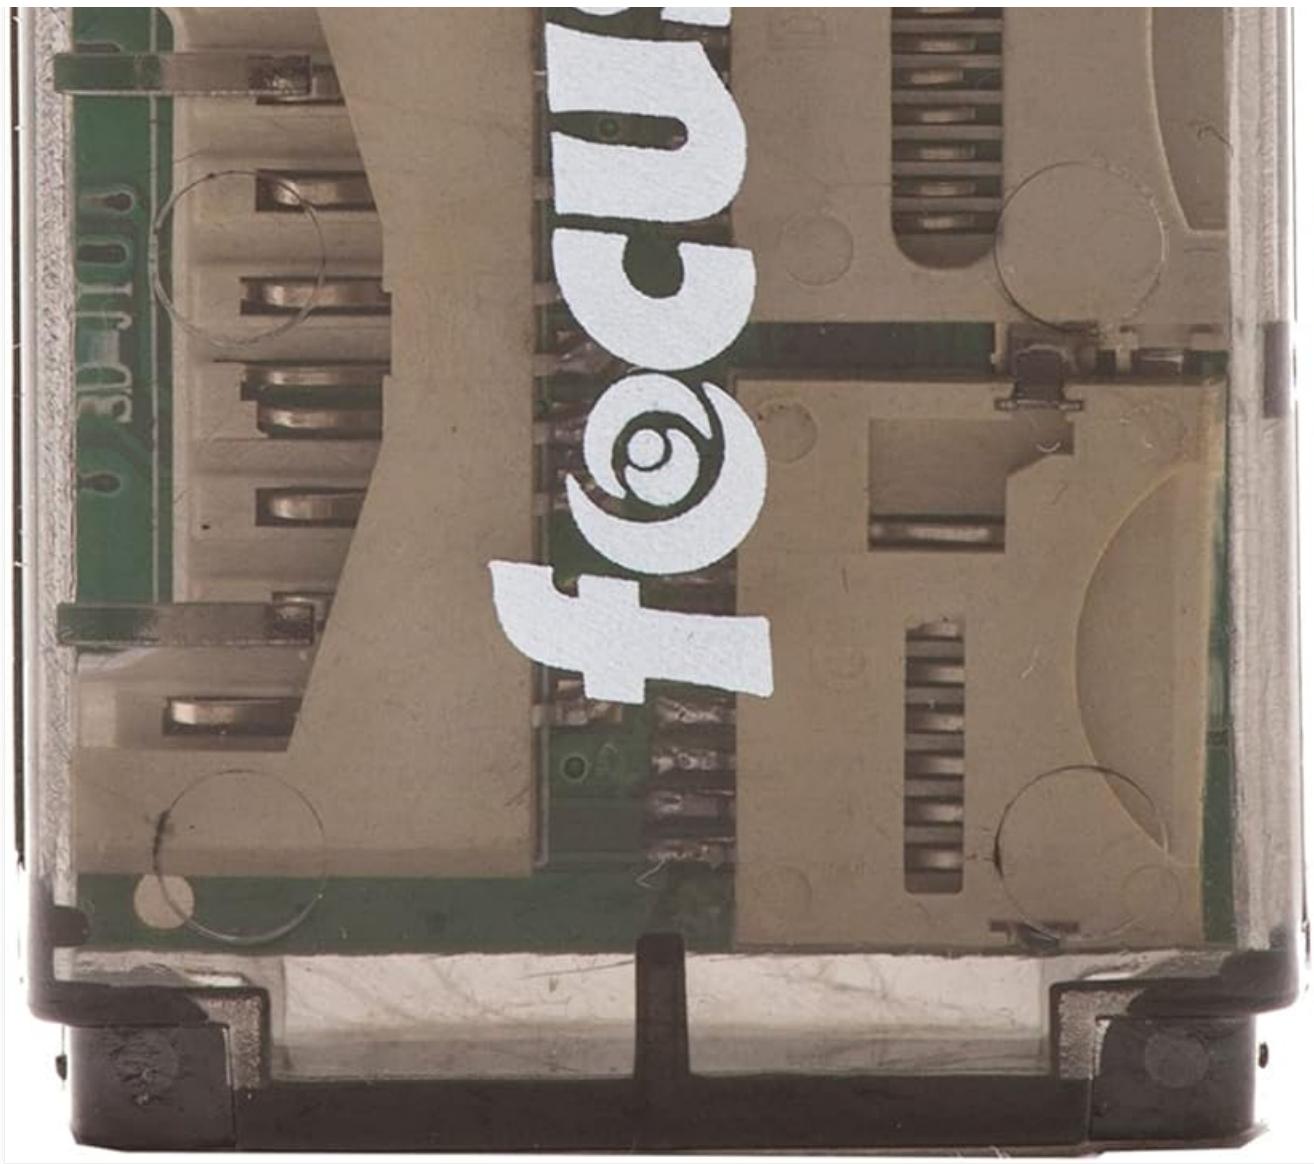


Figure 4: All-In-One High-Speed USB 2.0 Card Reader, compatible with various memory card types.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Powering On/Off

Press and hold the **POWER** button located on the side of the Reader/Viewer to turn the device on or off.

### 4.2. Navigating the Menu

The device features an intuitive menu operation with 5-point touch detection and smart gestures on its 4.3-inch color LCD screen. You can also use the physical navigation buttons (up, down, left, right, **OK**, **MENU**) to browse options.

### 4.3. Viewing Images and Videos

Once an SD card is inserted and the device is powered on, you can select the 'Video' or 'Photo' option from the main menu to browse your media files. Use the touch screen or arrow buttons to navigate through files.

### 4.4. Managing Images (View/Delete)

While viewing an image or video, options to view or delete files will be available through the on-screen menu or dedicated buttons. Follow the on-screen prompts to confirm any deletion actions.

### 4.5. Adjusting Settings

Access the 'Settings' menu to adjust various parameters, including:

- **Brightness:** Adjust screen brightness for optimal viewing in different lighting conditions.
- **Volume:** Control the audio output volume, especially when using the headphone jack.

## 4.6. Using the Headphone Jack

A headphone jack is provided for private audio playback of videos. Connect standard 3.5mm headphones to this port.

## 5. FEATURES

The Stealth Cam SD Card Reader/Viewer is equipped with several features for convenient media management:

- **1080p Video Playback:** Supports high-definition video playback for clear review of footage.
- **5-Point Touch Detection:** Advanced touch screen technology for responsive and accurate interaction.
- **4.3-Inch Color LCD Screen:** Provides a clear and vibrant display for your images and videos.
- **Intuitive Menu Operation:** User-friendly interface designed for easy navigation.
- **Durable Water-Resistant Housing:** Built to withstand outdoor conditions and protect against moisture.
- **Wrist Lanyard:** For secure carrying and to prevent accidental drops.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your Stealth Cam SD Card Reader/Viewer Bundle, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the Reader/Viewer. Avoid abrasive cleaners or solvents.
- **Storage:** Store the Reader/Viewer and memory cards in a cool, dry place away from direct sunlight and extreme temperatures. Use the provided HME SD Card Holder for memory card protection.
- **Battery Care:** Remove batteries if the device will not be used for an extended period to prevent leakage.
- **Water Resistance:** While the housing is water-resistant, avoid submerging the device in water. Ensure all ports and covers are securely closed when in damp environments.

## 7. TROUBLESHOOTING

If you encounter issues with your Stealth Cam SD Card Reader/Viewer, refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not power on.	Dead or incorrectly inserted batteries.	Replace batteries with fresh ones, ensuring correct polarity.
SD card not recognized.	Card not fully inserted, damaged card, or incompatible format.	Ensure card is fully inserted. Try a different, known-working SD card. Format the card if necessary (this will erase all data).
Screen is dim or difficult to see.	Brightness setting is too low or glare from ambient light.	Adjust screen brightness in the 'Settings' menu. Move to a shaded area to reduce glare.
No audio from videos.	Volume is too low or headphones are not connected properly.	Adjust volume in 'Settings' or using dedicated buttons. Ensure headphones are fully plugged in.


## 8. SPECIFICATIONS

Feature	Detail
Model Number	STC-CRV43XHD_K1
Display	4.3-inch Color LCD Touch Screen
Video Playback	1080p supported
Touch Detection	5-point
Power Source	4 x AAA Batteries (not included)
Media Type Support	SD Card, SDXC, UHS-1, microSD
Connectivity	USB 2.0 (for included card reader)
Audio Output	Headphone Jack
Housing	Durable, Water-Resistant
Item Weight	1 Pounds
Item Dimensions (LxWxH)	12 x 10.4 x 6.8 inches

## 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Stealth Cam website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

### Related Documents - STC-CRV43XHD\_K1

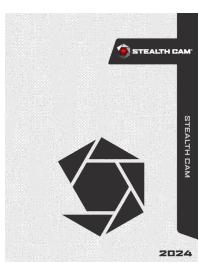	<p><a href="#">Stealth Cam 2024 Catalog: Cellular Trail Cameras &amp; Accessories</a></p> <p>Explore the latest Stealth Cam 2024 lineup of cellular trail cameras, featuring advanced AI subject tagging, on-demand viewing, and robust accessories for optimal outdoor surveillance and hunting.</p>
	<p><a href="#">Stealth Cam STC-G45NGX Instruction Manual</a></p> <p>Comprehensive instruction manual for the Stealth Cam STC-G45NGX digital scouting camera. Learn about camera overview, general information, programming modes (Quick Set, Custom), memory card usage, battery installation, file management, FAQs, FCC compliance, and warranty.</p>

 Version 1.0	<p><b><a href="#">Stealth Cam STC-I840IR User Manual and Guide</a></b></p> <p>User manual for the Stealth Cam STC-I840IR digital video scout camera. Learn about setup, features, programming, and troubleshooting for your trail camera.</p>
 Page 1	<p><b><a href="#">Stealth Cam STC-QS20 Instruction Manual</a></b></p> <p>Instruction manual for the Stealth Cam STC-QS20 digital scouting camera, covering setup, configuration, operation, care, and warranty information.</p>
 Page 1	<p><b><a href="#">Stealth Cam Fusion Instruction Manual: Setup, Features, and Support</a></b></p> <p>Comprehensive instruction manual for the Stealth Cam Fusion trail camera. Learn about setup, features like remote cellular connection and advanced lowlight sensitivity, camera configuration, and troubleshooting. Includes contact information and warranty details.</p>
 Page 1	<p><b><a href="#">Stealth Cam STC-BT14 Instruction Manual</a></b></p> <p>Comprehensive instruction manual for the Stealth Cam STC-BT14 digital scouting camera, covering setup, configuration, operation, care, and warranty information.</p>