

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cecotec](#) /
- › [Cecotec Conga Popstar 29600 Aqua&Collect Electric Mop User Manual](#)

Cecotec 05715

Cecotec Conga Popstar 29600 Aqua&Collect Electric Mop User Manual

Model: 05715 | Brand: Cecotec

1. PRODUCT OVERVIEW

The Cecotec Conga Popstar 29600 Aqua&Collect is a versatile 2-in-1 electric mop designed for efficient home cleaning. It combines vacuuming and mopping functionalities to tackle both solid and liquid dirt simultaneously. This cordless device offers significant autonomy and powerful cleaning performance for various hard floor surfaces.

- **Dual Functionality:** Vacuums and mops simultaneously or separately.
- **Powerful Performance:** 265 W motor with 7000 Pa suction power.
- **Extended Autonomy:** Up to 35 minutes of continuous operation.
- **Controlled Mopping:** Water spray function with adjustable flow.
- **Specialized Brush:** Wet Jalisco brush designed for effective dirt removal.
- **Convenient Tanks:** Independent clean (0.4 L) and dirty (0.35 L) water tanks for easy management.
- **Self-Cleaning Base:** Simplifies brush maintenance after use.



Image 1.1: The Cecotec Conga Popstar 29600 Aqua&Collect electric mop, ready for use.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Cecotec Conga Popstar 29600 Aqua&Collect Electric Mop
- 1 x Bi-material brush (Wet Jalisco brush)
- 1 x Self-cleaning base
- 1 x Battery charger
- 1 x User Manual (this document)

3. SETUP AND INITIAL USE

3.1 Assembly

Carefully remove all components from the packaging. Insert the handle into the main body of the electric mop until it clicks securely into place. Ensure the clean and dirty water tanks are correctly seated.

3.2 Charging the Battery

Before first use, fully charge the device. Place the electric mop on its self-cleaning base and connect the battery charger to a power outlet. The charging indicator light will show the charging status. A full charge provides up to 35 minutes of operating time.



Image 3.1: The electric mop placed on its self-cleaning base for charging or storage.

3.3 Filling the Clean Water Tank

Locate the clean water tank (0.4 L capacity). Open the cap and fill it with clean water. You may add a small amount of non-foaming floor cleaner suitable for electric mops. Close the cap securely.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the power button located on the handle to turn the device on or off.

4.2 Selecting Cleaning Mode

The Conga Popstar 29600 Aqua&Collect offers two cleaning modes: vacuuming only and simultaneous vacuuming and mopping. Use the mode selection button on the handle to switch between these functions as needed for solid or liquid spills.



Image 4.1: The electric mop effectively cleaning a combination of solid and liquid spills on a hard floor.

4.3 Mopping Function

When in mopping mode, press the water spray button on the handle to dispense water onto the floor. Adjust the amount of water released based on the level of dirt and the type of floor. The Wet Jalisco brush will scrub and clean the surface.



Image 4.2: Close-up view of the mop head cleaning a liquid spill, demonstrating the wet cleaning capability.

4.4 Vacuuming Function

For dry vacuuming, ensure the mopping function is off. Guide the device over the floor to pick up dust, crumbs, and other solid debris. The powerful suction will collect dirt into the dirty water tank.



Image 4.3: A user operating the electric mop on a hard floor, showcasing its maneuverability.

4.5 Parking and Storage

The device can stand upright independently for temporary pauses during cleaning. For storage, place it on the self-cleaning base.

5. MAINTENANCE

5.1 Emptying the Dirty Water Tank

After each use, or when the dirty water tank (0.35 L capacity) is full, remove it from the device and empty its contents. Rinse the tank with clean water and allow it to air dry before reattaching.

5.2 Self-Cleaning Function

Place the electric mop on its self-cleaning base. Ensure the clean water tank has sufficient water. Activate the self-

cleaning cycle as per the instructions on the device. This function helps remove excessive dirt from the brush.

5.3 Cleaning the Wet Jalisco Brush

Periodically remove the Wet Jalisco brush for thorough cleaning. Rinse it under running water to remove any trapped debris or hair. Allow the brush to dry completely before reinserting it into the device. Ensure the brush is free of odors by drying it properly.

5.4 Filter Maintenance

The device uses a high-efficiency filter. Regularly check and clean the filter to maintain optimal suction performance. Refer to the device's specific instructions for filter removal and cleaning.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is discharged.	Charge the battery fully.
Poor suction performance.	Dirty filter or clogged brush.	Clean or replace the filter. Remove debris from the brush.
Mop leaves streaks or dirty water.	Dirty water tank is full or brush is excessively dirty.	Empty and clean the dirty water tank. Run self-cleaning cycle or manually clean the brush.
Water not dispensing.	Clean water tank is empty or clogged nozzle.	Refill the clean water tank. Check for any blockages in the spray nozzle.

7. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	05715
Color	Black, Grey, Blue
Dimensions (L x W x H)	126 x 26.8 x 13.5 cm
Weight	3.45 kg
Power	265 W
Suction Power	7000 Pa
Operating Time	Up to 35 minutes

Feature	Detail
Special Features	2-in-1 Vertical Vacuum Cleaner, Mop, Water Spray, Self-cleaning Base
Filter Type	High-efficiency filter
Surface Recommendation	Hard floor
Power Source	Battery
Voltage	34.2 Volts
Clean Water Tank Capacity	0.4 L
Dirty Water Tank Capacity	0.35 L
Wireless	Yes

8. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 8.1: Official product demonstration of the Cecotec Conga Popstar 29600 Aqua&Collect, highlighting its vacuuming, mopping, and self-cleaning features.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Cecotec website. Keep your purchase receipt as proof of purchase for warranty claims. Cecotec is committed to providing high-quality products and customer satisfaction. For further assistance, please contact Cecotec customer service.