

ALLIMITY NH310UP

ALLIMITY NH310UP Replacement Remote Control User Manual

For Emerson UHD LED TV Models

INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY NH310UP replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various Emerson UHD LED TV models. It requires no programming and is ready for use upon battery installation.

Compatible Emerson TV Models include:

- LF501EM5F, LF320EM5F, LF391EM4A, LE320EM4, LF391EM4, LF401EM5, LF461EM4, LF501EM4, LF501EM6F, LF551EM5, LE290EM4F, LE320EM4F, LF391EM4F, LF402EM6F, LF501EM4F, LE240EM4, LE290EM4, LE391EM4, LF280EM5, LF320EM4, LF501EM5

SETUP AND BATTERY INSTALLATION

The ALLIMITY NH310UP remote control does not require any programming or pairing. Simply install the batteries, and it will be ready for immediate use with your compatible Emerson TV.

Installing Batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover open, illustrating the battery insertion points.

Note: Batteries are not included with the remote control. Always use new alkaline batteries for optimal performance.

OPERATING THE REMOTE CONTROL

The ALLIMITY NH310UP remote control provides standard functions for navigating your Emerson UHD LED TV. Point the remote directly at the TV's infrared sensor for best performance.



Image: Front view of the ALLIMITY NH310UP remote control, displaying the layout of all control buttons.

Key Functions:

- **Power Button (Red):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/- (Channel +/-):** Changes channels sequentially.
- **Mute Button (Speaker with X):** Mutes or unmutes the TV audio.
- **SOURCE:** Cycles through available input sources (HDMI, AV, etc.).
- **MENU:** Accesses the TV's main menu.
- **INFO:** Displays information about the current program or input.

- **BACK:** Returns to the previous screen or menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **PIC/SOUND MODE:** Adjusts picture or sound modes.
- **FREEZE:** Pauses the current image on screen.
- **SLEEP:** Sets a timer for the TV to turn off automatically.
- **PICTURE SIZE:** Adjusts the aspect ratio or picture size.
- **PREV.CH (Previous Channel):** Returns to the last viewed channel.
- **SAP (Secondary Audio Program):** Toggles between audio tracks, often used for different languages.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray liquids directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads.

Battery Replacement:

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both AAA batteries at the same time with new ones.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

If you experience issues with your ALLIMITY NH310UP remote control, please refer to the following common solutions:

- **Remote is not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are pointing the remote directly at the TV's sensor.
 - Verify that the TV itself is powered on and functioning.
- **Certain buttons are not working:**
 - This remote is a direct replacement and should function identically to the original. If specific buttons do not work, ensure your TV model is listed as compatible.
 - Clean the remote control, especially around the unresponsive buttons, to remove any debris that might be preventing contact.
- **Intermittent response:**
 - This often indicates low battery power. Replace the batteries.

- Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the TV's IR sensor.

If the issue persists after trying these steps, please refer to the Support section for further assistance.

SPECIFICATIONS

Model Number	NH310UP
Product Dimensions	6 x 2 x 0.6 inches (approximately)
Item Weight	2 ounces (approximately)
Batteries Required	2 x AAA Alkaline Batteries (not included)
Special Feature	No Programming Required
Compatible Devices	Emerson UHD LED Televisions (specific models listed in Introduction)
Max Number of Supported Devices	1 (This remote is a dedicated replacement for specific Emerson TV models.)

SUPPORT

For any questions, concerns, or further assistance regarding your ALLIMITY NH310UP remote control, please contact the seller or manufacturer directly. They will provide support to ensure your satisfaction. *(No specific warranty information was provided with the product details.)*