

Inder CM498

C idea CM498 Smart Tablet PC User Manual

Model: CM498 | Brand: Inder

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your C idea CM498 Smart Tablet PC. Please read this manual thoroughly before using your device to ensure proper functionality and longevity.

Package Contents

- Tablet device
- Charger & USB charging cable
- Ear Bluetooth and charging cable
- Touch pen
- Power bank
- OTG adapter
- 3D glass
- User manual
- Screen protector
- Silicon case cover
- Ring holder
- Smart band
- Warranty card

PRODUCT OVERVIEW

Front View



This image displays the front of the C idea CM498 tablet, featuring its 7-inch IPS HD display. The front-facing camera is visible at the top center, along with the earpiece. The screen shows a digital clock and date.

Rear View



This image shows the back of the C idea CM498 tablet. It highlights the dual camera setup located at the top, along with the "C idea" branding and "Made in China" text. Various regulatory marks and model information are also visible at the bottom.

SETUP

Charging the Tablet

Before first use, fully charge your tablet. Connect the provided USB charging cable to the tablet's charging port and the other end to the charger. Plug the charger into a power outlet. The battery indicator on the screen will show charging status.

Inserting SIM/SD Card

Locate the SIM/SD card slot on the side of the tablet. Carefully open the tray using the provided tool (if applicable) or by hand. Insert your Nano-SIM card(s) and/or microSD card into the designated slots, ensuring correct orientation. Close the tray securely.

Initial Power On

Press and hold the Power button located on the side of the tablet until the screen lights up. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

OPERATING INSTRUCTIONS

Basic Navigation

The tablet operates using touch gestures. Tap to select, swipe to scroll, pinch to zoom, and long-press for additional options. The navigation bar at the bottom of the screen typically includes **Back**, **Home**, and **Recent Apps** buttons.

Connecting to Wi-Fi

Go to **Settings > Wi-Fi**. Turn on Wi-Fi, then select your desired network from the list. Enter the password if prompted and tap **Connect**.

Bluetooth Pairing

Navigate to **Settings > Bluetooth**. Turn on Bluetooth. The tablet will scan for available devices. Select the device you wish to pair with from the list and follow any on-screen instructions to complete the pairing process.

Using the Camera

Open the Camera application. You can switch between the front and rear cameras. Tap the shutter button to take a photo or the video icon to record a video. Explore various modes and settings within the camera app.

Managing Storage

To check storage usage or manage files, go to **Settings > Storage**. You can view internal storage and SD card usage. Use a file manager app to organize, move, or delete files.

MAINTENANCE

Cleaning the Device

Use a soft, lint-free cloth to clean the tablet screen and body. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid using harsh chemicals or abrasive materials.

Battery Care

To prolong battery life, avoid extreme temperatures. Do not let the battery fully drain frequently. It is recommended to keep the battery charge between 20% and 80% for optimal longevity. Use only the provided charger.

Software Updates

Periodically check for software updates to ensure your tablet has the latest features and security patches. Go to **Settings > About tablet > System update** to check for and install available updates.

TROUBLESHOOTING

Common Issues and Solutions

- **Tablet not turning on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, try holding the Power button for 10-15 seconds for a forced restart.
- **Wi-Fi connection issues:** Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
- **Slow performance:** Close unused applications. Clear cache from apps. Restart the tablet. Consider performing a factory reset as a last resort (back up your data first).

- **Apps crashing:** Ensure apps are updated to their latest versions. Clear the app's cache and data in **Settings > Apps**. Reinstall the app if the issue persists.

SPECIFICATIONS

Feature	Detail
Brand	Inder
Model Name	C idea
Screen Size	7 Inches
Screen Resolution	1024x600
Operating System	Android 6 Marshmallow
RAM Size	3 GB
Memory Storage Capacity	64 GB
Processor Brand	MediaTek
Connectivity Type	Cellular
Rear Webcam Resolution	2 MP
Front Webcam Resolution	2 MP
Item Weight	820 g
Color	Blue-Brown
Date First Available	25 January 2022

WARRANTY AND SUPPORT

Your C idea CM498 Smart Tablet PC comes with a warranty. Please refer to the included Warranty Card in your package for specific terms, conditions, and duration of the warranty. Keep your proof of purchase for warranty claims.

For technical support or service inquiries, please contact the retailer or manufacturer's customer service channels as indicated on the warranty card or product packaging. Ensure you have your model number (CM498) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question