

Generic Onyx Studio

Instruction Manual: Replacement Legs for Harman Kardon Onyx Studio 1 & 2

Model: Onyx Studio | Brand: Generic

INTRODUCTION

This manual provides detailed instructions for the installation and maintenance of your new replacement legs for the Harman Kardon Onyx Studio 1 and 2 speakers. These legs are designed to restore stability and functionality to your speaker, ensuring it stands securely.

SAFETY INFORMATION

- Ensure the speaker is powered off and unplugged from any power source before beginning installation.
- Handle the speaker and replacement parts with care to avoid damage.
- Keep small parts, such as screws, out of reach of children.
- If you are unsure about any step, seek professional assistance.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 pair of Replacement Legs (2 individual legs)
- Screws for installation



Image: A pair of black, conical replacement legs, designed to support the Harman Kardon Onyx Studio speaker.

INSTALLATION

Follow these steps to install the replacement legs on your Harman Kardon Onyx Studio 1 or 2 speaker:

- 1. Prepare the Speaker:** Place your Harman Kardon Onyx Studio speaker on a soft, clean surface with the back panel facing upwards. Ensure it is stable and will not tip over during the process.
- 2. Remove Old Legs (if applicable):** If your speaker still has remnants of the old legs, carefully remove them. You may need a small screwdriver to remove any existing screws or adhesive. Clean the mounting area thoroughly.
- 3. Position New Legs:** Identify the mounting points on the back of your speaker. These are typically small circular indentations or pre-drilled holes where the original legs were attached. Align one replacement leg with its corresponding mounting point.
- 4. Secure the Legs:** Use the provided screws to secure each replacement leg firmly to the speaker. Do not overtighten the screws, as this could damage the speaker casing or the new legs. Ensure the legs are oriented correctly to provide stable support.
- 5. Repeat for Second Leg:** Repeat steps 3 and 4 for the second replacement leg.
- 6. Test Stability:** Once both legs are installed, gently place the speaker upright on a flat surface to test its stability. Ensure it stands firmly without wobbling.

Harman Kardon Onyx Studio Replacement Legs



Before



After



Image: A composite image showing the Harman Kardon Onyx Studio speaker with its original, damaged legs (labeled "Before") and the same speaker with the new, black replacement legs successfully installed (labeled "After").

MAINTENANCE

These replacement legs are designed for durability and require minimal maintenance:

- **Cleaning:** Wipe the legs with a soft, dry cloth to remove dust. For stubborn marks, a slightly damp cloth can be used, followed by drying. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check the screws to ensure they remain tight. If the speaker wobbles, gently tighten the screws.
- **Storage:** If removing the legs for storage, keep them in a cool, dry place away from direct sunlight to preserve the material.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker wobbles after installation.	Screws are not fully tightened or legs are not properly aligned.	Ensure screws are snug. Re-align legs if necessary and re-tighten.
Legs do not fit into mounting holes.	Incorrect speaker model or residual material in mounting holes.	Verify your speaker is an Onyx Studio 1 or 2. Clear any debris from the mounting holes. Do not force the legs.
Screws do not secure the legs.	Stripped screw holes or incorrect screw size.	Ensure you are using the provided screws. If holes are stripped, consider using a small amount of appropriate adhesive (e.g., super glue) as a last resort, but be aware this may be permanent.

SPECIFICATIONS

Compatibility: Harman Kardon Onyx Studio 1 & 2

Material: 3D Printed Biodegradable PLA Plastic

Color: Black

Included Components: 1 pair of legs, Screws

WARRANTY AND SUPPORT

For any questions regarding the installation or performance of your replacement legs, please contact the seller or manufacturer directly through the platform where the purchase was made. Please retain your proof of purchase for any warranty claims, if applicable. Specific warranty terms may vary by seller.