

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MYDASH](#) /

› [MYDASH PD102 Portable DVD Player Instruction Manual](#)

MYDASH PD102

MYDASH PD102 Portable DVD Player Instruction Manual

Model: PD102 | Brand: MYDASH

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your MYDASH PD102 Portable DVD Player. Designed for versatile entertainment, this device features a 12.5-inch HD swivel screen, a long-lasting rechargeable battery, and support for various media formats. It is ideal for use at home, during travel, or in your car.

WHAT'S IN THE BOX

- MYDASH PD102 Portable DVD Player
- Remote Control
- AV Cable (3.5mm to RCA)
- Car Charger (12V)
- AC Power Adapter (Wall Charger)
- Car Headrest Mount

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your portable DVD player.



The MYDASH PD102 portable DVD player shown open, displaying its 12.5-inch screen and the included remote control. The player features a sleek, dark gray finish.

Controls and Ports

Thin and light body design

Perfect appearance design and support multiple functional interfaces



A detailed view of the side of the MYDASH PD102 portable DVD player, highlighting its connectivity options. From left to right, the ports include USB, SD Card slot, Headphone Jack (3.5mm), AV-OUT, DC-IN power input, an ON/OFF switch, and AV-IN.

- **Volume Controls:** VOL+ / VOL- buttons to adjust audio output.
- **Playback Controls:** PLAY/PAUSE, STOP buttons for media control.
- **Navigation:** Directional pad (Up, Down, Left, Right) and ENTER button for menu navigation.
- **Mode Selection:** MODE button to switch between DVD, USB, and SD card inputs.
- **USB/Card Slot:** For connecting USB drives and SD cards.
- **Headphone Jack:** 3.5mm port for private listening.
- **AV-OUT:** Audio/Video output for connecting to external displays.
- **AV-IN:** Audio/Video input for connecting external devices.
- **DC-IN:** Power input for AC adapter or car charger.
- **ON/OFF Switch:** Power switch located on the side of the device.

1. Charging the Battery

Before first use, fully charge the portable DVD player. Connect the AC Power Adapter to the DC-IN port and plug it into a wall outlet. The charging indicator light will show the charging status. For car use, connect the Car Charger to the DC-IN port and your vehicle's 12V cigarette lighter socket.

2. Inserting a Disc

1. Gently press the OPEN button on the disc compartment to open it.
2. Place the DVD or CD onto the spindle with the label side facing up.
3. Press down gently on the center of the disc until it clicks into place.
4. Close the disc compartment firmly.

3. Power On/Off

Slide the ON/OFF switch located on the side of the player to the 'ON' position to power on the device. Slide it to 'OFF' to power off.

OPERATING INSTRUCTIONS

Basic Playback

- **Play/Pause:** Press the **PLAY/PAUSE** button to start or pause playback.
- **Stop:** Press the **STOP** button to end playback.
- **Volume:** Use the **VOL+** and **VOL-** buttons to adjust the volume.
- **Mute:** Press the **MUTE** button to silence the audio.

Screen Rotation

The 12.5-inch screen can swivel up to 270 degrees and flip 180 degrees, allowing for optimal viewing angles in various settings.

BREAK POINT FUNCTION

MEMORIZE THE LAST PLAYBACK



This image illustrates the versatile screen rotation capabilities of the MYDASH PD102. The 12.5-inch screen can swivel up to 270 degrees and flip 180 degrees, allowing for multiple viewing angles and compact storage.

Break Point Memory Function

The player features a break point memory function. If you stop a DVD and re-insert it later, the player will resume playback from where you left off.

Media Playback (USB/SD Card)

1. Insert a USB drive or SD card into the corresponding slot.
2. Press the **MODE** or **USB/CARD** button to select the desired input source.
3. Use the navigation buttons to browse files and press **ENTER** to select and play.

CAR INSTALLATION

The MYDASH PD102 comes with a headrest mount for convenient in-car entertainment.

Memory Function



The MYDASH PD102 portable DVD player is shown installed on the back of a car seat headrest using its dedicated mount. This setup provides entertainment for rear-seat passengers, ideal for road trips.

1. Slide the DVD player into the headrest mount. Ensure it is securely fitted.
2. Attach the headrest mount to the back of a car seat headrest using the adjustable straps.
3. Connect the Car Charger to the DC-IN port of the player and your car's 12V power outlet to ensure continuous power during long drives.

CONNECTING TO A TELEVISION

You can connect your MYDASH PD102 to a larger TV screen using the included AV cable.

Support multi-angle rotation



The MYDASH PD102 portable DVD player is connected to a larger television screen using the included AV cables, demonstrating its ability to output video and audio to external displays for a home theater experience.

1. Connect the 3.5mm end of the AV cable to the AV-OUT port on the DVD player.
2. Connect the RCA (red, white, yellow) ends of the AV cable to the corresponding AV-IN ports on your television.
3. Select the correct AV input source on your television to view the player's output.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your DVD player.

Cleaning the Laser Lens

If you experience issues with disc reading, the laser lens may need cleaning. Use a specialized DVD lens cleaning kit or follow the steps below:

Video demonstrating how to clean the laser lens of the MYDASH portable DVD player to resolve disc reading issues.

1. Power off the device and disconnect it from any power source.
2. Open the disc compartment.
3. Gently wipe the laser lens with a soft, lint-free cloth, slightly dampened with lens cleaning solution if necessary. Avoid excessive pressure.
4. Allow the lens to dry completely before closing the compartment and powering on the device.

TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

- **No Disc / Disc Unreadable:**
 - Ensure the disc is clean and free of scratches or smudges.
 - Verify the disc is inserted correctly with the label side facing up.
 - Clean the laser lens as described in the Maintenance section.
 - Confirm the disc format is supported (CD, DVD, CD-R, DVD-RW, SD, SVCD, VCD). Blu-ray discs are not supported.
- **Battery Not Charging:**
 - Check if the AC adapter or car charger is securely connected to both the player and the power source.
 - Ensure the power outlet or car's 12V socket is functional.
 - If the player has not been used for a long time, the battery may require a longer initial charge.
- **No Picture on TV:**
 - Ensure the AV cable is correctly connected to both the player's AV-OUT and the TV's AV-IN ports.
 - Select the correct AV input source on your television.

SPECIFICATIONS

Model Number	PD102
Product Dimensions	11.65 x 8.19 x 1.77 inches
Item Weight	4.11 pounds
Screen Size	12.5 Inches
Display Type	LCD
Batteries	1 Lithium Polymer battery required
Supported Media Types	CD-R, DVD-RW, SD, SVCD, VCD, USB files
Supported Video Formats	AVI, MPG, MP4, VOB, FLV, RMVB (Resolution up to 720x576)
Supported Audio Formats	MP3, WMA, OGG, AAC (Bit rates 32-192kbps)

WARRANTY AND SUPPORT

MYDASH is committed to providing quality products and customer satisfaction.

- **365 Days Technology Support:** For any technical assistance, please contact MYDASH customer service.
- **30 Days Return Service:** Products are eligible for return within 30 days of purchase.

For further assistance or warranty claims, please refer to the contact information provided with your product packaging or visit the official MYDASH website.

© 2025 MYDASH. All rights reserved.