

Philips HR1922/21 Juicer Instruction Manual

1. IMPORTANT SAFETY INFORMATION

Read this instruction manual carefully before using the appliance and save it for future reference. Incorrect use can lead to potential hazards.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not use the appliance if the plug, mains cord, or other parts are damaged.
- **Sharp Blades:** The filter mesh has small, sharp blades. Handle with extreme care when cleaning.
- **Proper Assembly:** Always ensure all parts are correctly assembled before operating the juicer. Do not operate the appliance without the lid securely locked.
- **Food Pusher:** Always use the food pusher to guide ingredients into the feeding tube. Never use your fingers or other objects.
- **Overheating Protection:** The appliance is equipped with an overheating protection system. If it overheats, it will switch off automatically. Unplug and let it cool down for 15 minutes before restarting.
- **Cleaning:** Always unplug the appliance before cleaning. Do not immerse the motor unit in water or any other liquid.
- **Children:** This appliance should not be used by children. Keep the appliance and its cord out of reach of children.

2. PRODUCT OVERVIEW

The Philips HR1922/21 is a powerful centrifugal juicer designed for efficient extraction of juice from various fruits and vegetables. Its robust design and easy-to-use features make it suitable for daily use.



Figure 1: The Philips HR1922/21 Juicer fully assembled, showcasing its sleek stainless steel and transparent components.

Components:

- **Motor Unit:** The base of the juicer containing the motor and control dial.
- **Pulp Container:** Collects the discarded pulp during juicing.
- **Juice Collector:** Gathers the extracted juice.
- **Filter/Sieve:** Separates juice from pulp. Contains sharp blades.
- **Lid with Feeding Tube:** Covers the juicing mechanism and allows insertion of ingredients.
- **Food Pusher:** Used to push ingredients down the feeding tube.
- **Spout:** For dispensing juice into a glass or jug.





Figure 2: Side view illustrating the various components of the juicer, including the motor unit, pulp container, and juice collector.

3. SETUP AND ASSEMBLY

Before first use, wash all detachable parts (pulp container, juice collector, filter, lid, food pusher) in warm soapy water. Rinse thoroughly and dry.

1. Place the motor unit on a stable, flat, and dry surface.
2. Insert the pulp container into the motor unit.
3. Place the juice collector onto the motor unit, ensuring the spout aligns with the opening.
4. Carefully place the filter into the juice collector, ensuring it is seated firmly.
5. Place the lid onto the juice collector and pulp container. Ensure the locking clamps on the sides of the motor unit engage with the lid. You should hear a click.
6. Insert the food pusher into the feeding tube of the lid.
7. Place a glass or jug under the spout to collect the juice.

4. OPERATING INSTRUCTIONS

Follow these steps for safe and effective juicing:

1. **Prepare Ingredients:** Wash fruits and vegetables thoroughly. For larger items, cut them into pieces that fit into the feeding tube. Remove hard pits (e.g., from peaches, plums, cherries) and hard skins (e.g., from pineapples, melons, citrus fruits).
2. **Connect Power:** Plug the appliance into a grounded wall socket.
3. **Select Speed:** Turn the control dial to the desired speed setting. The juicer has two speed settings:
 - **Speed 1 (low):** For soft fruits and vegetables like berries, grapes, tomatoes, and cucumbers.
 - **Speed 2 (high):** For hard fruits and vegetables like apples, carrots, celery, and beetroot.



Figure 3: A hand adjusting the speed dial, which offers two settings for different types of produce.

4. **Insert Ingredients:** With the motor running, gradually feed the prepared ingredients into the feeding tube using the food pusher. Apply gentle, even pressure. Do not overfill the feeding tube or apply excessive force.



Figure 4: An apple being inserted into the wide feeding tube, demonstrating the ease of use for whole or large pieces of fruit.

5. **Monitor Pulp and Juice:** The pulp will collect in the pulp container, and the juice will flow into your glass or jug. The juicer has a 1.5-liter capacity for juice collection. Stop juicing if the pulp container becomes full or the juice flow significantly reduces.



Figure 5: The pulp container showing collected carrot pulp, indicating efficient separation of solids from juice.

6. **Finish Juicing:** Once finished, turn the control dial to the '0' (off) position and unplug the appliance.



Figure 6: The juicer in operation, with two glasses of freshly extracted juice (carrot and green apple) ready for consumption.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your juicer. Always clean the appliance immediately after use.

- 1. Unplug:** Always unplug the juicer from the power outlet before disassembling or cleaning.
- 2. Disassemble:** Unlock the clamps, remove the lid, then lift out the filter, juice collector, and pulp container.
- 3. Clean Detachable Parts:** Wash the pulp container, juice collector, lid, and food pusher in warm water with a mild dishwashing liquid. Rinse thoroughly.
- 4. Clean the Filter:** The filter mesh contains sharp blades. Use a cleaning brush (if provided) or a soft brush to carefully remove pulp residue from the mesh under running water. Handle with extreme caution. The manufacturer recommends **hand washing only** for this part.



Figure 7: A person carefully cleaning the stainless steel filter under running water, highlighting the importance of thorough cleaning for optimal performance.

5. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or rinse it under the tap.
6. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing the appliance. Store in a dry place.

6. TROUBLESHOOTING

If you encounter problems with your juicer, consult the following table before seeking service.

Problem	Possible Cause	Solution
Appliance does not work.	The appliance is not plugged in. The lid is not properly locked. Overheating protection activated.	Plug in the appliance. Ensure the lid is securely locked. Unplug and let cool for 15 minutes.
Motor stops during operation.	Too much pressure applied to the food pusher. Too many ingredients processed without emptying pulp container.	Reduce pressure. Turn off, unplug, empty pulp container, and clean filter.
Excessive vibration or noise.	Filter is clogged or incorrectly assembled. Appliance is not on a stable surface.	Turn off, unplug, clean and reassemble the filter correctly. Place on a stable surface.
Low juice yield or wet pulp.	Filter is clogged. Incorrect speed setting for ingredients.	Clean the filter thoroughly. Use the appropriate speed setting (Speed 2 for hard ingredients).

7. SPECIFICATIONS

- **Model Number:** HR1922/21
- **Brand:** PHILIPS
- **Power:** 1200 Watts
- **Voltage:** 120 Volts
- **Juice Capacity:** 1.5 Liters
- **Material:** Stainless Steel
- **Product Dimensions (L x W x H):** 29.6P x 25I x 43.2H centimeters
- **Item Weight:** 4.7 Kilograms
- **Care Instructions:** Hand wash only (for certain parts like the filter)

8. WARRANTY AND SUPPORT

This Philips appliance is covered by a warranty valid from the date of purchase. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Philips website.

For technical assistance, spare parts, or repair services, please contact Philips customer support in your region. Ensure you have your model number (HR1922/21) and proof of purchase available when contacting support.