

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TECLAST](#) /

› [TECLAST Mini PC N10 User Manual](#)

TECLAST N10

TECLAST Mini PC N10 User Manual

Model: N10

1. OVERVIEW

The TECLAST Mini PC N10 is a compact and portable desktop computer designed for various applications, including office work, home theater, and educational use. It features an Intel Celeron N4000 processor, 6GB DDR4 RAM, and a 128GB M.2 SSD, offering efficient performance for daily tasks. Its small form factor and comprehensive connectivity options make it a versatile solution for users seeking a powerful yet space-saving computing device.



Image 1.1: The TECLAST Mini PC N10, showcasing its compact design and various ports, including the VGA port on the side.

2. PRODUCT FEATURES

2.1 Performance

The N10 Mini PC is equipped with an Intel Celeron N4000 processor (up to 2.6GHz), 6GB of LPDDR4 memory, and

a 128GB M.2 SSD. This configuration provides efficient multitasking capabilities and quick access to files, suitable for light office work, web browsing, and media playback.

Performance

The TECLAST N10 is equipped with an efficient 6GB of LPDDR4 memory with enhanced multitasking capabilities to meet the needs of most home users. It also comes with 128GB of high-speed storage, giving you plenty of space and quick access to your important files and programmes. In addition, for those who need more storage space, it supports SATA protocol for SSD expansion with 2242 length M.2 interface (not included), making SSD upgrades simple and efficient.



6GB LPDDR4
RAM

128GB
Storage

M.2 SSD
Expansion(not included)

Image 2.1: Visual representation of the TECLAST N10's performance specifications, highlighting 6GB LPDDR4 RAM, 128GB internal storage, and support for M.2 SSD expansion.

2.2 Connectivity

The device offers a wide range of integrated ports and wireless options for versatile connectivity:

- **Video Output:** HDMI x 1, VGA x 1, supporting dual display output and 4K@60Hz resolution via HDMI.
- **USB Ports:** 3 x USB 3.2 GEN1 (5Gbps) for high-speed data transfer.
- **Network:** 1 x 1000Mbps RJ45 Ethernet port for stable wired internet.
- **Wireless:** Dual-band WiFi (2.4G/5G) for fast wireless internet and Bluetooth 5.0 for peripheral connections.
- **Audio:** 3.5mm Headphone Output.
- **Storage Expansion:** TF (MicroSD) port for memory cards.

Design

**Slim. Sturdy.
Smart.**



0.36L

Compact Design



200g

Lightweight

The Teclast N10 Mini PC, at 120mm x 120mm x 24mm and 200g, combines ultra-compact design with a high-performing 2.6GHz Intel CPU, delivering power in a pocket-sized package. Its compact size and light build make it an excellent choice for on-the-go productivity and entertainment, delivering powerful capabilities in a pocket-sized package.

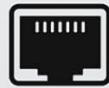


Image 2.2: Overview of the TECLAST N10's connectivity features, including wireless standards and wired ports.



2.4G + 5G

Ac Wireless



1000Mbps

RJ45 Ethernet Port



BT 4.2

Power Efficient Transmission



Image 2.3: Illustration of the TECLAST N10's dual display capability using both HDMI and VGA ports simultaneously.

2.3 Compact Design

Measuring 11.9 x 0.24 x 11.9 cm and weighing 641 g, the N10 is highly portable. Its compact size allows for easy placement in various environments, and it supports VESA mounting for a clean desktop setup.

Application Scenarios



Education



Meeting



Office



Home Theater

Image 2.4: Visual representation of the TECLAST N10's compact dimensions and lightweight design.

2.4 Effortless Expansion

The N10 includes a TF (MicroSD) expansion port for convenient access to photos and videos, eliminating the need for an external card reader. It also supports SSD replacement for increased storage capacity.

Effortless Expansion

With an integrated TF(MicroSD) expansion port and a 3.5mm Headphone Output, easily access photos and videos, enjoying multimedia entertainment anytime, anywhere.



Peace of Mind Assurance

Combined with surveillance cameras, remotely monitor the status of pets, infants, and elderly individuals, providing you with an additional peace of mind.

Image 2.5: The TECLAST N10 Mini PC demonstrating its expansion capabilities, including the TF(MicroSD) slot and headphone output.

3. SETUP GUIDE

3.1 Unpacking

1. Carefully remove the Mini PC and all accessories from the packaging.
2. Verify that all components are present: TECLAST N10 Mini PC, Power Adapter, User Manual.

3.2 Connecting Peripherals

Before powering on, connect your essential peripherals:

- **Monitor:** Connect your monitor to the Mini PC using either the HDMI or VGA port. For dual display, connect two monitors to both ports.
- **Keyboard & Mouse:** Connect your USB keyboard and mouse to the available USB 3.2 ports.
- **Network (Optional):** For a wired internet connection, connect an Ethernet cable from your router/modem to the RJ45 LAN port on the Mini PC.

- **Audio (Optional):** Connect headphones or speakers to the 3.5mm audio output jack.

Design

**Slim. Sturdy.
Smart.**



0.36L

Compact Design



200g

Lightweight

The Teclast N10 Mini PC, at 120mm x 120mm x 24mm and 200g, combines ultra-compact design with a high-performing 2.6GHz Intel CPU, delivering power in a pocket-sized package. Its compact size and light build make it an excellent choice for on-the-go productivity and entertainment, delivering powerful capabilities in a pocket-sized package.



Image 3.1: The TECLAST N10 Mini PC's top and side views, illustrating the location of USB ports, power button, VGA port, and other connections.

3.3 Powering On

1. Connect the power adapter to the DC-in port on the Mini PC.
2. Plug the power adapter into a wall outlet.
3. Press the power button located on the top right side of the Mini PC. The power indicator light will illuminate.
4. The system will boot up, and you will see the operating system (Windows 11 Pro) loading on your connected display.

4. OPERATING INSTRUCTIONS

4.1 Operating System

The TECLAST N10 Mini PC comes pre-installed with Windows 11 Pro. Follow the on-screen instructions for initial

setup, including language selection, network connection, and user account creation.

4.2 Dual Display Configuration

To utilize the dual display feature:

1. Connect your primary monitor to the HDMI port and your secondary monitor to the VGA port.
2. Once both monitors are connected and powered on, Windows should automatically detect them.
3. To configure display settings (extend, duplicate, or show only on one display), right-click on the desktop, select "Display settings," and adjust as needed.



Image 4.1: Diagram illustrating how to connect two monitors to the TECLAST N10 using HDMI and VGA for a dual display setup.

4.3 Storage Management

The Mini PC includes a 128GB M.2 SSD for primary storage. For additional storage, you can:

- Insert a TF (MicroSD) card into the dedicated slot.
- Connect external USB storage devices to the USB 3.2 ports.
- The M.2 interface supports SSD replacement for creating more storage space. Refer to the official TECLAST

support for detailed upgrade instructions.

4.4 Wireless and Wired Network Setup

Wireless (Wi-Fi):

1. Click the Wi-Fi icon in the system tray (bottom right corner of the screen).
2. Select your desired Wi-Fi network from the list.
3. Enter the network password and click "Connect."

Wired (Ethernet):

1. Connect an Ethernet cable from your router/modem to the RJ45 LAN port on the Mini PC.
2. The system will automatically detect the wired connection and establish internet access.

Bluetooth:

1. Go to Windows Settings > Bluetooth & devices.
2. Ensure Bluetooth is turned on.
3. Click "Add device" and select "Bluetooth" to pair with your Bluetooth peripherals.

Design

**Slim. Sturdy.
Smart.**



0.36L

Compact Design



200g

Lightweight

The Teclast N10 Mini PC, at 120mm x 120mm x 24mm and 200g, combines ultra-compact design with a high-performing 2.6GHz Intel CPU, delivering power in a pocket-sized package. Its compact size and light build make it an excellent choice for on-the-go productivity and entertainment, delivering powerful capabilities in a pocket-sized package.



Image 4.2: The TECLAST N10 Mini PC demonstrating its support for 2.4G+5G AC wireless, 1000Mbps RJ45 Ethernet, and Bluetooth 4.2 for various connectivity needs.

5. MAINTENANCE

5.1 Cleaning

- Regularly clean the exterior of the Mini PC with a soft, dry, lint-free cloth.
- Do not use liquid cleaners or aerosol sprays directly on the device.
- Use compressed air to gently clear dust from ventilation openings.

5.2 Ventilation

- Ensure the Mini PC is placed in a well-ventilated area.
- Do not block the ventilation holes on the device.
- Avoid placing the Mini PC on soft surfaces like carpets or blankets that can obstruct airflow.

5.3 Software Updates

- Regularly check for and install Windows updates to ensure system stability and security.
- Keep device drivers updated for optimal performance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No display on monitor.	Monitor not connected or powered on; incorrect input source; faulty cable.	Ensure monitor is connected and powered. Check monitor's input source. Try a different HDMI/VGA cable.
Mini PC does not power on.	Power adapter not connected; power outlet issue.	Ensure power adapter is securely connected to the Mini PC and a working power outlet.
No Wi-Fi connection.	Wi-Fi disabled; incorrect password; router issue.	Check Wi-Fi settings in Windows. Re-enter password. Restart your router.
Slow performance.	Too many applications running; insufficient storage; outdated drivers.	Close unnecessary applications. Free up disk space. Update Windows and drivers.
Bluetooth device not pairing.	Bluetooth disabled; device out of range; device not in pairing mode.	Ensure Bluetooth is enabled on Mini PC. Move device closer. Put device in pairing mode.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	TECLAST
Model Number	N10
Product Dimensions	11.9 x 0.24 x 11.9 cm

Feature	Specification
Item Weight	641 g
Processor Brand	Intel
Processor Type	Celeron N4000
Processor Speed	2.6 GHz (Max Turbo Frequency)
Processor Count	1
RAM Size	6 GB
Memory Technology	DDR4
Maximum Memory Supported	6 GB
Hard Disk Description	SSD
Memory Storage Capacity	128 GB
Hard Drive Interface	PCIE x 4 (M.2)
Graphics Coprocessor	Integrated Graphics
Graphics Chipset Brand	Intel
Graphics Card Description	Integrated
Graphics RAM Type	GDDR4
Graphics Card Ram Size	6 GB (Shared)
Screen Resolution	3840 x 2160 (4K)
Wireless Type	Bluetooth, Wi-Fi (2.4G/5G)
Number of USB 3.0 Ports	3 (USB 3.2 GEN1)
Number of HDMI Ports	1
VGA Port	1
Ethernet Port	1 (1000Mbps RJ45)
TF (MicroSD) Port	1
Headphone Output	1 (3.5mm)
Operating System	Windows 11 Pro
Form Factor	Stick / Mini PC
Specific uses for product	Business, Home Theater, Office, Education

8. WARRANTY INFORMATION

TECLAST products typically come with a standard manufacturer's warranty. Please refer to the warranty card included with your product or visit the official TECLAST website for detailed warranty terms and conditions specific

to your region. Keep your proof of purchase for warranty claims.

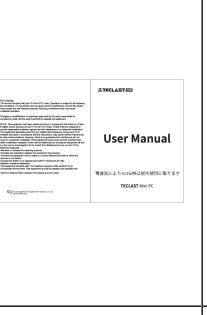
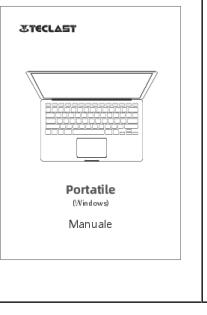
9. CUSTOMER SUPPORT

For technical assistance, product inquiries, or support, please visit the official TECLAST support website or contact their customer service. You may find FAQs, driver downloads, and contact information on their official channels.

Note: Specific contact details and support channels may vary by region.

© 2024 TECLAST. All rights reserved.

Related Documents - N10

	<p>Teclast P50 Tablet User Manual and Setup Guide</p> <p>This comprehensive user manual and setup guide for the Teclast P50 11" 6/128 GB WIFI tablet provides detailed instructions on initial configuration, button functions, connectivity options, display and sound settings, battery management, safety precautions, and regulatory compliance. Learn how to set up your device, connect to networks, manage applications, and ensure optimal performance.</p>
	<p>TECLAST t-PAD User Manual: Setup Guide</p> <p>Comprehensive setup guide for the TECLAST t-PAD tablet, covering Wi-Fi, cellular, Bluetooth connections, display, sound, battery, PC connectivity, language, date, and factory reset.</p>
	<p>TECLAST Mini PC User Manual: Setup, Upgrade, and Safety Guide</p> <p>Comprehensive user manual for the TECLAST Mini PC, covering connection, quick start, internal component upgrades (SSD, DDR memory), and essential safety notes. Includes FCC compliance information.</p>
	<p>Teclast Portable Windows User Manual and Installation Guide</p> <p>A comprehensive guide for setting up and using your Teclast portable Windows device, covering initial setup, button functions, status bar indicators, virtual button bar, action center, gesture controls, and factory reset.</p>

 User Guide <small>TECLAST tPad (Android)</small>	<p><u>TECLAST tPad Android User Guide</u></p> <p>User guide for the TECLAST tPad tablet running on the Android operating system, covering initial setup, system navigation, multi-window functionality, system settings, projection, and system restore/update.</p>
	<p><u>TECLAST tPad Android User Manual & Setup Guide</u></p> <p>Comprehensive user manual and setup guide for the TECLAST tPad Android tablet, covering initial setup, button functions, connectivity options, display and sound settings, and system management.</p>