

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Candy](#) /
- › [Candy CS4 1172DE/1-S Washing Machine User Manual](#)

Candy CS4 1172DE/1-S

Candy CS4 1172DE/1-S Washing Machine User Manual

Model: CS4 1172DE/1-S | Brand: Candy

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Candy CS4 1172DE/1-S washing machine. Please read this manual carefully before using the appliance and keep it for future reference.



Image: Front view of the Candy CS4 1172DE/1-S washing machine, showing the control panel, detergent drawer, and large front-loading

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Unplug the appliance before cleaning or performing maintenance.
- Do not install or store the appliance where it will be exposed to the weather.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Keep packaging materials out of reach of children.

Removing Transit Bolts

Before using the washing machine, it is essential to remove all transit bolts located at the rear of the appliance. Failure to do so will cause damage during operation.

1. Locate the transit bolts on the back of the machine.
2. Use a wrench to loosen and remove each bolt.
3. Insert the plastic caps provided into the holes.



Image: Side view of the Candy CS4 1172DE/1-S washing machine, showing its compact design.

Positioning and Leveling

Place the washing machine on a firm, level floor. Adjust the leveling feet to ensure the appliance is stable and does not wobble.

Water and Electrical Connections

Connect the water inlet hose to a cold water tap. Ensure the drain hose is properly installed into a standpipe or sink. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a program selector dial, a digital display, and various function buttons.



Image: Angled view of the Candy CS4 1172DE/1-S washing machine, highlighting the control panel and detergent drawer.

Loading Laundry

Open the door and load laundry, ensuring not to overload the drum. Close the door firmly.

Adding Detergent

Pull out the detergent drawer and add the appropriate amount of detergent and fabric softener to the designated compartments.

Selecting a Program

Turn the program selector dial to choose the desired wash program based on fabric type and soil level.

Starting a Wash Cycle

Press the Start/Pause button to begin the selected wash program.

MAINTENANCE AND CLEANING

Cleaning the Detergent Drawer

Regularly clean the detergent drawer to prevent residue buildup. Remove the drawer and rinse it under running water.

Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) periodically to clean the drum and remove odors.

Cleaning the Drain Filter

The drain filter should be cleaned regularly to ensure proper drainage and prevent blockages.

1. Open the filter cover at the bottom front of the machine.
2. Place a shallow container to collect any residual water.
3. Unscrew the filter counter-clockwise and remove it.
4. Clean the filter under running water and remove any debris.
5. Reinsert the filter and screw it clockwise until tight. Close the cover.



Image: Close-up view of the washing machine's drain filter compartment, showing the filter removed for cleaning.

Care for the Door Seal

Wipe the door seal after each wash to prevent mold and mildew buildup.

TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected.	Check power supply; Ensure door is firmly closed; Select a program and press Start.
Water not filling	Water tap closed; Inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Machine vibrating excessively	Transit bolts not removed; Machine not level; Uneven load.	Remove transit bolts; Adjust leveling feet; Redistribute laundry.
Water not draining	Drain hose kinked; Drain filter blocked; Pump fault.	Straighten hose; Clean drain filter; Contact service if problem persists.

TECHNICAL SPECIFICATIONS

Below are the key technical specifications for the Candy CS4 1172DE/1-S washing machine.

- Brand:** Candy
- Model:** CS4 1172DE/1-S
- Capacity:** 7 Kilograms
- Maximum Rotational Speed:** 1100 RPM
- Energy Efficiency Class:** D
- Annual Energy Consumption:** 69 Kilowatt Hours
- Noise Level (Spin):** 79 dB
- Installation Type:** Freestanding
- Access Location:** Front-loading
- Product Dimensions (LxWxH):** 50 x 50 x 28 cm *(Note: The provided dimensions seem unusually small for a washing machine. Standard dimensions are typically around 60x60x85 cm. Please refer to the product label for exact dimensions.)*
- Weight:** 61 kg
- Voltage:** 220 Volts
- Colour:** White

Ficha de información del producto				
REGLAMENTO DELEGADO (UE) 2019/2014 DE LA COMISIÓN en lo relativo al etiquetado energético de las lavadoras domésticas y las lavadoras-secadoras domésticas				
Nombre o marca comercial del proveedor: Candy				
Dirección del proveedor: Candy Hoover Group contact, Comolli 16, 20861 Brugherio MB, IT				
Identificador del modelo: CS4 1172DE/1-S				
Parámetros generales del producto:				
Parámetro	Valor	Parámetro	Valor	
Capacidad asignada ^(a) (kg)	7,0	Dimensiones en cm	Altura	85
			Anchura	60
			Profundidad	45
Índice de eficiencia energética ^(a) (IEE _w)	79,9	Clase de eficiencia energética ^(a)	D	
Índice de eficiencia de lavado ^(a)	1,031	Eficacia del aclarado (g/kg) ^(a)	4,9	
Consumo de energía en kWh por ciclo, sobre la base del programa «eco 40-60» en una combinación a plena carga y con parte de	0,689	Consumo de agua en litros por ciclo, sobre la base del programa «eco 40-60» en una combinación a plena carga y con parte de la carga. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza	41	

la carga. El consumo real de energía dependerá de cómo se utilice el aparato.			del agua.	
Temperatura máxima dentro de la ropa tratada ^(a) (°C)	Capacidad asignada	39	Contenido de humedad residual ponderado ^(a) (%)	62,9
	Mitad	36		
	Cuarta parte	27		
Velocidad de centrifugado ^(a) (rpm)	Capacidad asignada	1 051	Clase de eficiencia de centrifugado ^(a)	C
	Mitad	1 051		
	Cuarta parte	1 051		
Duración del programa ^(a) (h:min)	Capacidad	3:28	Tipo	de libre instalación
Página 1 / 2				
	asignada			
	Mitad	2:42		
	Cuarta parte	2:42		
Ruido acústico aéreo emitido en la fase de centrifugado ^(a) (dB(A) re 1 pW)		79	Clase de ruido acústico aéreo emitido ^(a) (fase de centrifugado)	C
Modo apagado (W) (si procede)		0,50	Modo preparado (W) (si procede)	1,00
Inicio aplazado (W) (si procede)		4,00	Modo preparado en red (W) (si procede)	No aplicable
Duración mínima de la garantía ofrecida por el proveedor: 24 meses				
Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado			NO	
Información adicional:				
Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 9 del anexo II del Reglamento (UE) 2019/2023 de la Comisión: https://corporate.haier-europe.com/en/				
(a) para el programa «eco 40-60»				
Página 2 / 2				

Image: Energy label for the Candy CS4 1172DE/1-S washing machine, detailing energy efficiency, capacity, and noise levels.

WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your appliance or visit the official Candy website.

For technical assistance, spare parts, or to schedule a service appointment, please contact Candy customer support. Have your model number (CS4 1172DE/1-S) and serial number ready when contacting support.

Manufacturer: Candy

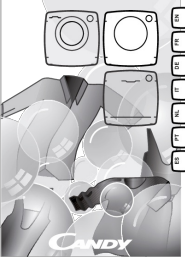 
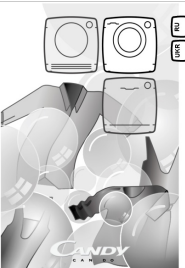 
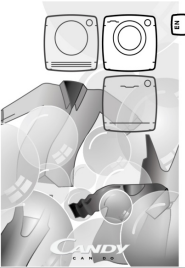 
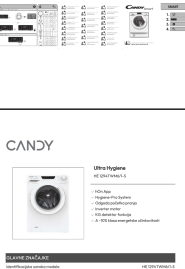 
Minimum guarantee offered by the provider:24 months

Online Information: For more information, including the product information sheet, you can visit the supplier's website. A link to the information provided by the supplier can be found at <https://corporate.haier-europe.com/en/>.

© 2024 Candy. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - CS4 1172DE/1-S

	Candy CS4 H7A1DE-S Tumble Dryer User Manual Comprehensive user manual for the Candy CS4 H7A1DE-S tumble dryer, covering safety instructions, installation, operation, maintenance, program selection, and troubleshooting.
	Руководство пользователя стиральной машины Candy: Безопасность, Установка, Эксплуатация Полное руководство пользователя для стиральных машин Candy. Содержит инструкции по безопасности, установке, эксплуатации, обслуживанию и устранению неисправностей. Список моделей: CS34 1052D1/2-07, CS4 1052D1/2-07, CS34 1062D2/2-07, CS4 1062D1/2-07, CS4 1262D3/2-07, CS4 1172D1/2-07, CS4 1072D1/2-07, CS4 1272D3/2-07.
	Candy Washing Machine User Manual This user manual provides comprehensive instructions for operating, installing, maintaining, and troubleshooting your Candy washing machine. It covers safety guidelines, program selection, smart features, and technical specifications for models like CSW 2D.
	Candy Smart Washing Machine User Guide and Features Comprehensive guide to the Candy Smart washing machine, detailing programs, features, options, and basic usage. Access further multilingual information at go.he.services/smart-bi.
	Candy HE 1294TWM6/1-S Ultra Hygiene Washing Machine Specifications Detailed specifications for the Candy HE 1294TWM6/1-S Ultra Hygiene washing machine, including features, technical characteristics, energy efficiency, and dimensions.

