



[Manuals.plus](#) /

› [LEGO](#) /

› [LEGO Friends Canal Houseboat 41702 Building Kit Instruction Manual](#)

LEGO 41702

LEGO Friends Canal Houseboat 41702 Instruction Manual

Model: 41702

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and care of your LEGO Friends Canal Houseboat 41702 Building Kit. Designed for children aged 7 and up, this 737-piece set offers an engaging building experience and promotes imaginative play centered around environmental care and community.

The Canal Houseboat features a deck-top market garden, a removable deck, and a hinged side that reveals a detailed cabin interior. Explore the kitchen, sleeping area, wood-burning stove, gaming station, and bathroom. The set includes four mini-dolls (Mia, Layla, Sebastian, Elijah) and one animal figure (Chico Jr.), along with a bicycle and a separate market stall.



Image: Two children engaging with the LEGO Friends Canal Houseboat, highlighting its interactive design.

SAFETY INFORMATION

This product contains small parts and is not suitable for children under 3 years of age due to choking hazards. Adult supervision is recommended during assembly and play for younger children within the recommended age range.

PACKAGE CONTENTS

Your LEGO Friends Canal Houseboat 41702 Building Kit includes:

- 737 LEGO Building Elements
- 4 Mini-doll figures: Mia, Layla, Sebastian, Elijah
- 1 Animal figure: Chico Jr. (kitten)
- Accessories including a bicycle, market stall, gardening tools, and various food items.



INCLUDES 4 MINI-DOLLS AND AN ANIMAL FIGURE

Image: The four mini-dolls and the kitten figure included with the set.

SETUP: BUILDING INSTRUCTIONS

Assembly of the LEGO Friends Canal Houseboat 41702 is guided by a comprehensive digital building guide. This interactive guide provides step-by-step instructions to help you construct the model.

Accessing the Digital Building Guide:

1. Download the **LEGO Building Instructions app** on your smartphone or tablet.
2. Search for model **41702** within the app.
3. Follow the on-screen instructions, utilizing the zoom and rotate tools for detailed views.

The app provides an enhanced building experience, allowing for independent construction and clear visualization of each step.



Image: Digital building guide shown on a tablet, alongside the building pieces.

OPERATING AND PLAY FEATURES

The LEGO Friends Canal Houseboat is designed for interactive play, offering multiple areas and accessories for creative storytelling.

- **Deck-Top Garden:** Cultivate vegetables and fruits in the garden boxes. Use the watering can to care for the plants.
- **Hangout Area:** The deck features a cozy hangout area decorated with fairy lights, perfect for mini-doll gatherings.
- **Removable Deck:** The top deck can be easily removed to access the detailed cabin interior below.
- **Hinged Side:** The side of the houseboat is hinged, allowing for open access to the cabin's various rooms.
- **Cabin Interior:** Explore the kitchen equipped for making cupcakes, a comfortable sleeping area, a wood-burning stove, a gaming station, and a bathroom.
- **Market Stall:** A separate jetty with a market stall allows mini-dolls to sell their homegrown produce to the community.



Image: Removable deck feature.



Image: Detailed deck garden.



Image: Solar panel and fairy lights.



Image: Mini-dolls in the kitchen area.

Product Overview Videos

Your browser does not support the video tag.

Video: A 7-second 360-degree spin showcasing the fully assembled LEGO Friends Canal Houseboat 41702 from all angles, including the market stall and bicycle.

Your browser does not support the video tag.

Video: An official 35-second video demonstrating the various play features and details of the LEGO Friends Canal Houseboat 41702 Building Kit.

MAINTENANCE AND CARE

To ensure the longevity and cleanliness of your LEGO Friends Canal Houseboat, follow these simple care guidelines:

- **Cleaning:** Use a soft brush or cloth to gently remove dust and debris from the bricks. For deeper cleaning, wash LEGO bricks by hand using water no warmer than 104°F (40°C) and a mild detergent. Rinse thoroughly and air dry. Do not use hot water, harsh chemicals, or abrasive materials, as these can damage the plastic.
- **Storage:** Store your LEGO set in a cool, dry place away from direct sunlight to prevent discoloration and warping of the plastic elements.
- **Handling:** Handle the assembled model with care to avoid accidental disassembly.

TROUBLESHOOTING

If you encounter any issues with your LEGO Friends Canal Houseboat set, consider the following:

- **Missing Pieces:** In the rare event of missing pieces, please contact LEGO Customer Service directly. Provide the set number (41702) and the specific part number(s) if known.
- **Assembly Difficulties:** Refer back to the digital building instructions in the LEGO Building Instructions app. Utilize the zoom and rotate features to get a clearer view of the steps. Ensure all pieces are correctly oriented and firmly pressed together.
- **Damaged Parts:** If any parts are damaged upon opening the box, contact LEGO Customer Service for assistance.

SPECIFICATIONS

Brand	LEGO
Model Number	41702
Number of Pieces	737
Recommended Age	7+ years
Item Dimensions (L x W x H)	21.26 x 11.1 x 3.09 inches
Item Weight	4 Pounds
Material Type	Plastic
Included Components	LEGO Building Elements

WARRANTY INFORMATION

LEGO products are manufactured to high-quality standards. If you believe your product is defective or if you have missing parts, please refer to the official LEGO website for detailed warranty information and replacement part requests. LEGO offers a commitment to quality and customer satisfaction.

For specific warranty terms and conditions, please visit the [LEGO Customer Service website](#).

CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your LEGO Friends Canal Houseboat 41702, please contact LEGO Customer Service:

- **Online:** Visit the official [LEGO Customer Service website](#) for FAQs, online contact forms, and live chat options.
- **Phone:** Contact details for your region can be found on the LEGO website.

When contacting support, please have your product model number (41702) and any relevant purchase information ready.