

Manuals.plus /

› SymWell /

› SymWell Replacement Remote Control Instruction Manual for Yamaha AV Receivers

SymWell Universal Replacement Remote Control

SymWell Replacement Remote Control Instruction Manual

Brand: SymWell

Compatible Models: RX-A3040BL, RX-A3030, RX-A730, RAV501, RX-A1030, RX-V381BL, YHT-4920UBL, RXA550, RXV1065BL, YHT-5920, RXA1030, RAV559, ZW917000, RX-A2070, HTR3063, RXV467 for Yamaha AV Receivers

1. SETUP AND BATTERY INSTALLATION

This replacement remote control operates using two AAA batteries (not included). Please follow these steps to install the batteries correctly.



Image 1: Back of the remote control showing the battery compartment.

This image displays the rear side of the SymWell replacement remote control. The battery compartment cover is visible at the bottom, indicating where to insert the batteries.

1. **Open the Battery Compartment:** Locate the battery compartment on the back of the remote control. Slide the cover downwards or press the latch and lift to open it.
2. **Insert Batteries:** Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
3. **Close the Compartment:** Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is designed to be universally compatible with the listed Yamaha AV receiver models and typically does not require programming. Once batteries are installed, it should be ready for use.

2. OPERATING INSTRUCTIONS

This section provides a general overview of the remote control's functions. The layout and button labels are standard for Yamaha AV receiver controls.



Image 2: Front of the remote control displaying all buttons.

This image shows the front face of the SymWell replacement remote control, featuring a comprehensive array of buttons for controlling various functions of a Yamaha AV receiver, including power, input selection, volume, and menu navigation.

- **Power Button:** Located at the top, typically red, to turn the AV receiver on or off.
- **Input Selection:** Buttons labeled HDMI, AV, TUNER, CD, etc., allow you to switch between different audio/video sources.
- **Volume Control:** Dedicated buttons for increasing (+) and decreasing (-) the volume.
- **Mute Button:** Temporarily silences the audio output.
- **Navigation Buttons:** Arrow keys (Up, Down, Left, Right) and an ENTER button are used for navigating menus and making selections.
- **Menu/Display:** Buttons to access the receiver's on-screen menu and display information.
- **Scene Buttons:** Pre-programmed or customizable buttons for quick access to specific settings or

modes.

- **Number Pad:** For direct input of channel numbers or other numerical selections.

Point the remote control directly at the AV receiver's infrared sensor. Ensure there are no obstructions between the remote and the receiver for optimal performance.

3. MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the surface.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

4. TROUBLESHOOTING

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the AV receiver's infrared sensor. Remove any obstructions.
 - Confirm the remote is pointed directly at the receiver.
- **Some Functions Do Not Work:**
 - This remote is a universal replacement and is compatible with most functions of the listed Yamaha AV receiver models. However, some highly specific or advanced functions might not be supported.
 - Refer to your AV receiver's original manual for specific function details.

5. SPECIFICATIONS

Feature	Detail
Brand	SymWell
Connectivity Technology	Infrared
Max Number of Supported Devices	1 (Specific Yamaha AV Receiver)
Number of Buttons	25
Special Feature	Ergonomic
Item Weight	0.16 ounces (approximately 4.5 grams)
Package Dimensions	2.36 x 1.18 x 0.39 inches (approximately 6 x 3 x 1 cm)

6. WARRANTY AND SUPPORT

No specific warranty information is provided with this product. For any issues or further assistance, please contact the retailer or the manufacturer, SymWell, directly.

Please retain your purchase receipt for any potential support inquiries.