

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Glen](#) /

› [Glen 3-in-1 Electric Multi Cooker SA3035MC User Manual](#)

Glen 3035MC

Glen 3-in-1 Electric Multi Cooker SA3035MC User Manual

Model: SA3035MC

[Introduction](#) [Safety Instructions](#) [Product Overview](#) [Setup](#) [Operation](#) [Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Glen 3-in-1 Electric Multi Cooker SA3035MC. This appliance is designed for versatile cooking, including boiling eggs, steaming various foods, and preparing other dishes. Please read this manual thoroughly before first use to ensure safe and efficient operation. Keep this manual for future reference.



Image 1.1: The Glen 3-in-1 Electric Multi Cooker in a kitchen setting, demonstrating its use for preparing eggs and noodles.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of

fire, electric shock, and injury to persons. Read all instructions carefully.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a boil-dry protection feature that automatically cuts off power if water runs out.

3. PRODUCT OVERVIEW

The Glen 3-in-1 Electric Multi Cooker is designed for convenience and versatility. Familiarize yourself with its components:



Image 3.1: Key components of the Glen 3-in-1 Electric Multi Cooker, including the main unit, transparent lid, egg/steam plate, measuring cup, and timer.

Components:

- **Main Unit:** Contains the heating plate and control knob.
- **Top Cover (Polycarbonate Transparent Lid):** Allows monitoring of cooking progress and retains steam. Features a steam vent.
- **Steam/Egg Plate:** Used for boiling eggs or steaming vegetables, meat, or fish.
- **Measuring Cup with Piercing Pin:** For accurate water measurement and piercing eggs before boiling.
- **45 Minutes Timer:** Adjustable knob to set cooking duration.
- **Indicator Light:** Illuminates when the unit is in operation.

1 Food/Egg tray for cooking



Break resistant polycarbonate lid with steam vent for easy monitoring



Image 3.2: Detailed view of the food/egg tray and the break-resistant polycarbonate lid with a steam vent.

4. SETUP AND FIRST USE

Before using your multi cooker for the first time, please follow these steps:

1. Unpack all components and remove any packaging materials.
2. Wipe the heating plate with a damp cloth. Wash the steam/egg plate, measuring cup, and lid with warm, soapy water, then rinse and dry thoroughly.
3. Place the main unit on a stable, flat, heat-resistant surface.
4. Ensure the power cord is not damaged and is within reach of a suitable power outlet (230 V AC 50 Hz).

5. OPERATING INSTRUCTIONS

The Glen 3-in-1 Multi Cooker offers three primary functions: egg boiling, steaming, and general cooking.



Image 5.1: The multi cooker's versatility, showing it used for frying, steaming, and boiling.

5.1. Egg Boiling

1. Use the measuring cup to add the appropriate amount of water to the heating plate. The amount of water determines the egg consistency (soft, medium, hard).
2. Use the piercing pin on the bottom of the measuring cup to gently pierce the larger end of each egg. This prevents cracking during boiling.

3. Place the steam/egg plate onto the main unit. Arrange up to 8 eggs on the egg plate.
4. Cover with the transparent lid.
5. Plug in the appliance. Turn the timer knob to the desired cooking time (e.g., 7-10 minutes for soft to hard-boiled eggs). The indicator light will illuminate.
6. Once the timer reaches zero, the appliance will automatically shut off. Carefully remove the lid and eggs.

**Boil 8 Eggs at
one time**



Image 5.2: The multi cooker configured to boil up to 8 eggs simultaneously.

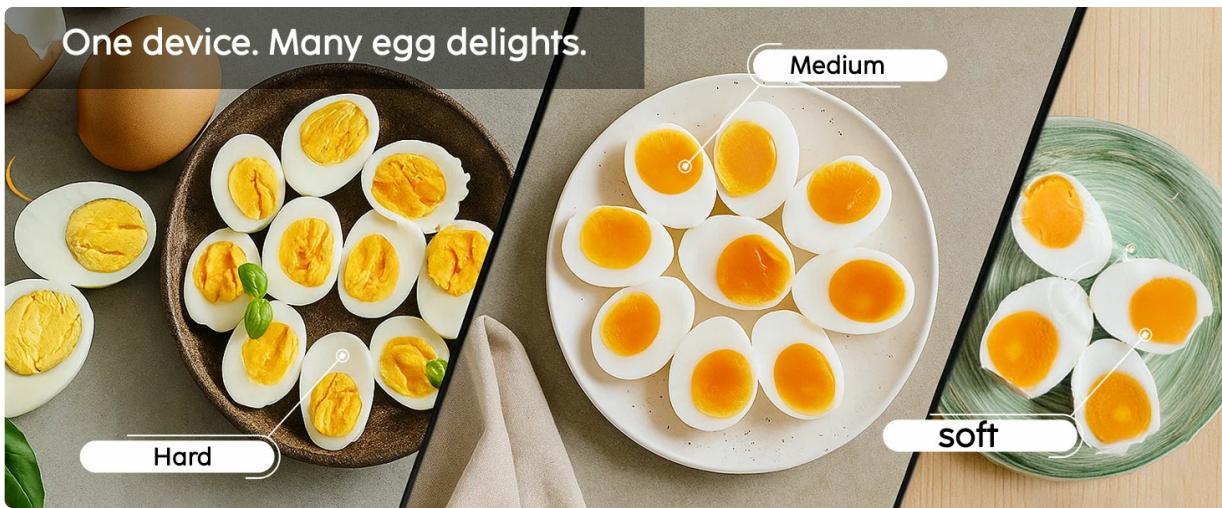


Image 5.3: Examples of different egg consistencies (hard, medium, soft) achievable with the multi cooker.

5.2. Steaming

The multi cooker can steam various foods like vegetables, meat, or fish.

1. Add the appropriate amount of water to the heating plate (refer to recipes or desired steaming time).
2. Place the steam/egg plate onto the main unit. Arrange your food items on the plate.
3. Cover with the transparent lid.
4. Plug in the appliance. Turn the timer knob to the desired steaming time (up to 45 minutes). The indicator light will illuminate.
5. Once the timer reaches zero, the appliance will automatically shut off. Carefully remove the lid and steamed food.



MULTI COOK

3^{IN}1

The 3-in-1 Multi Cook
can **boil, steam & cook**
foods quickly.

Image 5.4: The multi cooker in use for steaming a variety of vegetables.

5.3. General Cooking (e.g., Instant Noodles, Scrambled Eggs)

The non-stick heating plate is suitable for direct cooking of certain foods.

1. Ensure the steam/egg plate is removed. Add ingredients directly to the non-stick heating plate (e.g., water for noodles, oil for scrambled eggs).
2. Cover with the transparent lid if required for faster cooking or to retain heat.
3. Plug in the appliance. Turn the timer knob to the desired cooking time. The indicator light will illuminate.
4. Monitor cooking progress. The appliance will shut off when the timer expires.



Image 5.5: The multi cooker used for cooking instant noodles directly on its non-stick heating plate.

5.4. Using the Timer

The appliance features a 45-minute timer. Turn the knob clockwise to set the desired cooking duration. The indicator light will turn on, signifying operation. The appliance will automatically switch off when the timer returns to zero.

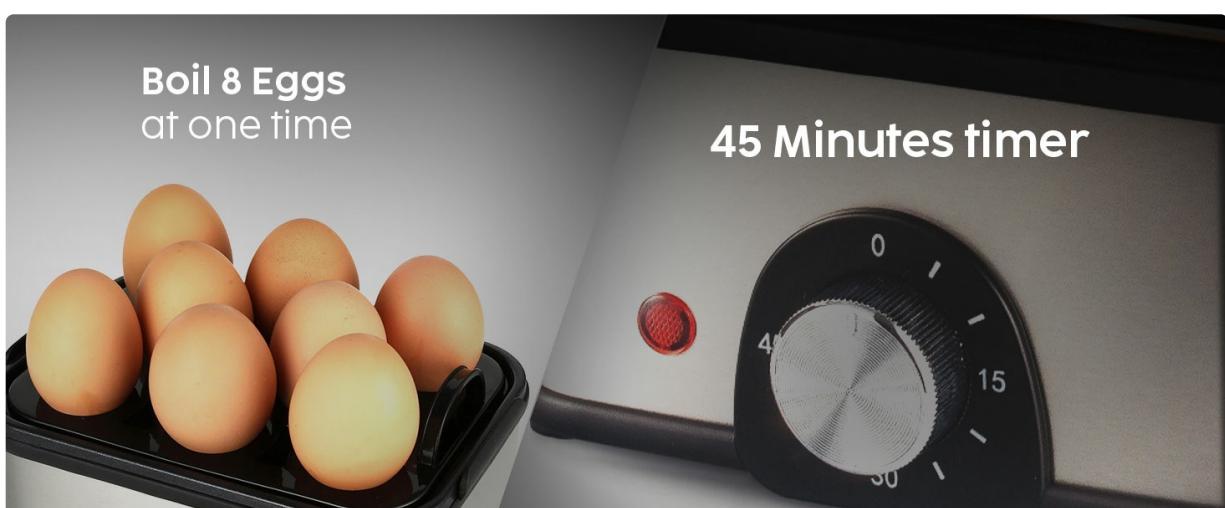


Image 5.6: Detail of the 45-minute timer and operational indicator light.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your multi cooker.

1. Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Main Unit:** Wipe the exterior and the non-stick heating plate with a damp cloth. For stubborn stains on the heating plate, use a soft sponge with mild detergent, then wipe clean with a damp cloth. Do not immerse the main unit in water or any other liquid.
3. **Steam/Egg Plate, Measuring Cup, and Lid:** These parts are washable in warm, soapy water. Rinse thoroughly and dry completely before storage.
4. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surfaces.
5. Store the appliance in a dry place when not in use.

7. TROUBLESHOOTING

If you encounter issues with your Glen 3-in-1 Electric Multi Cooker, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-------------------------------------|---|---|
| Appliance does not turn on. | Not plugged in; power outlet malfunction; timer not set. | Ensure the appliance is securely plugged into a working outlet. Turn the timer knob to a desired cooking time. |
| Timer not working or stuck. | Mechanical issue with the timer mechanism. | If the timer knob is physically stuck or does not advance, discontinue use and contact customer support. |
| Food not cooking/steaming properly. | Insufficient water; lid not properly closed; incorrect timer setting. | Ensure adequate water is added. Verify the lid is securely placed. Adjust the timer for longer cooking if needed. |
| Appliance shuts off prematurely. | Boil-dry protection activated (no water). | This is a safety feature. Add sufficient water for the cooking task. Allow the unit to cool before restarting. |

If the problem persists after attempting these solutions, please contact Glen customer service for assistance.

8. SPECIFICATIONS

Technical details for the Glen 3-in-1 Electric Multi Cooker SA3035MC:

- **Model Number:** 3035MC
- **Power Consumption:** 350W
- **Input Supply:** 230 V AC, 50 Hz
- **Material:** Plastic (body), Non-stick (heating plate), Polycarbonate (lid)

- **Color:** Grey
- **Product Dimensions (L x W x H):** 19.5 cm x 15.5 cm x 18.1 cm
- **Item Weight:** 1.1 Kilograms
- **Capacity:** Boils up to 8 eggs at a time
- **Timer:** Up to 45 minutes
- **Safety Features:** Boil-dry protection
- **Included Components:** Main Unit, Top Cover, Egg Plate, Measuring Cup with Piercing Pin, User's Guide



Image 8.1: Dimensional overview of the Glen 3-in-1 Electric Multi Cooker.

9. WARRANTY AND SUPPORT

Glen provides a warranty for this product to ensure your satisfaction.

- **Warranty Period:** 2 Years Warranty by Glen.
- **Manufacturer:** Glen Appliances Pvt. Ltd. Plot No- 919, Sector 68, IMT, Faridabad, Haryana Pincode:121004.

For warranty claims, service, or technical support, please contact Glen customer service. Keep your purchase receipt as proof of purchase for warranty validation.


350 WATT

2 YEARS WARRANTY

Image 9.1: Confirmation of 350W power and 2-year warranty.

© 2025 Glen Appliances Pvt. Ltd. All rights reserved.

Related Documents - 3035MC
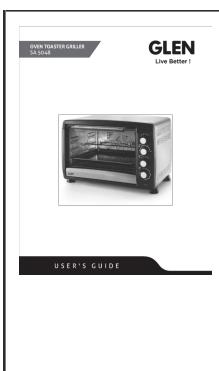
| | |
|--|--|
|  The image shows the front cover of the user guide for the Glen SA 5048 Oven Toaster Griller. It features a black and silver oven toaster griller with a digital display and control panel. The text 'OVEN TOASTER GRILLER' is at the top, 'GLEN' is in the center with the tagline 'Live Better!', and 'USER'S GUIDE' is at the bottom. | <p><u>Glen SA 5048 Oven Toaster Griller User Guide Features & Operation</u></p> <p>Comprehensive user guide for the Glen SA 5048 Oven Toaster Griller. Learn about setup, safety, cleaning, functions like grilling, baking, roasting, convection, and rotisserie. Includes specifications and warranty information.</p> |
|--|--|

| | |
|---|---|
|  <p>GLEN Live Better!</p> <p>CONTACT GRILL SA 3031</p> <p>USER'S GUIDE</p> | <p><u>Glen Contact Grill SA 3031 User's Guide</u></p> <p>User's guide for the Glen Contact Grill SA 3031, providing instructions on usage, cleaning, storage, safety precautions, and warranty information. Learn how to operate your Glen contact grill for optimal results.</p> |
|  <p>GLEN Live Better!</p> <p>WARRANTY</p> <p>SANDWICH MAKER GRILL SA 3028</p> <p>USER'S GUIDE</p> | <p><u>Glen Sandwich Maker Grill SA 3028 User Guide and Warranty</u></p> <p>Official user guide and warranty information for the Glen Sandwich Maker Grill SA 3028, including specifications, usage instructions, and safety precautions.</p> |
|  <p>GLEN Live Better!</p> <p>OVEN TOASTER GRILLER SA 5042 BLRC</p> <p>USER'S GUIDE</p> | <p><u>Glen Oven Toaster Griller SA 5042 BLRC User's Guide</u></p> <p>User's guide for the Glen Oven Toaster Griller SA 5042 BLRC, including important safety precautions, operating instructions, maintenance, specifications, and warranty information.</p> |
|  <p>GLEN Live Better!</p> <p>OVEN TOASTER GRILLER SA 5033/SA 5023</p> <p>USER'S GUIDE</p> | <p><u>Glen Oven Toaster Griller SA 5033/SA 5023 User Guide</u></p> <p>Comprehensive user guide for the Glen Oven Toaster Griller models SA 5033 Digital and SA 5023 Digital, covering features, operation, installation, maintenance, and safety.</p> |
|  <p>GLEN Live Better!</p> <p>WARRANTY</p> <p>TRAVEL KETTLE SA 9013</p> <p>USER'S GUIDE</p> | <p><u>Glen SA 9013 Travel Kettle User Guide - Specifications, Usage, and Warranty</u></p> <p>Official user guide for the Glen SA 9013 Travel Kettle. Find specifications, operating instructions, cleaning tips, descaling guide, safety precautions, and warranty details.</p> |