

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LEXiBOOK](#) /

> [Lexibook iParty BTP180BKZ Portable Bluetooth Light Speaker User Manual](#)

LEXiBOOK BTP180BKZ

Lexibook iParty BTP180BKZ Portable Bluetooth Light Speaker User Manual

Model: BTP180BKZ | Brand: LEXiBOOK

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

The Lexibook iParty BTP180BKZ is a portable Bluetooth light speaker designed for karaoke and music playback. It features integrated light effects, wireless Bluetooth connectivity, and multiple input options including USB, micro SD/TF card, and Aux-in. A microphone is included to enable karaoke functionality.

LEXIBOOK®



Figure 1: Lexibook iParty speaker with attached microphone, showcasing its compact design and integrated light rings around the speakers.

2. WHAT'S IN THE BOX

- Lexibook iParty Portable Bluetooth Light Speaker
- Rechargeable Battery (pre-installed or separate)
- USB Charging Cable

- Handle Microphone



Figure 2: The product box illustrating the speaker, microphone, and key features like wireless connectivity and light effects.

3. SETUP INSTRUCTIONS

3.1 Initial Charging

1. Locate the Micro USB charging port on the back panel of the speaker.
2. Connect the provided USB charging cable to the speaker's charging port and to a compatible USB power source (e.g., computer, USB wall adapter).
3. Allow the speaker to fully charge before first use. The charging indicator light will typically change color or turn off when charging is complete.

3.2 Microphone Setup

1. Ensure the microphone is connected to the 'Mic Jack' port on the speaker's control panel.
2. If the microphone requires batteries, insert them according to the polarity markings inside the microphone compartment.



Figure 3: Rear view of the speaker, showing the microphone input and other ports.

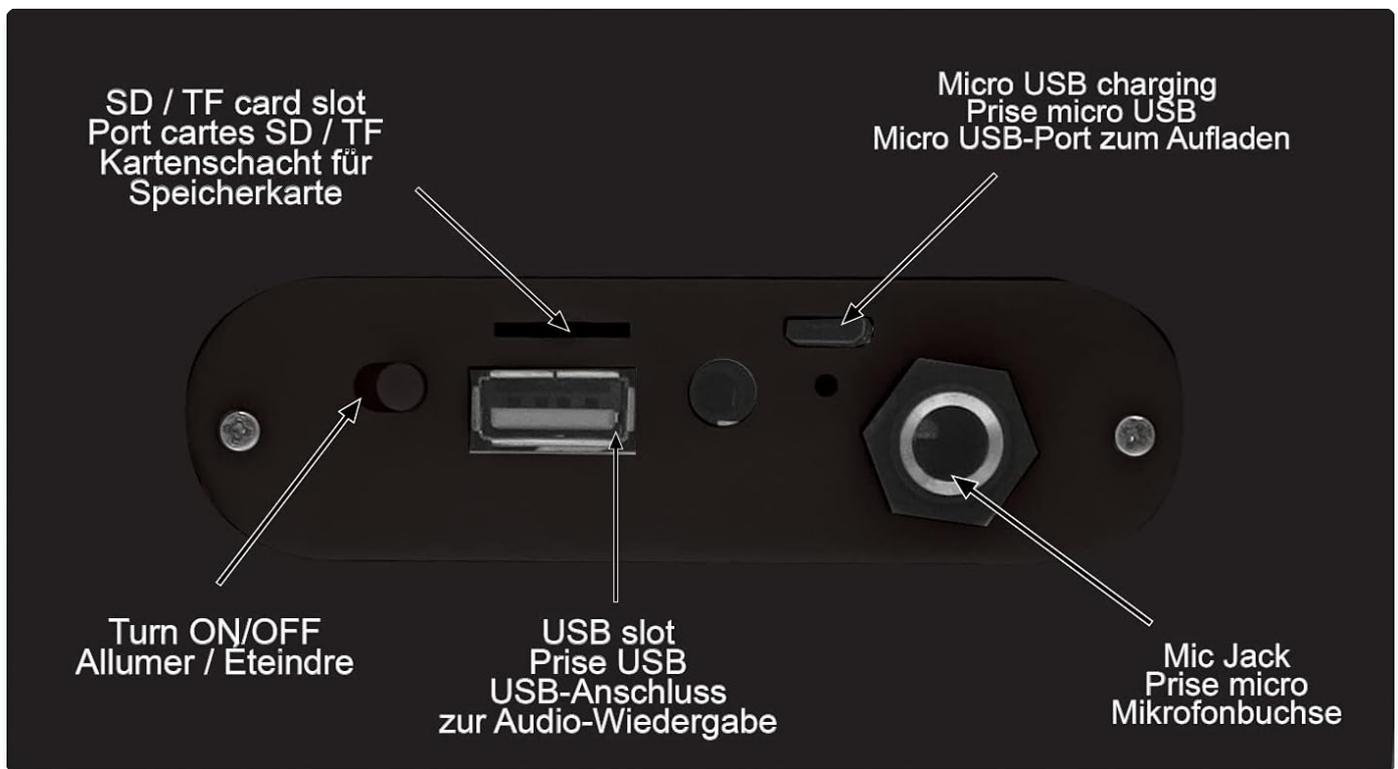


Figure 4: Detailed view of the speaker's input/output ports and controls.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Locate the ON/OFF switch on the speaker's control panel. Slide the switch to the 'ON' position to power on the device. Slide it to 'OFF' to power down.

4.2 Bluetooth Connectivity

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a specific light or display).
2. On your smartphone, tablet, or other Bluetooth-enabled audio device, enable Bluetooth and search for available devices.
3. Select 'iParty' or 'BTP180BKZ' from the list of devices to pair. A confirmation sound will indicate successful pairing.
4. Once paired, you can stream audio wirelessly from your device to the speaker.

4.3 Music Playback via USB, SD Card, or Aux-in

- **USB:** Insert a USB flash drive containing audio files into the USB slot. The speaker will automatically detect and play the music.
- **Micro SD/TF Card:** Insert a micro SD or TF card (up to 32GB) with audio files into the designated slot. The speaker will begin playing.
- **Aux-in:** Connect an external audio device (e.g., MP3 player, computer) to the 'Aux-in' port using a 3.5mm audio cable (not included). The speaker will switch to Aux-in mode for playback.

4.4 Microphone Usage (Karaoke)

- With the microphone connected and powered on, adjust the microphone volume using the dedicated control knob on the speaker.
- Sing along to your favorite songs playing through the speaker.

4.5 Light Effects

The speaker features integrated light effects that activate automatically when the device is powered on. These lights synchronize with the music to enhance the party atmosphere.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the Lexibook iParty speaker's features, including Bluetooth connectivity, microphone use, and dynamic light effects.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, fully charge the speaker before storing it for extended periods. Avoid exposing the battery to extreme temperatures.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and moisture.

6. TROUBLESHOOTING

- **No Power:** Ensure the speaker is fully charged and the ON/OFF switch is in the 'ON' position.
- **No Sound:** Check the volume levels on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, USB, SD, Aux) is selected.
- **Bluetooth Pairing Issues:** Make sure the speaker is in pairing mode and within range of your device. Disconnect and re-pair if necessary. Ensure no other devices are actively connected to the speaker.
- **Microphone Not Working:** Verify the microphone is securely plugged into the 'Mic Jack' and powered on (if applicable). Check microphone volume.

7. PRODUCT SPECIFICATIONS

Product Dimensions	11.7 x 3.8 x 7.8 inches
Item Weight	2.61 pounds
Item Model Number	BTP180BKZ
Manufacturer Recommended Age	3 years and up
Brand	LEXiBOOK
Special Feature	Light Up Speaker, Portable
Color	Black
Power Source	Battery Powered

8. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official LEXiBOOK website. Keep your proof of purchase for any warranty claims.