

[Manuals.plus](#) /

› [RYGHT](#) /

› RYGHT ALFA Wireless Bluetooth Earbuds R483416 User Manual

RYGHT ALFA R483416

RYGHT ALFA Wireless Bluetooth Earbuds R483416 User Manual

Model: ALFA (R483416)

1. INTRODUCTION

Thank you for choosing the RYGHT ALFA Wireless Bluetooth Earbuds. This manual provides essential information for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before use and retain it for future reference.

2. PACKAGE CONTENTS

The RYGHT ALFA Wireless Bluetooth Earbuds package typically includes:

- RYGHT ALFA Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your RYGHT ALFA earbuds and charging case.



Image 3.1: RYGHY ALFA Earbuds in charging case, top view. Shows the two earbuds nestled in their charging slots within the open case, with three LED indicators visible on the front edge of the case.



Image 3.2: Various views of the RYGHT ALFA Earbuds and Charging Case. This image displays the earbuds from a side profile, showing their semi in-ear design, alongside the charging case from both front and side angles, highlighting the USB-C charging port and LED indicators.

- **Earbuds:** Left (L) and Right (R) earbuds with touch control areas.
- **Charging Case:** Houses and charges the earbuds. Features LED indicators for battery status and a USB-C charging port.

4. SETUP

4.1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case. Ensure they are correctly seated in their respective slots.
2. Connect the USB-C charging cable to the charging port on the case and the other end to a USB power adapter (not included) or a computer's USB port.
3. The LED indicators on the charging case will illuminate to show charging status. Once fully charged, the indicators may change color or turn off.

The earbuds offer approximately 4.5 hours of playback on a single charge, with the charging case providing an additional 13 hours of battery life.



Image 4.1: RYGHT ALFA Earbuds and Charging Case, showing the USB-C charging port on the case. The earbuds are shown outside the case, highlighting their design, while the case is open with its charging port visible.

4.2. Bluetooth Pairing

To connect your RYGHT ALFA earbuds to a device:

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on one

or both earbuds.

3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "RYGHT ALFA" from the list of found devices.
5. Once connected, the earbud LED indicators will stop flashing. You are now ready to use your earbuds.

If pairing fails, place the earbuds back into the case, close it, and then reopen to re-enter pairing mode. Ensure your device is within Bluetooth range (typically 10 meters).

5. OPERATING THE EARBUDS

5.1. Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on. Alternatively, press and hold the touch control area on both earbuds for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging. Alternatively, press and hold the touch control area on both earbuds for 5 seconds.

5.2. Wearing the Earbuds

For optimal sound quality and comfort, ensure the earbuds are correctly positioned in your ears.

1. Identify the Left (L) and Right (R) earbuds.
2. Gently insert each earbud into the corresponding ear canal.
3. Adjust the earbud until it feels secure and comfortable.



Image 5.1: RYGHT ALFA Earbuds placed inside their open charging case, ready for use or charging. This view clearly shows the orientation of the earbuds within the case.

5.3. Touch Controls

The RYGHT ALFA earbuds feature intuitive touch controls on each earbud. The functions may vary slightly depending on your device and application.

Table 5.1: Touch Control Functions

Action	Function
Single Tap (Left/Right Earbud)	Play/Pause Music, Answer/End Call
Double Tap (Right Earbud)	Next Track

Action	Function
Double Tap (Left Earbud)	Previous Track
Triple Tap (Left/Right Earbud)	Activate Voice Assistant
Press and Hold (Left/Right Earbud, 2s)	Reject Call

6. MAINTENANCE

6.1. Cleaning

Regular cleaning helps maintain sound quality and hygiene.

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.
- Gently clean the ear tips and speaker mesh with a cotton swab to remove earwax or debris.
- Ensure all components are completely dry before placing earbuds back into the charging case or using them.

6.2. Storage

When not in use, store your earbuds in their charging case to protect them from dust, damage, and to keep them charged.

- Store in a cool, dry place, away from extreme temperatures and direct sunlight.
- Avoid storing near magnetic fields.

7. TROUBLESHOOTING

If you encounter issues with your RYGHT ALFA earbuds, refer to the following common problems and solutions:

Table 7.1: Troubleshooting Guide

Problem	Solution
Earbuds not pairing	◦ Ensure earbuds are charged. ◦ Place earbuds back in the case, close, then reopen to re-enter pairing mode. ◦ Turn off and on Bluetooth on your device. ◦ Forget "RYGHT ALFA" from your device's Bluetooth list and try pairing again. ◦ Ensure no other Bluetooth devices are interfering.
Only one earbud working	◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the case, close, then reopen. They should automatically reconnect to each other. ◦ Try resetting the earbuds (refer to manufacturer's website for specific reset instructions if needed).

Problem	Solution
Poor sound quality	◦ Clean the earbud speaker mesh to remove any debris. ◦ Ensure the earbuds are properly seated in your ears. ◦ Check the audio source quality. ◦ Move closer to your connected device to avoid signal interference.
Earbuds not charging	◦ Ensure the charging cable is securely connected to both the case and the power source. ◦ Check if the charging port on the case is clean and free of debris. ◦ Try a different USB-C cable or power adapter. ◦ Ensure the earbuds are correctly placed in the charging case.

8. SPECIFICATIONS

Table 8.1: RYGHT ALFA Technical Specifications

Feature	Detail
Model Name	ALFA
Model Number	R483416
Brand	RYGHT
Connectivity Technology	Wireless (Bluetooth)
Ear Placement	In-ear / Semi In-ear
Control Method	Touch Control
Special Features	Fast Charging
Battery Life (Earbuds)	Approx. 4.5 hours
Total Battery Life (with Case)	Approx. 17.5 hours (4.5 + 13)
Charging Port	USB-C
Weight	35 Grams (total, likely case + earbuds)
Water Resistance Level	Water-resistant
Compatible Operating Systems	Android (and generally iOS/Windows/macOS via Bluetooth)
Material	Faux Leather

9. SAFETY INFORMATION

Please read and follow these safety guidelines to prevent injury or damage to your device:

- Do not expose earbuds or charging case to extreme temperatures, humidity, or liquids.
- Avoid listening at high volumes for extended periods to prevent hearing damage.

- Do not attempt to disassemble or modify the product. This will void the warranty.
- Keep out of reach of children and pets.
- Dispose of the product responsibly according to local regulations.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please refer to the official RYGHT website or contact their customer service. Details regarding spare parts availability and software updates are not available in this document; please check the manufacturer's resources for the most current information.

© 2023 RYGHT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question