

PureGear 63573PG

PureGear PureBoom Bluetooth Portable Speaker Instruction Manual

Model: 63573PG

Brand: PureGear

INTRODUCTION

Thank you for purchasing the PureGear PureBoom Bluetooth Portable Speaker. This compact and versatile speaker delivers high-fidelity sound with deep bass and clear highs, perfect for on-the-go audio. It features Bluetooth 4.0 technology for easy wireless connectivity, a built-in microphone for hands-free calling, and multi-point connection technology to pair with two devices simultaneously. This manual provides essential information for setting up, operating, and maintaining your speaker.



Image: Front view of the PureGear PureBoom Bluetooth Portable Speaker, showcasing its compact black design with silver accents and control buttons at the base.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Refer to qualified service personnel.

- Keep the speaker away from water and liquids. It is not waterproof.
- Use only the provided charging cable or a certified equivalent.
- Dispose of the speaker and its battery responsibly according to local regulations.

PACKAGE CONTENTS

Ensure all items are present in the package:

- PureGear PureBoom Bluetooth Portable Speaker
- USB Charging Cable
- Instruction Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls:



Image: Close-up view of the PureGear PureBoom speaker's base, highlighting the control buttons: Mode (M), Previous Track/Volume Down, Play/Pause/Call, Next Track/Volume Up.

- **Speaker Grille:** Top surface for audio output.
- **LED Indicator:** Displays status (pairing, charging, connected).
- **Microphone:** For hands-free calling.
- **Control Buttons:**
 - **M (Mode):** Switches between modes (if applicable, e.g., Bluetooth, TF card).
 - **◀ (Previous Track / Volume Down):** Short press for previous track, long press for volume down.
 - **▶ ||| (Play / Pause / Call):** Short press to play/pause, short press to answer/end call, long

press to reject call.

- ► **(Next Track / Volume Up):** Short press for next track, long press for volume up.

- **Charging Port:** Micro USB port for charging.
- **TF Card Slot:** For playing music directly from a MicroSD/TF card (if applicable).

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. A full charge takes approximately 1.5 hours.

1. Connect the small end of the USB charging cable to the charging port on the speaker.
2. Connect the large end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off when fully charged.

2. Powering On/Off

- **To Power On:** Long press the ► ■■ (Play/Pause/Call) button until you hear an audible prompt and the LED indicator flashes.
- **To Power Off:** Long press the ► ■■ (Play/Pause/Call) button again until you hear an audible prompt and the LED indicator turns off.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

The PureBoom speaker uses Bluetooth 4.0 for wireless connection.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (LED indicator will be flashing rapidly).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "PureBoom" from the list of devices.
4. Once connected, the LED indicator will stop flashing and remain solid, and you will hear a confirmation sound.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.



Image: A hand holding the compact PureGear PureBoom speaker, demonstrating its portability and small size.

2. Hands-Free Calling

The built-in microphone allows for convenient hands-free calls when connected to your smartphone.

- **Answer Call:** Short press the ► ■■ (Play/Pause/Call) button when an incoming call rings.
- **End Call:** Short press the ► ■■ (Play/Pause/Call) button during a call.
- **Reject Call:** Long press the ► ■■ (Play/Pause/Call) button when an incoming call rings.

3. Music Playback

- **Play/Pause:** Short press the ► ■■ (Play/Pause/Call) button.
- **Next Track:** Short press the ► (Next Track/Volume Up) button.
- **Previous Track:** Short press the ◀ (Previous Track/Volume Down) button.
- **Volume Up:** Long press the ► (Next Track/Volume Up) button.
- **Volume Down:** Long press the ◀ (Previous Track/Volume Down) button.



Image: A visual representation of the PureBoom speaker with a play/pause icon, indicating its music control capabilities.

4. Multi-Point Connection

The speaker supports connecting to two Bluetooth devices simultaneously.

1. Pair the speaker with the first device as described in "Bluetooth Pairing".
2. Disable Bluetooth on the first device. The speaker will re-enter pairing mode.
3. Pair the speaker with the second device.
4. Re-enable Bluetooth on the first device. The speaker should now be connected to both devices.
5. Audio will play from the device that is actively streaming.

5. TWS (True Wireless Stereo) Pairing (If applicable)

If you have two PureBoom speakers, you can pair them together for a stereo sound experience.

1. Ensure both speakers are powered off.
2. Power on both speakers simultaneously. They will enter pairing mode.
3. Double-press the ►■ (Play/Pause/Call) button on one of the speakers. It will search for the other speaker.
4. Once successfully paired, you will hear a confirmation sound, and one speaker will act as the master (left channel) and the other as the slave (right channel).
5. Now, connect your device to the master speaker via Bluetooth.



Image: Two PureGear PureBoom speakers shown side-by-side with concentric circles, illustrating the ability to pair them for a stereo audio experience.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the speaker regularly, even if not in frequent use. Avoid fully discharging the battery for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker for at least 1.5 hours.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Bluetooth disabled on device; device too far.	Ensure speaker is flashing LED; enable Bluetooth on device; move device closer (within 30 feet). Forget "PureBoom" on device and re-pair.
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both speaker and device. Ensure speaker is successfully paired.
Sound distortion.	Device volume too high; speaker too far from device.	Reduce volume on device. Move speaker closer to device.
Cannot connect to two devices (Multi-point).	Incorrect pairing sequence.	Follow the multi-point connection steps precisely. Ensure both devices are within range.

SPECIFICATIONS

Model Name	PureGear PureBoom
Model Number	63573PG
Connectivity Technology	Bluetooth 4.0
Wireless Range	Up to 30 feet (9 meters)
Audio Output Mode	Stereo
Battery Life	Up to 6 hours (playback)
Standby Time	30 hours
Charging Time	Approximately 1.5 hours
Built-in Microphone	Yes
Dimensions (D x W x H)	1.77"D x 2.76"W x 2.76"H
Item Weight	0.24 Pounds (3.84 ounces)

Color	Black
Material	Plastic
UPC	810032996000

WARRANTY AND SUPPORT

Lifetime Warranty: PureGear offers a Lifetime Warranty for the PureBoom Bluetooth Portable Speaker. Please retain your proof of purchase for warranty claims.

30-Day Money Back Guarantee: If you are not satisfied with your purchase, you may be eligible for a refund within 30 days of purchase. Refer to your retailer's return policy.

For technical support, warranty claims, or further assistance, please visit the official PureGear website or contact their customer service. You can also refer to the [PureGear Store on Amazon](#) for more information.
