

Manuals.plus /

› Disney /

› Disney Princess Style Collection Play Phone & Stylish Clutch Case Instruction Manual

Disney 221311



Disney Princess Style Collection Play Phone & Stylish Clutch Case

Model: 221311

INTRODUCTION

Welcome to the enchanting world of the Disney Princess Style Collection Play Phone & Stylish Clutch Case. This electronic play set is designed for imaginative play, allowing young users to engage in pretend conversations and fashion-forward adventures. It features a play smartphone with realistic sounds and lights, a stylish clutch case with a mirror, a clip-on play lip gloss, and play credit cards.



Image: The Disney Princess Style Collection Play Phone and Stylish Clutch Case, showcasing the pink clutch, play phone, and lip gloss.

WHAT'S INCLUDED

Your Disney Princess Style Collection Play Phone & Stylish Clutch Case includes the following components:

- 1 Play Phone
- 1 Stylish Clutch Case with Mirror
- 1 Play Lip Gloss with Lid
- 2 Play Credit Cards
- 3 Button Cell Batteries (pre-installed)

SETUP

The Disney Princess Style Collection Play Phone comes with 3 button cell batteries already installed. No additional setup is required to begin play. If the sounds or lights become dim, refer to the maintenance section for battery replacement instructions.

OPERATING INSTRUCTIONS

Using the Play Phone

1. **Activate Sounds & Lights:** Press the button located on the play phone to activate realistic sounds and lights. The phone features 7 different sounds to enhance imaginative play.
2. **Pretend Calls:** The phone is designed to spontaneously ring, simulating a real incoming call, adding to the immersive play experience.

Using the Stylish Clutch Case

- **Storing the Phone:** The play phone fits securely inside the clutch case.
- **Mirror Function:** Open the clutch case to reveal a mirror, perfect for pretend make-up application with the included lip gloss.
- **Credit Card Storage:** The clutch case includes slots for the two play credit cards, allowing for pretend shopping scenarios.

Using the Play Lip Gloss

- **Clip-on Feature:** The play lip gloss can be clipped onto the handle of the clutch case for easy carrying and access during play.
- **Pretend Application:** Use the lip gloss with the clutch mirror for realistic pretend make-up play.

MAINTENANCE

Cleaning

Wipe the play phone and clutch case with a soft, damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.

Battery Replacement

The play phone requires 3 button cell batteries. To replace, locate the battery compartment on the back of the phone, open it with a small screwdriver (not included), replace the old batteries with new ones of the same type, and securely close the compartment.

TROUBLESHOOTING

If the play phone is not functioning correctly (e.g., no sound, no lights), please check the following:

- Ensure the batteries are correctly inserted with the proper polarity.
- Replace the batteries with fresh ones if they are old or depleted.
- If issues persist, contact customer support for further assistance.

SPECIFICATIONS

- **Brand Name:** Disney
- **Model Number:** 221311
- **UPC:** 192995221314
- **Item Type Name:** Pretend Electronics

- **Material Type:** Plastic
- **Color:** Style Collection Play Smart Phone
- **Item Dimensions:** 8.5 x 1.25 x 8 inches
- **Manufacturer Minimum Age:** 36 Months
- **Manufacturer Maximum Age:** 72 Months
- **Educational Objective:** Emotional Intelligence, Imagination Development
- **Batteries:** 3 Button Cell Batteries (included)

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.

Always supervise young children during play to prevent accidental ingestion of small parts. Ensure all components are securely attached before play.

WARRANTY & SUPPORT

This product is provided without a manufacturer's warranty. For any product inquiries or support, please refer to the retailer's return policy or contact the manufacturer, Jakks Pacific Inc., directly.