

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Homdox](#) /
- › [Homdox Electric Pressure Washer H17 User Manual](#)

## Homdox H17

# Homdox Electric Pressure Washer H17 User Manual

Model: H17 | Brand: Homdox

[Safety Information](#)   [Package Contents](#)   [Setup](#)   [Operating Instructions](#)   [Maintenance](#)  
[Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating the Homdox Electric Pressure Washer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Electrical Safety:** Always connect the pressure washer to a grounded outlet. Do not use with damaged cords or plugs. Keep all connections dry and off the ground.
- **Water Pressure:** The high-pressure stream can cause serious injury. Never direct the spray at people, pets, or electrical devices.
- **Personal Protective Equipment:** Always wear safety glasses, hearing protection, and appropriate clothing when operating the pressure washer.
- **Chemicals:** Use only pressure washer safe detergents. Follow detergent manufacturer's instructions for use and disposal.
- **Stability:** Operate the pressure washer on a stable, level surface to prevent tipping.
- **Children and Pets:** Keep children and pets away from the operating area.
- **Before Use:** Inspect the unit for any damage before each use. Do not operate if damaged.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package before assembly and operation.

- Homdox Electric Pressure Washer Unit
- High-Pressure Hose (20 Feet)
- Spray Gun

- Adjustable Nozzles (5 types: 0°, 15°, 25°, 40°, Soap)
- Detergent Tank
- Water Inlet Connector
- User Manual



Image: The Homdox Electric Pressure Washer unit shown with its various components and accessories, including the spray gun, hose, and nozzles.

# 5 ADJUSTABLE NOZZLE

EASILY TWIST THE NOZZLE UNTIL YOU REACH THE APPROPRIATE SETTING,  
ADJUST ACCORDING TO YOUR CLEANING PROJECT.



0°

## PENCIL NOZZLE

Capable of cleaning the most stubborn grime and dirt



15°

## FAN NOZZLE

Works like a stripping grease and hard surfaces



25°

## ROTATING NOZZLE

Good for cleaning wood, sidings and fences



40°

## DETERGENT INJECTION NOZZLE

Low pressure spray safe for windows and vehicles



60°

## SOAP NOZZLE

For liquid soap



Image: A detailed view of the five adjustable nozzles (0°, 15°, 25°, 40°, and soap nozzle) with descriptions of their uses.

ONBOARD, REMOVABLE  
TANKS CARRY AND STORE DIFFERENT  
TYPES OF DETERGENT DIFFERENT  
CLEANING PROJECTS



Cable Stock



Detergent Tank

Image: Close-up of the pressure washer showing the onboard, removable detergent tank and the cable stock for organized storage.

### 3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Handle:** Attach the handle to the main unit if it is not pre-assembled. Ensure it clicks securely into place.
3. **Connect High-Pressure Hose:**
  - Connect one end of the high-pressure hose to the outlet on the pressure washer unit. Tighten by hand.
  - Connect the other end of the high-pressure hose to the spray gun. Tighten by hand.
4. **Connect Water Supply:**

- Attach a standard garden hose (not included) to the water inlet connector on the pressure washer.
  - Connect the garden hose to a water faucet.
  - Turn on the water faucet completely. Ensure there are no leaks.
5. **Connect Power:** Plug the power cord into a grounded 120V AC electrical outlet. Ensure the outlet is protected by a Ground Fault Circuit Interrupter (GFCI).

Your browser does not support the video tag.

Video: This video demonstrates the unboxing and initial setup of the Homdox pressure washer, followed by its use in cleaning a driveway and a truck. It showcases the product's power and effectiveness.

## 4. OPERATING INSTRUCTIONS

---

1. **Purge Air from System:** Before turning on the power, squeeze the trigger on the spray gun to allow water to flow through the system and expel any trapped air. Continue until a steady stream of water emerges.
2. **Start the Pressure Washer:** Turn the ON/OFF switch to the "ON" position. The motor will start.
3. **Select Nozzle:** Choose the appropriate nozzle for your cleaning task.
  - **0° (Red) Pencil Nozzle:** For stubborn grime and dirt. Use with extreme caution.
  - **15° (Yellow) Fan Nozzle:** For stripping grease and hard surfaces.
  - **25° (Green) Rotating Nozzle:** Good for cleaning wood, sidings, and fences.
  - **40° (White) Detergent Injection Nozzle:** Low pressure spray, safe for windows and vehicles.
  - **Soap Nozzle (Black):** For liquid soap application.

# 5 ADJUSTABLE NOZZLE

EASILY TWIST THE NOZZLE UNTIL YOU REACH THE APPROPRIATE SETTING, ADJUST ACCORDING TO YOUR CLEANING PROJECT.

				
0°	15°	25°	40°	60°
<b>PENCIL NOZZLE</b>	<b>FAN NOZZLE</b>	<b>ROTATING NOZZLE</b>	<b>DETERGENT INJECTION NOZZLE</b>	<b>SOAP NOZZLE</b>
Capable of cleaning the most stubborn grime and dirt	Works like a striping grease and hard surfaces	Good for cleaning wood, sidings and fences	Low pressure spray safe for windows and vehicles	For liquid soap
				

Image: Visual guide to the five color-coded nozzles and their recommended applications for various cleaning tasks.

- Attach Nozzle:** Pull back the collar on the spray gun, insert the desired nozzle, and release the collar to lock it in place. Tug on the nozzle to ensure it is secure.
- Apply Detergent (Optional):** If using detergent, fill the detergent tank with pressure washer safe soap. Attach the black soap nozzle or 40° white nozzle. The pressure washer will automatically draw detergent when operating at low pressure.
- Begin Cleaning:** Hold the spray gun firmly with both hands. Start spraying from a safe distance (e.g., 12-18 inches) and move closer as needed, observing the surface for any damage. Maintain a consistent distance for even cleaning.
- Stop Operation:** Release the trigger to stop the water flow. Turn the ON/OFF switch to the "OFF" position. Turn off the water faucet. Squeeze the trigger to release any remaining pressure in the system.



Image: A collage showing the Homdox pressure washer being used for vehicle cleaning, patio cleaning, moss cleaning, watering plants, pet bathing, and debris cleaning.

## Easy to Move



Image: A person using the Homdox pressure washer to clean a car, demonstrating its application for vehicle maintenance.

## 5. MAINTENANCE

### 5.1 After Each Use

- **Rinse Detergent Tank:** If detergent was used, rinse the detergent tank thoroughly with clean water to prevent clogging.
- **Flush System:** Run clean water through the pressure washer for a few minutes with the spray gun trigger depressed to flush out any remaining detergent or debris.
- **Disconnect:** Turn off the pressure washer and water supply. Disconnect the garden hose and high-pressure hose.
- **Clean Nozzles:** Remove nozzles and clean any blockages with the included nozzle cleaning tool or a thin wire.
- **Wipe Down:** Wipe the exterior of the unit with a damp cloth.

### 5.2 Storage

- **Drain Water:** Ensure all water is drained from the pump, hoses, and spray gun to prevent freezing

damage. Run the pump for a few seconds after disconnecting the water supply to expel excess water.

- **Store in a Dry, Frost-Free Area:** Store the pressure washer in an area where the temperature will not drop below freezing.
- **Organize Hoses and Cords:** Wrap the high-pressure hose and power cord neatly. The unit features a cable stock for organized storage.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor does not start	Power cord not plugged in. GFCI tripped. No power at outlet. ON/OFF switch in "OFF" position.	Plug in power cord. Reset GFCI. Check circuit breaker. Turn switch to "ON".
Low or no pressure	Water supply off or restricted. Air in pump. Nozzle clogged. Incorrect nozzle selected. Inlet filter clogged.	Turn on water supply fully; check for kinks in hose. Purge air from system (see Operating Instructions). Clean nozzle. Select appropriate high-pressure nozzle. Clean inlet filter.
Water leaks	Loose connections. Damaged O-rings.	Tighten all connections. Replace damaged O-rings.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Homdox
Model Number	H17
Power Source	Corded Electric
Power Rating	1800W
Hose Length	20 Feet
Product Dimensions (L x W x H)	13.8" x 12.6" x 27.8"
Item Weight	17.61 pounds
UPC	194349014467
Safety Certification	CSA

## 8. WARRANTY AND SUPPORT

Homdox products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your product or visit the official Homdox website. Keep your purchase receipt as proof of purchase.

For technical support, replacement parts, or service inquiries, please contact Homdox customer service through the contact information provided in your product documentation or on the official Homdox website.

**Online Resources:**

- [Homdox Amazon Store](#)