

[Manuals.plus](#) /

› [Zizo](#) /

› ZIZO Roar Z7 Portable Wireless Speaker User Manual

Zizo SPK-RRZ7-BLK

ZIZO Roar Z7 Portable Wireless Speaker User Manual

Model: SPK-RRZ7-BLK

INTRODUCTION

The ZIZO Roar Z7 is an 80W portable wireless speaker designed to deliver powerful stereo sound with enhanced bass frequencies. It features advanced wireless technology for effortless connection to various devices, FM radio, and support for USB, TF, and AUX inputs. The speaker is equipped with awe-inspiring LED lights and is IPX5 water resistant, making it suitable for various environments. It includes a 4,400mAh battery for extended playback.

WHAT'S IN THE BOX



Image: ZIZO Roar Z7 speaker and its retail packaging, showing included accessories.

- 1 x ZIZO ROAR Z7 Speaker
- 1 x USB Charging Cable
- 1 x AUX Cable
- 1 x FM Antenna
- 1 x User Manual

PRODUCT FEATURES

- **80W Max Power:** Delivers powerful and immersive sound.
- **TWS Technology:** Allows wireless connection of two ZIZO ROAR Z7 speakers for stereo sound.
- **Advanced Bluetooth Streaming:** Seamlessly connects to smartphones, laptops, and gaming consoles.
- **Multi-Input Support:** Includes FM radio, USB, TF card, and AUX inputs.
- **Rechargeable Battery:** Built-in 4,400mAh Lithium-ion battery for extended playback.
- **IPX5 Water Resistant:** Provides protection against water splashes.
- **LED Lights:** Awe-inspiring LED display for visual enhancement.
- **Portable Design:** Compact and easy to carry.

SETUP GUIDE

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status.

2. Power On/Off

Press and hold the Power button for approximately 3 seconds to turn the speaker ON or OFF.

3. Bluetooth Pairing

1. Turn on the ZIZO Roar Z7 speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "ZIZO ROAR Z7" from the list of devices.
4. Once paired, the LED indicator will become solid, and you will hear a confirmation tone.

4. TWS (True Wireless Stereo) Pairing

To use two ZIZO Roar Z7 speakers for a true wireless stereo experience:

1. Ensure both ZIZO Roar Z7 speakers are turned on and not connected to any Bluetooth device.
2. On one speaker, press and hold the TWS button (if available, or a specific pairing button as per manual) until you hear a tone, indicating it's searching for another speaker.
3. The two speakers will automatically connect to each other. Once connected, one speaker will act as the master (left channel) and the other as the slave (right channel).
4. Now, connect your device via Bluetooth to the master speaker as described in step 3.

5. FM Radio Operation

Connect the supplied FM antenna to the AUX port for better reception. Press the Mode button to switch to FM Radio mode. Use the Play/Pause button to auto-scan and save stations. Use the Volume +/- buttons to navigate between saved stations.

6. USB/TF Card/AUX Playback

Insert a USB drive or TF (microSD) card into the respective slot. The speaker will automatically switch to the corresponding mode and begin playback. For AUX input, connect your device using the supplied AUX cable to the AUX port. Press the Mode button to cycle through input sources if it doesn't switch automatically.

OPERATING INSTRUCTIONS





Image: Top view of the ZIZO Roar Z7 speaker, highlighting the control panel with buttons and LED indicators.

Button Functions

Button	Function
Power Button	Press and hold for 3 seconds to Power ON/OFF.
Mode Button	Short press to switch between Bluetooth, FM, USB, TF, and AUX modes.
Play/Pause Button	Short press to Play/Pause music. In FM mode, short press to auto-scan and save stations.
Volume - / Previous Track	Short press for Previous Track. Long press to decrease Volume. In FM mode, short press for previous station.
Volume + / Next Track	Short press for Next Track. Long press to increase Volume. In FM mode, short press for next station.
TWS Button	Press to initiate TWS pairing with another ZIZO Roar Z7 speaker.
LED Light Button	Press to cycle through LED light modes or turn them off.

LED Indicators

- **Flashing Blue LED:** Bluetooth pairing mode.
- **Solid Blue LED:** Bluetooth connected.
- **Red LED (Charging):** Speaker is charging.
- **LED Off (Charging):** Speaker is fully charged.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The speaker is IPX5 water resistant, meaning it can withstand splashes. Do not submerge the speaker in water or expose it to heavy rain. Ensure all port covers are securely closed before exposure to water.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before storing it for extended periods. Recharge every 3-6 months if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; device Bluetooth is off; speaker is too far from device.	Ensure speaker is flashing blue LED. Turn device Bluetooth ON. Move speaker closer to device (within 35 ft). Forget "ZIZO ROAR Z7" on your device and re-pair.
No sound.	Volume too low; incorrect input mode; device not playing.	Increase volume on both speaker and device. Press Mode button to select correct input. Ensure music is playing on your device.
Poor FM radio reception.	Antenna not connected or poor signal.	Ensure FM antenna is securely connected to the AUX port. Try repositioning the speaker or antenna.
TWS pairing fails.	Speakers are already connected to a device; speakers are too far apart.	Disconnect both speakers from any Bluetooth devices. Ensure speakers are close to each other during TWS pairing.

SPECIFICATIONS

Model Name	ZIZO Roar Z7 (SPK-RRZ7-BLK)
Max Power Output	80 Watts
Battery Capacity	4,400 mAh Lithium-ion
Connectivity	Bluetooth, Auxiliary (AUX), USB, TF Card
Bluetooth Transmission Distance	Up to 35 ft (10.6 meters)
Water Resistance Rating	IPX5
Audio Output Mode	Stereo
Included Components	FM antenna, USB cable, AUX cable
Dimensions (Approx.)	41.27 x 26.67 x 25.4 cm
Weight (Approx.)	5.62 kg

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.

- Do not disassemble, repair, or modify the speaker. This will void the warranty and may cause damage.
- Keep the speaker away from strong magnetic fields.
- Do not use the speaker near water sources if port covers are not securely closed.
- Dispose of the battery and speaker responsibly according to local regulations.
- Avoid listening at high volumes for extended periods to prevent hearing damage.

WARRANTY AND SUPPORT

The ZIZO Roar Z7 speaker comes with a **1-Year Manufacturer's Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage caused by misuse, accident, unauthorized modification, or external causes such as drops, liquid damage, or power surges.

For warranty claims or technical support, please contact ZIZO customer service through their official website or the retailer where the product was purchased. Please have your proof of purchase and product model number (SPK-RRZ7-BLK) ready.

For more information, visit: www.zizowireless.com

© 2024 Zizo. All rights reserved. ZIZO and ROAR Z7 are trademarks of Zizo.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

