

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [beFree Sound](#) /

› [beFree Sound 2.1 Channel Bluetooth Multimedia LED Dancing Water Sound System \(BFS-Dancing Water\) Instruction Manual](#)

beFree Sound BFS-Dancing Water

beFree Sound 2.1 Channel Bluetooth Multimedia LED Dancing Water Sound System (BFS-Dancing Water) Instruction Manual

Model: BFS-Dancing Water

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the beFree Sound 2.1 Channel Bluetooth Multimedia LED Dancing Water Sound System. This system is designed to provide an immersive audio-visual experience with dynamic water and light effects synchronized to your music. This manual will guide you through the setup, operation, and maintenance of your new sound system.

Key Features:

- 2.1 Channel Audio System
- Bluetooth Connectivity for wireless audio streaming
- Aux-In Connection for wired devices
- Dynamic LED Dancing Water Display
- Includes 1 Subwoofer and 2 Satellite Water Speakers



Image: The beFree Sound 2.1 Channel Bluetooth Multimedia LED Dancing Water Sound System, featuring a central subwoofer and two satellite speakers with illuminated water jets.

2. PACKAGE CONTENTS

Please ensure all items are present in the package:

- 1 x Subwoofer
- 2 x Satellite Water Speakers
- 1 x Power Adapter
- 1 x Audio Cable (Aux-in)
- Instruction Manual (this document)

3. SETUP INSTRUCTIONS

- Placement:** Place the subwoofer on a stable, flat surface. Position the two satellite water speakers on either side of the subwoofer for optimal stereo sound and visual effect. Ensure adequate space around the speakers for ventilation.
- Connect Satellite Speakers:** Connect the cables from the two satellite water speakers to the corresponding output ports on the back of the subwoofer. Ensure connections are firm.
- Power Connection:** Connect the power adapter to the DC input port on the subwoofer, then plug the adapter into a standard electrical outlet.
- Power On:** Locate the power switch on the subwoofer and turn the unit ON. The LED lights on the speakers should illuminate, indicating the system is powered on.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Connection

1. Ensure the sound system is powered on.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices. The sound system should appear as "BFS-Dancing Water" or a similar name.
4. Select the sound system to pair. Once paired, you will hear an audible confirmation, and the LED lights may change to indicate a successful connection.
5. You can now play audio from your device, and the water and lights will react to the music.

4.2 Aux-In Connection

1. Connect one end of the provided audio cable (3.5mm jack) to the AUX-IN port on the subwoofer.
2. Connect the other end of the audio cable to the headphone jack or audio output port of your external device (e.g., MP3 player, computer, TV).
3. The system should automatically switch to AUX mode. If not, use the 'Mode' button on the subwoofer (if available) to select AUX.
4. Play audio from your device.

4.3 Controls

The subwoofer typically features controls for:

- **Power ON/OFF:** To turn the system on or off.
- **Volume Control:** To adjust the overall sound volume.
- **Mode Button:** To switch between input sources (e.g., Bluetooth, Aux-In).
- **Playback Controls:** Play/Pause, Next Track, Previous Track (may vary by model).

Refer to the specific button layout on your subwoofer for exact functionality.

4.4 LED Dancing Water Feature

The LED dancing water feature activates automatically when music is played through the system. The water jets and multi-colored LEDs will synchronize with the beat and volume of the audio, creating a dynamic visual display.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the exterior of the subwoofer and satellite speakers. Do not use abrasive cleaners or solvents. For the clear water chambers, a slightly damp cloth can be used, but avoid getting water into any electronic components.
- **Water Care:** The water in the satellite speakers is sealed. Do not attempt to open or refill the water chambers. Any tampering may void the warranty and damage the product.
- **Storage:** When not in use for extended periods, power off the system and unplug it from the power outlet. Store in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely plugged into the subwoofer and a working electrical outlet.
No sound	Volume too low, incorrect input mode, or device not connected properly.	Increase volume on both the sound system and your connected device. Check if the correct input mode (Bluetooth/Aux) is selected. Reconnect Bluetooth or Aux cable.
Bluetooth pairing failure	Device too far, Bluetooth not enabled, or interference.	Ensure your device's Bluetooth is on and within 10 meters of the speaker. Turn off and on both devices, then try pairing again. Clear previous Bluetooth connections on your device.
Water not dancing/LEDs not working	No audio playing, volume too low, or system malfunction.	Ensure music is playing and volume is sufficiently high. The water and lights react to audio input. If the issue persists, power cycle the unit.

7. SPECIFICATIONS

- **Model Name:** BFS-Dancing Water
- **Brand:** beFree Sound
- **Connectivity Technology:** Bluetooth, Auxiliary
- **Speaker Type:** Satellite, Subwoofer
- **Surround Sound Channel Configuration:** 2.1
- **Speaker Maximum Output Power:** 100 Watts

- **Frequency Response:** 220Hz-13000Hz
- **Impedance:** 4 Ohms
- **Power Source:** Corded Electric
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Product Dimensions:** 13.5 x 10.5 x 7.5 inches
- **Item Weight:** 7.83 pounds (3.56 Kilograms)
- **Wireless Communication Technology:** Bluetooth (Range: 10 Meters)
- **Indoor/Outdoor Usage:** Indoor

8. WARRANTY AND SUPPORT

This beFree Sound product comes with a Limited Warranty. For specific details regarding warranty coverage and duration, please refer to the warranty card included in your product packaging or contact beFree Sound customer support.

For technical support, troubleshooting assistance, or inquiries about your product, please contact the manufacturer, beFree Sound, through their official support channels.

Return Policy: This product is eligible for a 30-day refund/replacement policy from Amazon. Please refer to Amazon's return policy for full details.

Optional Protection Plans:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases.

These plans offer additional coverage beyond the standard manufacturer's warranty. Please review the terms and conditions of each plan before purchase.