

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [SereneLife](#) /

› SereneLife Portable Inflatable Hot Tub Spa SLSPA4RND - 4-Seat Round Heated Pool Instruction Manual

SereneLife SLSPA4RND

SereneLife Portable Inflatable Hot Tub Spa

MODEL: SLSPA4RND (4-SEAT ROUND)

Brand: SereneLife

1. Introduction

This manual provides essential instructions for the safe and efficient operation, setup, and maintenance of your SereneLife Portable Inflatable Hot Tub Spa, Model SLSPA4RND. This 4-seat round heated pool features 100 high-powered bubble jets, a digital control panel, remote control, and color-changing LED lights, designed for relaxation and comfort.



Image 1.1: SereneLife Portable Inflatable Hot Tub Spa with included accessories.

2. Safety Information

Please read and understand all safety warnings and instructions before installing and using this product.

Failure to follow these instructions could result in injury or property damage.

- **Electrical Safety:** Always connect the hot tub to a grounded power outlet. Do not use extension cords. Ensure all electrical components are kept dry.
- **Water Temperature:** The maximum safe water temperature is 40°C (104°F). Prolonged immersion in hotter water can be hazardous to your health.
- **Children:** Supervise children at all times when they are near or in the hot tub. Always use the fitted cover when the hot tub is not in use.
- **Chemicals:** Handle water treatment chemicals according to manufacturer's instructions. Keep chemicals out of reach of children.
- **Health Conditions:** Consult a physician before use if you have any health conditions, are pregnant, or are taking medication.
- **Placement:** Ensure the hot tub is placed on a flat, stable surface capable of supporting its weight when filled with water and occupants.

3. Package Contents

Verify that all items listed below are present in your package:

- Inflatable Hot Tub Spa (Main Unit)
- Fitted Cover with Foil Inside
- Filter Cartridge (1)
- Inflatable Hose
- Ground Pad
- Repair Kit
- Remote Control (Battery Operated, requires 1 x Button Battery for LED)
- LED Lights (17.1 ft length)



Image 3.1: All included components for the hot tub setup.

4. Setup Instructions

- 1. Choose Location:** Select a flat, stable, and level surface for your hot tub. Ensure it is close to a grounded electrical outlet and a water source.
- 2. Lay Ground Pad:** Place the included ground pad on your chosen surface to protect the bottom of the hot tub.
- 3. Inflate Hot Tub:** Unfold the hot tub onto the ground pad. Connect the inflatable hose to the hot tub's air valve and the pump unit. Inflate the hot tub until it is firm but not over-inflated.
- 4. Install Filter:** Insert the filter cartridge into its housing inside the hot tub.
- 5. Fill with Water:** Fill the hot tub with water to the recommended level, typically indicated by a 'Min' and 'Max' line inside the tub.
- 6. Connect Power:** Plug the hot tub's power cord into a grounded electrical outlet.
- 7. Install LED Lights:** Carefully install the LED light strip around the base of the hot tub as per the specific instructions provided with the LED kit. Ensure all connections are secure and waterproof.



Image 4.1: The SereneLife Inflatable Hot Tub Spa ready for use.

5. Operating Instructions

Your hot tub is equipped with a digital control panel and a remote control for easy operation.

5.1 Digital Control Panel

The digital control panel allows you to manage the hot tub's functions directly. Refer to the icons on the panel for specific controls related to heating, bubble jets, and filtration.

5.2 Remote Control

The remote control provides convenient access to adjust temperature, activate the massage system, and control the LED lights without leaving the hot tub.



Image 5.1: Using the remote control to manage hot tub functions.

5.3 Heating Function

- The heater maintains water temperature between 38°C (100.4°F) and 40°C (104°F).
- Use the digital panel or remote to set your desired temperature.
- Heating time can vary based on ambient temperature and initial water temperature.

5.4 Bubble Jets

- Activate the 100 high-powered bubble jets via the control panel or remote for a massage experience.
- The air jets automatically stop after 20 minutes of continuous operation.
- To reset and restart the bubble jets, wait for 10 minutes, then press the bubble jet button again.



Image 5.2: The hot tub's 100 bubble jets provide a relaxing massage.

5.5 LED Color-Changing Lights

- The integrated LED lights illuminate in up to 7 different colors: White, Green, Yellow, Blue, Red, Purple, and Light Blue.
- Choose between two lighting modes: Single Color or Color Changing Mode.
- Control the LED lights using the remote control.



Image 5.3: The hot tub displaying various LED light colors.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your hot tub.

6.1 Filter Care

- Clean the filter cartridge regularly (e.g., weekly) by rinsing it with a hose.
- Replace the filter cartridge every 1-2 months, or more frequently with heavy use, to maintain water quality and pump efficiency.

6.2 Water Treatment

- Maintain proper water chemistry using appropriate hot tub sanitizers and pH balancers.
- Test water regularly to ensure safe and clean conditions.

6.3 Draining and Cleaning

- Drain the hot tub completely every 1-3 months, depending on usage.
- Use the drain valve to empty the water. Note that draining may take time.

- Clean the interior surface of the hot tub with a soft cloth and mild, non-abrasive cleaner. Rinse thoroughly.

6.4 Storage

- Ensure the hot tub is completely dry before deflating and storing.
- Deflate the hot tub using the inflatable hose in reverse mode or by opening the air valve.
- Fold neatly and store in a dry, protected area, away from direct sunlight and extreme temperatures.



Image 6.1: The fitted cover helps retain heat and protect the hot tub when not in use.

7. Troubleshooting

If you encounter issues with your hot tub, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hot tub not heating or heating slowly	Low ambient temperature; cover not properly installed; filter dirty; heater malfunction.	Ensure cover is sealed; clean/replace filter; allow more time for heating; contact support if heater malfunction is suspected. Note that bubble jets can cause temperature drops.
Bubble jets not working or weak	Automatic shut-off activated; air blower issue.	Wait 10 minutes after auto-shutoff, then restart. Ensure power supply is stable.
LED lights not functioning	Remote battery low; loose connection; LED strip damage.	Replace remote battery; check all connections; inspect LED strip for damage.
Water leakage or air loss	Puncture in liner; loose valve.	Locate puncture and use repair kit; ensure all valves are tightly closed.
Control panel unresponsive	Power interruption; internal fault.	Check power connection; try resetting by unplugging and replugging. If issue persists, contact support.

8. Specifications

Technical details for the SereneLife Portable Inflatable Hot Tub Spa (Model SLSPA4RND):

Feature	Detail
Model Number	SLSPA4RND
Seating Capacity	4-Seat
Water Capacity	800 Liters / 211 Gallons
Inner/Outer Diameter	71 inches
Height	25 inches
Item Weight	55.6 pounds
Construction Materials	Laminated and Durable PVC
Bubble Air Blower	1.1 hp / 110-120V
Heater	1200W
Power Supply	110-120V
Flow Rate	420 Gal/Hr.
Temperature Range	38-40°C (100.4-104°F)

Feature	Detail
Number of Bubble Jets	100
LED Light Length	17.1 ft.

SLSPA4RND

Dimension: 71" dia x 25" ht



Image 8.1: Key dimensions for the SLSPA4RND hot tub.

9. Warranty and Support

For warranty information, product support, or to inquire about replacement parts, please contact SereneLife customer service. Refer to the product packaging or the official SereneLife website for the most current contact details.

It is recommended to register your product upon purchase to facilitate any future warranty claims or support requests.

