

[manuals.plus](#) /› [Borne](#) /› [Borne MP3 Player Pluse User Manual](#)

Borne MP320-4RD

Borne MP3 Player Pluse User Manual

Model: MP320-4RD

1. INTRODUCTION

Thank you for purchasing the Borne MP3 Player Pluse. This ultra-compact and lightweight device is designed for convenient music playback on the go. With 4GB of internal storage, it can hold approximately 2400 songs, providing up to 16 hours of continuous music playback on a single charge. Its integrated clip allows for easy portability, attaching securely to clothing or bags.

Package Contents

- Borne MP3 Player Pluse (Model: MP320-4RD)
- Earphones
- USB Cable
- User Manual (this document)



Figure 1: Borne MP3 Player Pulse and its packaging. The image displays the compact red MP3 player, earphones, and USB cable.

highlighting its small size and portability.

2. SETUP

2.1 Charging the Battery

The Borne MP3 Player Pluse features a built-in rechargeable lithium battery. Before first use, fully charge the device.

1. Connect the small end of the supplied USB cable to the USB port on the MP3 player.
2. Connect the large end of the USB cable to a USB port on your computer or a compatible USB wall adapter (not included).
3. The charging indicator light (if present) will illuminate during charging and turn off or change color when fully charged.
4. A full charge typically takes approximately 2-3 hours.

Note: Do not use damaged cables or chargers. Ensure the device is charged in a well-ventilated area.

2.2 Connecting to a Computer

To transfer music files to your MP3 player, connect it to a personal computer.

1. Ensure the MP3 player is charged or connected to a power source.
2. Connect the MP3 player to your computer using the supplied USB cable.
3. Your computer should recognize the device as a removable disk drive.
4. Open the drive to access the player's internal storage.
5. Drag and drop your MP3 or WMA audio files into the player's storage folder.
6. Once file transfer is complete, safely eject the device from your computer before disconnecting the USB cable to prevent data corruption.

3. OPERATING INSTRUCTIONS

3.1 Basic Controls

The Borne MP3 Player Pluse features intuitive controls for easy navigation and playback. Refer to the device for button layout.

- **Power On/Off:** Press and hold the Power button (often combined with Play/Pause) for a few seconds.
- **Play/Pause:** Press the Play/Pause button once to play or pause the current track.
- **Next Track:** Press the Next button (usually a right arrow or skip icon) to skip to the next song.
- **Previous Track:** Press the Previous button (usually a left arrow or skip icon) to go back to the beginning of the current song, or to the previous song if pressed again quickly.
- **Volume Up:** Press the Volume Up button (often marked with '+') to increase the playback volume.
- **Volume Down:** Press the Volume Down button (often marked with '-') to decrease the playback volume.

borne



4GB Clip MP3 Player

- MP3 and WMA playback
- Ultra compact & lightweight
- Clip for convenience and portability
- Built-in rechargeable lithium battery

Lecteur MP3 de 4 Go à pince

- Lecture MP3 et WMA
- Ultra compact et léger
- Doté d'une pince pratique offrant une portabilité
- Pile au lithium rechargeable intégrée

Reproductor MP3 de 4GB de pinza

- Reproducción MP3 y WMA
- Ultra compacto y liviano
- Pinza para conveniencia y portabilidad
- Pila recargable de litio integrada

320 SERIES/SÉRIE/SERIE

Other brand names mentioned herein are for identification purposes only and may be trademarks of their respective holder(s).
**The amount of hours and songs are estimated values only. Actual values will vary depending on the bitrate of each track.

Les autres noms de marques mentionnés sur le présent emballage le sont à des fins d'identification seulement et peuvent être des marques déposées de leurs propriétaires respectifs.

**Le nombre d'heures et de chansons sont à titre d'estimation seulement. Les valeurs réelles varient selon la vitesse de transmission de chaque piste.

Otros nombres de marcas mencionados en la presente son para propósito de identificación solamente y estas pueden ser marcas registradas de sus respectivos propietarios.

**La cantidad de horas y de canciones son un estimado solamente. Los valores actuales variarán dependiendo del bitrate de cada pista.



Made in China
Fabriqué en Chine
Hecho en China

Imported by/ Importé par/
importado por:
Edco Electronics, Montreal,
QC, H2P 2R7

www.borne-lifestyle.com

MP320-4RD



6 91768 00198 1

Figure 2: Rear view of the Borne MP3 Player Pluse packaging, illustrating the integrated clip for portability. The image also details key features like MP3/WMA playback and built-in rechargeable battery.

3.2 Playing Music

1. Ensure your earphones are securely plugged into the 3.5mm audio jack on the player.
2. Power on the device.
3. Music playback should begin automatically. If not, press the Play/Pause button.
4. Adjust volume using the Volume Up/Down buttons.
5. Use the Next/Previous buttons to navigate through your music library.

3.3 Managing Files

Files are managed by connecting the device to a computer as described in Section 2.2. You can create folders on the device to organize your music, though the player may play all files sequentially regardless of folder structure depending on its firmware.

4. MAINTENANCE

4.1 Cleaning

- Wipe the exterior of the player with a soft, dry, lint-free cloth.
- Do not use liquid cleaners, aerosols, or solvents.
- Keep the USB port and headphone jack free of dust and debris.

4.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use, to maintain battery health.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted.	Charge the device fully using the supplied USB cable.
No sound from earphones.	Earphones not properly connected; Volume too low; Corrupt audio file.	Ensure earphones are fully plugged in. Increase volume. Try playing a different audio file. Test earphones with another device.
Computer does not recognize the device.	Loose USB connection; Damaged USB cable; Driver issue.	Ensure USB cable is securely connected to both the player and the computer. Try a different USB port. Try a different USB cable. Restart your computer.
Cannot transfer files.	Device not recognized; Insufficient storage space; File format not supported.	Refer to "Computer does not recognize the device" solution. Check available storage space on the player. Ensure files are MP3 or WMA format.

Problem	Possible Cause	Solution
Short battery life.	Battery not fully charged; Aging battery.	Ensure the device is fully charged before use. Battery capacity naturally decreases over time.

6. SPECIFICATIONS

Feature	Detail
Brand	Borne
Model Name	Pluse
Model Number	MP320-4RD
Storage Capacity	4 GB (approximately 2400 songs)
Compatible Audio Formats	MP3, WMA
Battery Type	Built-in Rechargeable Lithium Battery
Battery Life	Up to 16 hours (approximate)
Connectivity	USB
Compatible Devices	Personal Computer
Included Components	Earphones, USB Cable
Color	Red
Dimensions (Parcel)	16.1 x 10.4 x 2.8 cm
Weight (Parcel)	100 g

Note: The device itself does not feature a display screen, despite some packaging references to screen size. All operations are button-based.

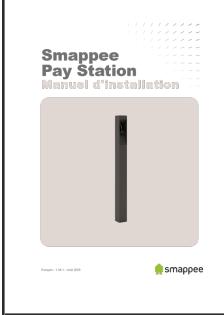
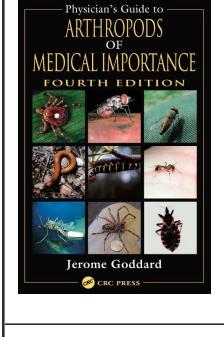
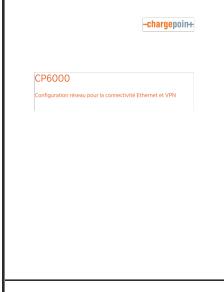
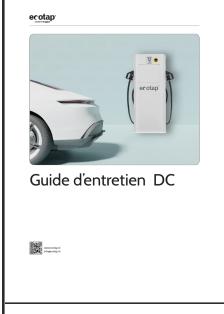
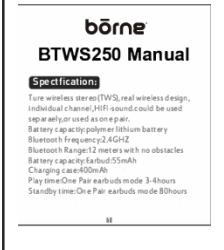
7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Borne website. Keep your proof of purchase for warranty claims.

Website: www.borne-lifestyle.com

UPC: 0691768001981

Related Documents - MP320-4RD

	<p>Smappee Pay Station : Manuel d'installation - Guide Complet pour Bornes de Recharge Électrique</p> <p>Ce manuel d'installation détaillé guide les professionnels dans la mise en place, la configuration et l'utilisation de la Smappee Pay Station, une solution de paiement pour bornes de recharge de véhicules électriques. Retrouvez toutes les spécifications, procédures et conseils pour une installation réussie.</p>
	<p>Guide d'installation ChargePoint Flex Series : Installation et Configuration</p> <p>Manuel d'installation complet pour la borne de recharge électrique ChargePoint Flex Series. Inclut les étapes de sécurité, câblage, configuration et activation.</p>
	<p>Physician's Guide to Arthropods of Medical Importance - Fourth Edition</p> <p>A comprehensive guide for physicians and healthcare providers on arthropods of medical significance, detailing their role in diseases, identification, and treatment of stings and bites.</p>
	<p>ChargePoint CP6000 : Configuration Réseau Ethernet et VPN</p> <p>Ce guide fournit des instructions détaillées pour configurer la connectivité réseau Ethernet et VPN pour la borne de recharge ChargePoint CP6000, incluant l'installation, la configuration et le dépannage.</p>
	<p>Guide d'Entretien des Bornes de Recharge Ecotap DC</p> <p>Manuel d'entretien détaillé pour les bornes de recharge Ecotap DC, couvrant les conseils de sécurité, les procédures de maintenance préventive et corrective, et la planification des interventions pour assurer la performance et la longévité des équipements.</p>
	<p>Borne BTWS250 TWS Bluetooth Earphones User Manual and Specifications</p> <p>Comprehensive guide to the Borne BTWS250 TWS Bluetooth earphones, covering specifications, pairing instructions, touch controls, and FCC compliance information.</p>