

[Manuals.plus](#) /

> [Kircuit](#) /

> Kircuit AC/DC Adapter Instruction Manual for Wacom Cintiq 22HD (DTK-2200, DTH-2200)

Kircuit AC/DC Adapter for Wacom DTK-2200, DTH-2200

Kircuit AC/DC Adapter Instruction Manual

For Wacom Cintiq 22HD (Models DTK-2200, DTH-2200)

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Kircuit AC/DC Adapter. This power supply is designed to be compatible with Wacom Cintiq 22HD models DTK-2200 and DTH-2200. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- **Voltage Compatibility:** Ensure the wall outlet voltage matches the adapter's input specifications (100V-240V AC).
- **Proper Connection:** Always connect the adapter securely to both the device and the power outlet. Loose connections can cause overheating or malfunction.
- **Avoid Overloading:** Do not plug the adapter into an overloaded power strip or extension cord.
- **Environmental Conditions:** Use the adapter in a dry, well-ventilated area. Avoid exposure to moisture, extreme temperatures, or direct sunlight.
- **Cable Care:** Do not bend, twist, or pull the power cord excessively. Inspect the cord regularly for any signs of damage.
- **Disconnection:** Disconnect the adapter from the power outlet by pulling the plug, not the cord.
- **Repair:** Do not attempt to open or repair the adapter yourself. Refer all servicing to qualified personnel.

3. PRODUCT OVERVIEW

The Kircuit AC/DC Adapter provides reliable power to your compatible Wacom device. It features built-in dynamic IC, charger IC, and a power fuse for rapid charging and overcharge protection.



Figure 3.1: Kircuit AC/DC Adapter and power cord. This image shows the main adapter unit connected to its output cable, and the detachable input power cord.

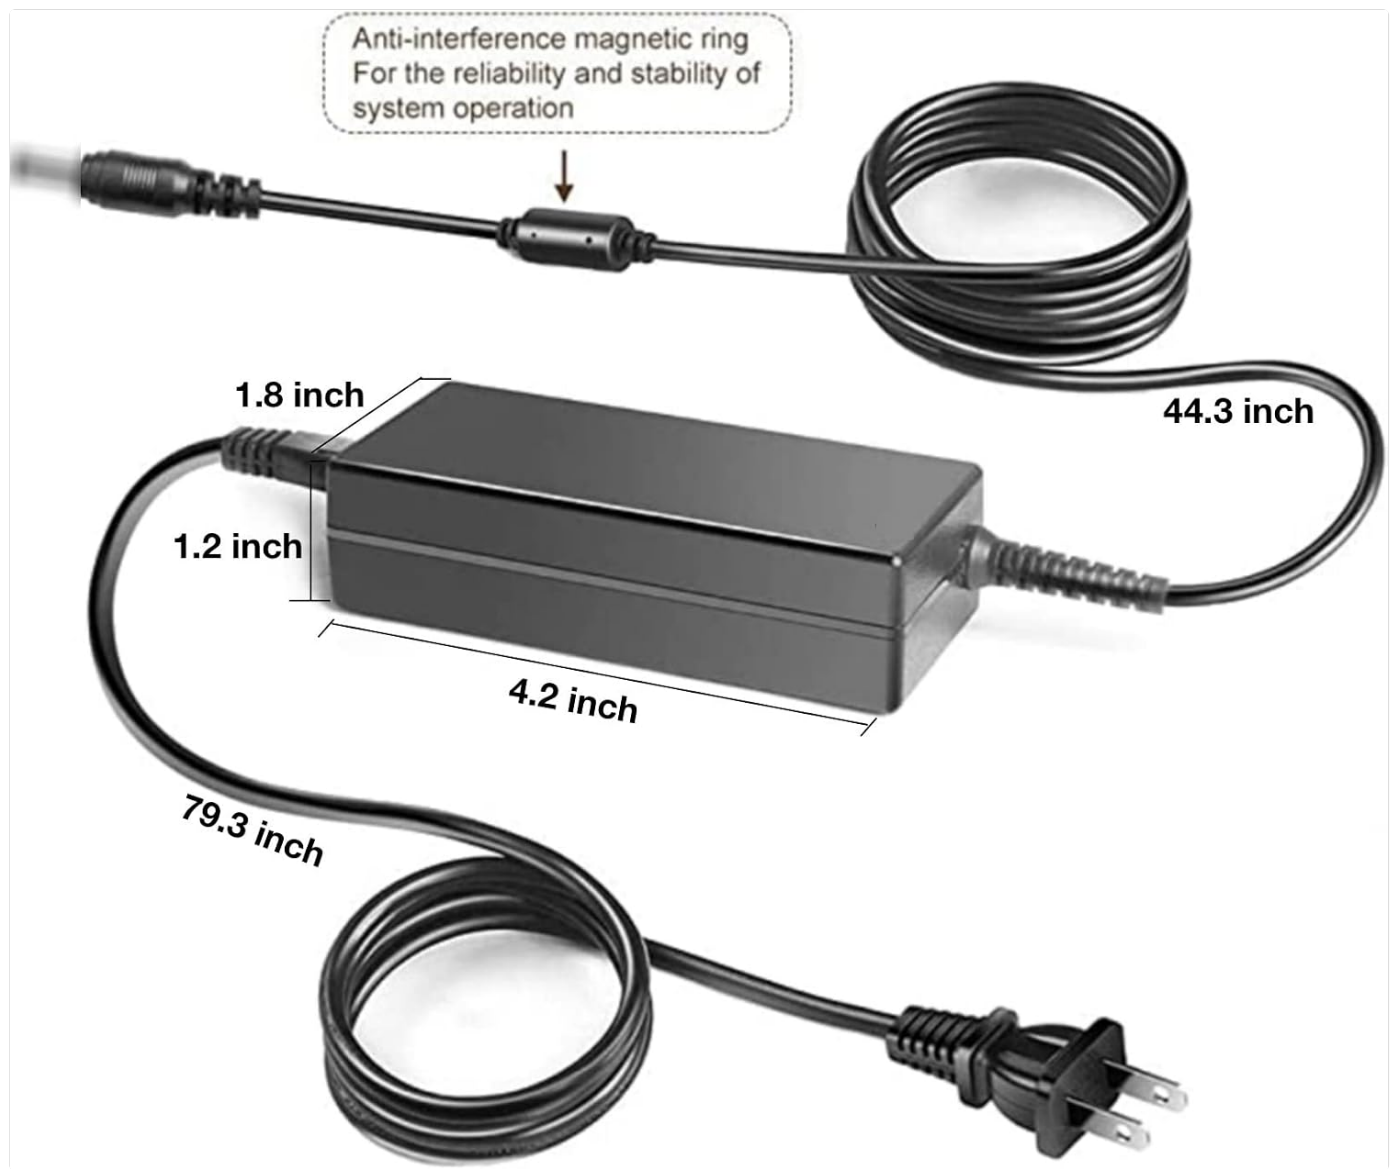


Figure 3.2: Adapter dimensions. The image displays the physical dimensions of the adapter unit and the lengths of the connected cables, including an anti-interference magnetic ring on the output cable.



Figure 3.3: Adapter and detachable power cord. This view shows the adapter unit and the separate 2-prong AC input power cord.



Figure 3.4: Close-up of the AC power plug. This image highlights the design of the 2-prong plug for connecting to a wall outlet.

4. SETUP

Follow these steps to set up your Kircuit AC/DC Adapter:

1. **Connect AC Power Cord:** Insert the 2-prong end of the detachable AC power cord into the input port on the Kircuit AC/DC Adapter.
2. **Connect to Device:** Plug the DC output connector (the round barrel connector) from the adapter into the power input port of your Wacom Cintiq 22HD (DTK-2200 or DTH-2200). Ensure a firm connection.
3. **Connect to Wall Outlet:** Insert the 2-prong plug of the AC power cord into a standard wall electrical outlet.



Figure 4.1: Adapter connected to a wall outlet. The image shows the adapter unit resting on a desk with its AC power cord plugged into a wall outlet.

5. OPERATING

Once properly connected, the Kircuit AC/DC Adapter will automatically supply power to your Wacom Cintiq 22HD. No additional user interaction is required for basic operation.

- Ensure the adapter is placed in an area with adequate ventilation to prevent overheating.
- If your device is not powering on or charging, verify all connections are secure.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your adapter:

- **Cleaning:** Disconnect the adapter from power before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.

- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cables.
- **Inspection:** Periodically inspect the adapter and cables for any signs of wear, cuts, or damage. If damage is found, discontinue use and replace the adapter.

7. TROUBLESHOOTING

If you encounter issues with your Kircuit AC/DC Adapter, try the following:

- **No Power to Device:**
 - Verify the adapter is securely plugged into a working wall outlet.
 - Ensure the DC output connector is firmly seated in your Wacom device's power port.
 - Test the wall outlet with another device to confirm it has power.
 - Check the power cord for any visible damage.
- **Adapter Overheating:**
 - Ensure the adapter is in a well-ventilated area and not covered.
 - Disconnect the adapter and allow it to cool down. If overheating persists, discontinue use.
- **Intermittent Power:**
 - Check all connections for looseness.
 - Ensure the power cord is not damaged or frayed.

If these steps do not resolve the issue, contact customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Input Voltage	100V-240V AC
Compatibility	Wacom Cintiq 22HD (DTK-2200, DTH-2200, DTH-2200/K)
Safety Features	Dynamic IC, Charger IC, Power Fuse for overcharge protection
Manufacturer	Shenzhen Waweis Technology Co., Ltd
ASIN	B09FX9Z9VH

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09FX9Z9VH>

More documents and user manuals: <https://manuals.plus/>