

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MOMAX](#) /
- › [MOMAX Q.Mag Dual Magnetic Wireless Charging Stand User Manual](#)

MOMAX Q.Mag Dual Charging Station

MOMAX Q.Mag Dual Magnetic Wireless Charging Stand User Manual

Model: Q.Mag Dual Charging Station

1. INTRODUCTION

This manual provides instructions for the safe and efficient use of your MOMAX Q.Mag Dual Magnetic Wireless Charging Stand. This device is designed to wirelessly charge compatible iPhone 12/13/14 series models and AirPods simultaneously.

2. PRODUCT OVERVIEW

The MOMAX Q.Mag Dual Magnetic Wireless Charging Stand features a magnetic charging pad for iPhones and a flat wireless charging base for AirPods or other Qi-compatible devices. It is constructed with a woven textured surface for a minimalist aesthetic.

Woven Textured Leather

Provides The Perfect Touch



Image: The woven textured surface of the charging stand's base.

2.1 Components

- **Magnetic Wireless Output:** For MagSafe-compatible iPhones.
- **Wireless Output:** Flat base for AirPods or other Qi-compatible devices.
- **USB-C Port:** Power input for the charging stand.

- **LED Indicator Light:** Indicates charging status.



Image: Diagram illustrating the Magnetic Wireless Output, USB-C Port, Wireless Output, and LED Indicator Light.

3. SETUP INSTRUCTIONS

1. **Connect Power Adapter:** Ensure you use a USB-C power adapter rated at 20W or higher for optimal performance. A lower wattage adapter may result in slow charging or insufficient power for dual charging.

Choose The Right Charger

Please use a USB-C charger rated at 20W or higher



Image: Connect the charging stand to a 20W or higher USB-C power adapter (not included).

2. **Connect USB-C Cable:** Insert the included USB-C to USB-C cable into the USB-C port on the back of the charging stand and connect the other end to your 20W+ USB-C power adapter.



Image: Proper connection of the USB-C cable to the charging stand.

4. OPERATING INSTRUCTIONS

4.1 Charging an iPhone

1. Align your MagSafe-compatible iPhone (iPhone 12/13/14 series) with the magnetic charging pad. The magnets will automatically snap the iPhone into place.
2. The LED indicator light will illuminate to confirm charging has begun.



Image: An iPhone being magnetically attached to the stand, and AirPods placed on the base for charging.

4.2 Charging AirPods or Other Qi Devices

1. Place your AirPods (Pro/2/3) or other Qi-compatible wireless charging device onto the flat charging base.
2. Ensure the device is centered on the charging base for proper alignment.
3. The LED indicator light will illuminate to confirm charging has begun.

One Charger Stand with One Cable to Charge 2 Devices at Once

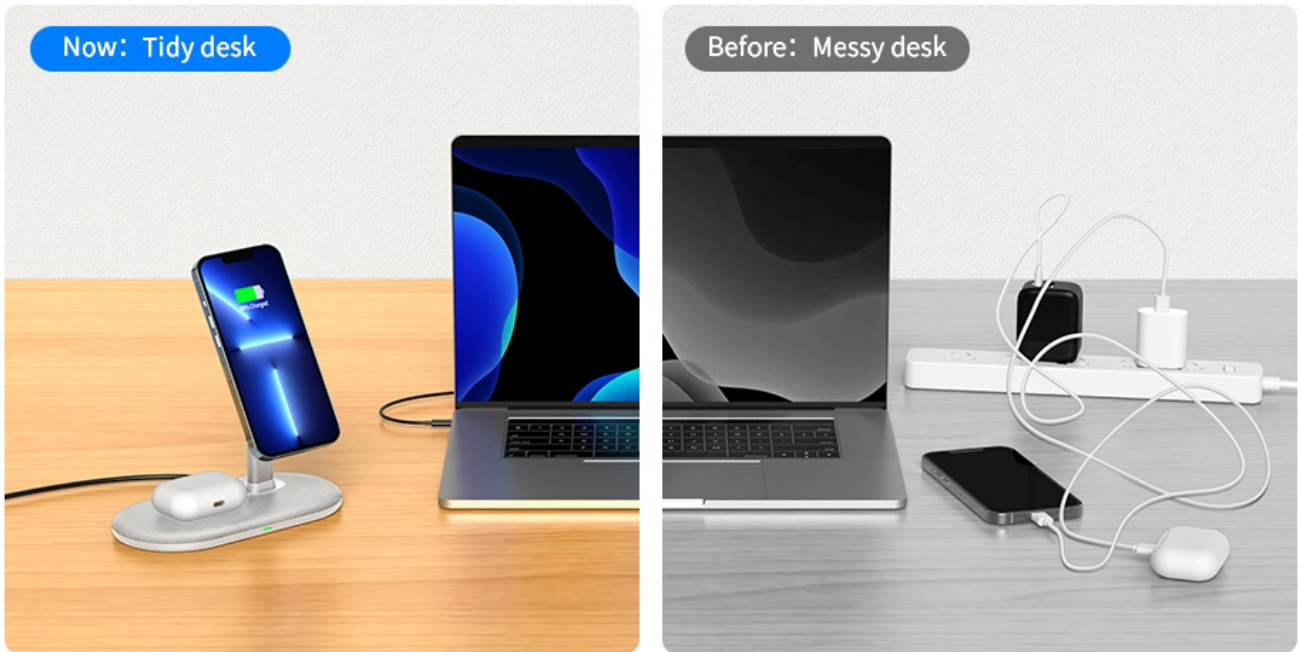


Image: Simultaneous charging of an iPhone and AirPods on the dual charging stand.

4.3 Rotation Feature

The magnetic charging pad allows for 360-degree rotation, enabling you to view your iPhone in both portrait and landscape orientations while charging. This is suitable for video calls, media consumption, or other activities.

Easy to Snap On & Go

Up to 15W fast charging for Qi-enable devices, 7.5W for iPhone



Image: The iPhone positioned in both portrait and landscape modes on the rotatable magnetic charging pad.

5. COMPATIBILITY

This charging stand is specifically designed for optimal compatibility with the following devices:

- **Magnetic Charging Pad:** iPhone 14, 14 Max, 14 Pro, 14 Pro Max, iPhone 13, 13 Pro, 13 Pro Max, 13 Mini, iPhone 12, 12 Pro, 12 Pro Max, 12 Mini.
- **Wireless Charging Base:** AirPods Pro, AirPods 2, AirPods 3, and other Qi-compatible devices.

For non-MagSafe iPhones or other devices to utilize the magnetic charging feature, a MagSafe-compatible case is required.

Exclusive Compatibility with iPhone 13/12 Series

iPhone



13 ProMax



13/13Pro



13 mini



12 ProMax



12/12Pro



12 mini

AirPods



AirPods2



AirPods3



AirPods Pro



Image: Visual guide to compatible iPhone and AirPods models.



Image: An iPhone with a MagSafe-compatible case on the magnetic charging pad.

6. MAINTENANCE

- Keep the charging stand clean and free from dust. Use a soft, dry cloth for cleaning.
- Avoid using abrasive cleaners or solvents, as these may damage the surface.
- Do not expose the device to extreme temperatures or humidity.

7. TROUBLESHOOTING

7.1 Device Not Charging

- **Check Power Connection:** Ensure the USB-C cable is securely connected to both the charging stand and the power adapter, and that the adapter is plugged into a working power outlet.
- **Verify Power Adapter:** Confirm that your USB-C power adapter is rated at 20W or higher. Lower wattage adapters may not provide sufficient power.



Image: An unsuitable power adapter (less than 20W).

- **Device Alignment:** For magnetic charging, ensure your iPhone is correctly aligned and snapped onto the magnetic pad. For the base, ensure your device is centered.
- **Case Interference:** If using a phone case, ensure it is MagSafe-compatible for magnetic charging, or thin enough not to interfere with wireless charging on the base.

7.2 Slow Charging

- **Power Adapter Output:** Slow charging is often due to an insufficient power adapter. Use a 20W or higher USB-C power

adapter.

- **Background Apps:** Close unnecessary applications on your device during charging.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	6.69 x 3.54 x 5.04 inches
Item Weight	13.4 ounces
ASIN	B09FXC9V89
Manufacturer	MOMAX Technology Ltd.
Brand	MOMAX
Connector Type	USB Type C
Compatible Devices	AirPods Pro, AirPods 2, AirPods 3, Any Qi Devices, iPhone 14, 14 Max, 14 Pro, 14 Pro Max, iPhone 13, iPhone 13 Pro, iPhone 13 Pro Max, iPhone 13 Mini, iPhone 12, iPhone 12 Pro, iPhone 12 Pro Max, iPhone 12 Mini
Special Feature	Dual Wireless Charging, Made for MagSafe, Magnetic Snap-On, Rotation-Friendly Stand, Strong Magnetic Attach for iPhone 12/13/14 series
Color	Light Grey
Input Voltage	12 Volts
Total USB Ports	1
Wattage	7.5 watts (for iPhone)
Specification Met	CE, FCC

9. SAFETY INFORMATION

- Do not disassemble or modify the device.
- Keep away from water, fire, and high temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not place metal objects or magnetic cards between the charging surface and your device, as this may interfere with charging or damage the device.
- This product is not a toy. Keep out of reach of children.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the MOMAX official website or contact their customer service directly.

Please retain your proof of purchase for any warranty claims.