

[Manuals.plus](#) /

› [Thumbs Up](#) /

› Thumbs Up Orb Mini Arcade Racing Machine (Model 1002731) Instruction Manual

Thumbs Up 1002731

Thumbs Up Orb Mini Arcade Racing Machine Instruction Manual

Model: 1002731

1. INTRODUCTION

Welcome to the world of retro gaming with your new Thumbs Up Orb Mini Arcade Racing Machine. This handheld console is designed to provide hours of entertainment with its 30 pre-loaded 8-bit racing games. Its compact size and classic arcade design make it perfect for gaming on the go or at home.

2. IMPORTANT SAFETY INFORMATION

- Read all instructions before use and retain for future reference.
- This product is not a toy. Adult supervision is recommended for users under 6 years of age.
- Do not expose the device to water or extreme temperatures.
- Use only specified batteries. Do not mix old and new batteries.
- Dispose of batteries responsibly according to local regulations.
- Avoid dropping or subjecting the device to strong impacts.

3. PACKAGE CONTENTS

Ensure all items are present in your package:

- 1 x Orb Mini Arcade Racing Machine
- 1 x Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Mini Arcade Racing Machine:

- **2.4" LCD Screen:** Full-color display for game visuals.
- **Steering Wheel:** Primary control for steering in racing games.
- **Gear Stick:** Used for acceleration and braking, or other in-game actions.
- **Control Buttons (A, B):** For various in-game actions like firing, jumping, or menu selection.
- **Reset Button:** Returns to the game selection menu.
- **Start Button:** Initiates game play.
- **Volume Control:** Adjusts the audio output.
- **Built-in Speaker:** Provides game sound effects and music.



Image: Front view of the Orb Mini Arcade Racing Machine, showing the screen, steering wheel, gear stick, and control buttons.

NOSTALGIC EXPERIENCE


orb
GAMING



**FULL COLOUR 2.4"
LCD SCREEN**



STIRRING WHEEL

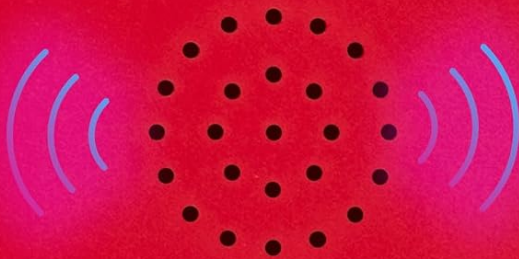

**BUILT-IN
SPEAKERS**



GEAR STICK

Image: Detailed view of the 2.4-inch LCD screen, steering wheel, gear stick, and built-in speaker of the Orb Mini Arcade Racing Machine.

5. SETUP

5.1 Battery Installation

The Orb Mini Arcade Racing Machine is battery-powered. To install batteries:

1. Locate the battery compartment on the back of the unit.
2. Open the battery compartment cover.
3. Insert the required batteries (not included) according to the polarity markings (+/-).
4. Close the battery compartment cover securely.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

To power on the device, locate the power switch (usually on the back or side) and slide it to the 'ON' position. To power off, slide the switch to the 'OFF' position.

6.2 Game Selection

Upon powering on, the device will display a list of 30 pre-loaded 8-bit racing games. Use the steering wheel or gear stick (depending on the game's menu navigation) to scroll through the game list. Press the 'Start' button to select and begin playing a game.

6.3 Game Play

Controls vary slightly between games, but generally:

- **Steering Wheel:** Turn left or right to control your vehicle.
- **Gear Stick:** Push forward for acceleration, pull back for braking or reverse. May also function as an action button in some games.
- **A/B Buttons:** Perform actions such as firing weapons, jumping, or interacting with game elements.

6.4 Volume Adjustment

Adjust the game volume using the dedicated volume control (usually a dial or button) located on the device.

6.5 Resetting a Game

To exit a game and return to the main game selection menu, press the 'Reset' button.

Video: A demonstration of the Orb Gaming Retro Racing Mini Arcade Machine in action, showcasing game selection and gameplay.

7. PRE-LOADED GAMES

Your Orb Mini Arcade Racing Machine comes with 30 unique 8-bit racing games. Explore various tracks and challenges to test your racing skills.

COMPACT AND PORTABLE

orb
GAMING



Image: Collage of screenshots from different pre-loaded 8-bit racing games available on the console.

8. MAINTENANCE

8.1 Cleaning

To clean the device, use a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.

8.2 Storage

When not in use, store the device in a cool, dry place away from direct sunlight and moisture. Remove batteries if storing for extended periods.

9. TROUBLESHOOTING

- **Device not turning on:** Check if batteries are correctly installed and have sufficient charge. Replace batteries if necessary.

- **No sound:** Ensure the volume is not set to minimum or muted.
- **Screen issues (e.g., flickering, no display):** Try turning the device off and on again. If the issue persists, replace batteries.
- **Controls unresponsive:** Ensure the device is powered on and the game is active. Try resetting the game.

10. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.27"L x 3.39"W x 6.38"H
Controller Type	Button Control (Steering Wheel, Gear Stick, A/B Buttons)
Screen Size	2.4 Inches
Power Source	Battery Powered
Age Range (Description)	6+
Display Type	LCD
Material	Plastic
Form Factor	Mini
Item Weight	8.8 ounces
Item model number	1002731
Manufacturer	Thumbs Up

11. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Thumbs Up website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question