

[Manuals.plus](#) /

› [Bang & Olufsen](#) /

› Bang & Olufsen Beosound Level Portable Wi-Fi Multiroom Speaker User Manual

Bang & Olufsen Beosound Level

Bang & Olufsen Beosound Level Portable Wi-Fi Multiroom Speaker User Manual

Model: Beosound Level (1200498)

1. INTRODUCTION

The Bang & Olufsen Beosound Level is a portable Wi-Fi multiroom speaker designed to deliver high-fidelity audio throughout your home. Its robust construction with IP54 water and dust resistance allows for versatile placement. The speaker features adaptive sound technology, adjusting its audio profile based on its orientation and environment. It offers up to 16 hours of playtime on a single charge and supports various connectivity options including Wi-Fi and Bluetooth.

Key features include:

- Superior sound quality tuned by Bang & Olufsen engineers.
- Effortless Wi-Fi connectivity for control via various devices.
- Adaptive audio profile based on speaker placement (standing, lying, wall-mounted).
- Durable, modular design with premium materials for longevity.
- Magnetic charging for convenience.
- Up to 16 hours of battery life.

2. WHAT'S IN THE BOX

Upon unboxing your Beosound Level, ensure all components are present:

- Beosound Level Speaker
- Polymer power cable
- Quick Start Guide
- USB-C Charger
- Easy Charge Solution (Magnetic Charging Puck)

3. SETUP

3.1 Initial Setup and Charging

Before first use, fully charge your Beosound Level speaker. Connect the USB-C charger to the magnetic charging puck, then attach the puck to the designated port on the speaker. The speaker will indicate its charging status.



Image: Beosound Level speaker in Gold Tone/Light Oak, standing upright.

For first-time setup, follow the instructions provided in the Bang & Olufsen app. The app will guide you through connecting the speaker to your Wi-Fi network and updating its software.

Your browser does not support the video tag.

Video: This video demonstrates the initial setup and operation of the Beosound Level speaker, including connecting the charger and using the control panel.

3.2 Speaker Placement and Adaptive Sound

The Beosound Level automatically adjusts its sound profile based on its physical orientation. It can be placed in three main positions:

- **Standing Upright:** Ideal for directing sound across a room.
- **Laying Down:** Provides a wider, more ambient sound experience.
- **Wall-Mounted:** Optimizes sound for a fixed position, often used in multiroom setups.



Image: Beosound Level standing upright on a table.

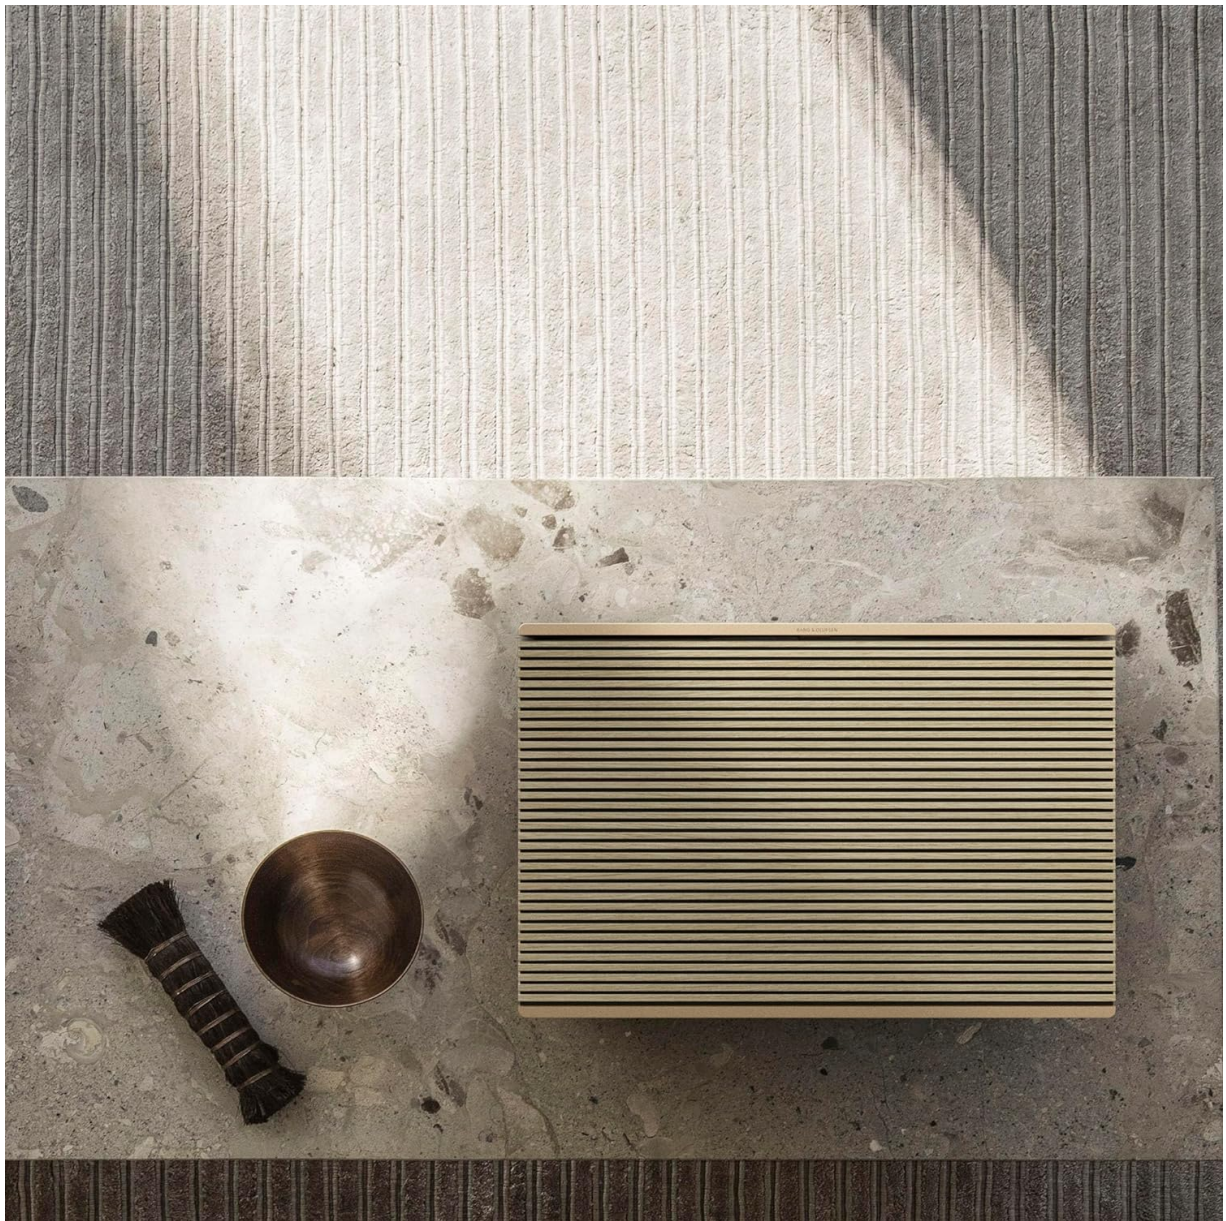


Image: Beosound Level lying flat on a table.



Image: Beosound Level wall-mounted in a kitchen.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

To power on or off, press and hold the power button located on the top edge of the speaker for approximately 2 seconds. A light indicator will confirm the status.

4.2 Basic Controls (Touch Interface)

The Beosound Level features a touch-sensitive control panel on its top surface. The controls illuminate when approached.

- **Play/Pause:** Tap the center play/pause icon.
- **Next Track:** Tap the right arrow icon.
- **Previous Track:** Tap the left arrow icon.
- **Volume Control:** Slide your finger along the illuminated bar or tap the '+' and '-' icons.
- **Bluetooth Pairing:** Press the Bluetooth icon to activate pairing mode.
- **Favorite Buttons:** Use the customizable favorite buttons for quick access to radio stations or playlists.

4.3 Google Assistant Integration

The Beosound Level supports Google Assistant for voice commands. To activate, ensure the microphone is enabled. You can temporarily mute the Google Assistant by pressing the microphone button on the control panel. To permanently disconnect the microphone, use the physical switch located on the speaker's side.

Your browser does not support the video tag.

Video: This video highlights various features of the Beosound Level, including its adaptive sound, portability, charging, and customizable elements.

5. MAINTENANCE

5.1 Cleaning

Wipe the speaker with a soft, dry cloth. Avoid using abrasive cleaners or solvents. For the fabric and wood surfaces, follow specific care instructions provided in the full product manual.

5.2 Modular Design and Customization

The Beosound Level features a modular design, allowing for replacement batteries and changeable fabric and wood covers. This design promotes product longevity and customization. Refer to the full product manual or authorized service centers for details on replacing components.



Image: Exploded view of Beosound Level components, highlighting its modular design.

5.3 Accessing Connection Panel

The connection panel, located on the back of the speaker, can be accessed by removing a cover. It includes ports for RJ45 Ethernet, USB-C, and Line-in/Optical connections.

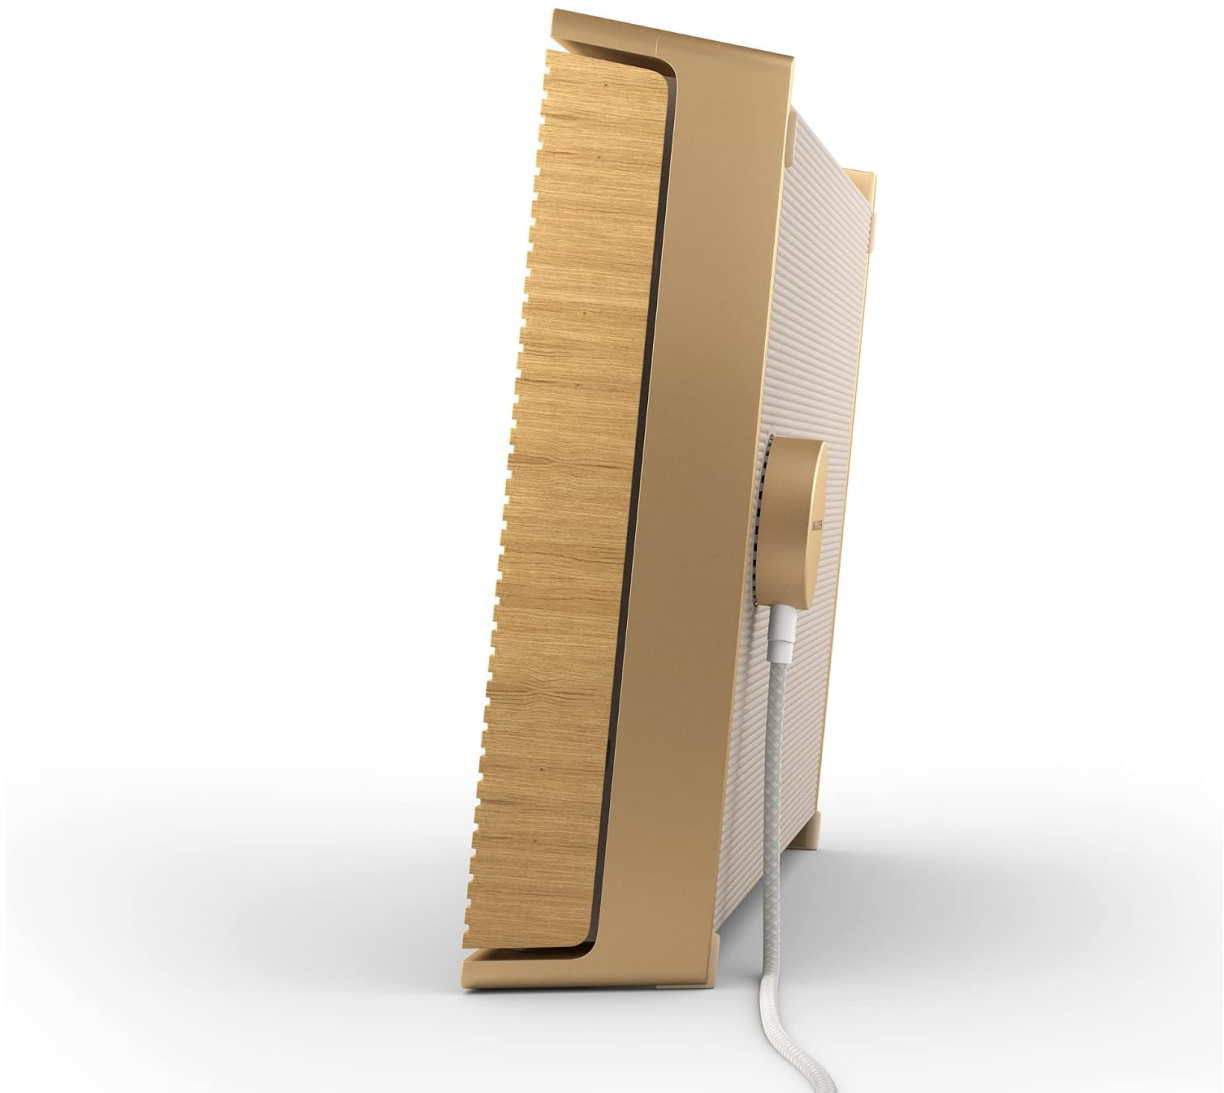


Image: Close-up of the Beosound Level's connection panel.

6. TROUBLESHOOTING

6.1 Wi-Fi Reset

If you experience Wi-Fi connectivity issues, you can perform a Wi-Fi reset. Consult the full manual for specific button combinations or app instructions.

6.2 Factory Reset

A factory reset will restore the speaker to its original settings. This should be used as a last resort for persistent issues. Refer to the full manual for the exact procedure, as it typically involves holding specific buttons for an extended period.

7. SPECIFICATIONS

Brand	Bang & Olufsen
Model Name	Beosound Level
Model Number	1200498
Color	Gold Tone/Light Oak

Speaker Type	Bookshelf
Connectivity Technology	Bluetooth, Wi-Fi
Audio Output Mode	Stereo
Speaker Maximum Output Power	105 Watts
Frequency Response	20000 Hz
Battery Average Life	16 Hours
Water Resistance Level	Water Resistant (IP54)
Item Dimensions (D x W x H)	2.2"D x 13.5"W x 9.1"H
Item Weight	7.4 Pounds
Enclosure Material	Aluminum, Knitted Fabric, Oak Wood, Polymer
Control Method	App, Touch
Connectivity Protocol	Airplay, Spotify Connect, Google Cast, TIDAL Connect, B&O Radio, Deezer, QPlay 2.0, Bluetooth

8. WARRANTY AND SUPPORT

The Bang & Olufsen Beosound Level comes with a 3-year manufacturer's warranty. For detailed warranty information, service requests, or technical support, please refer to the official Bang & Olufsen website or contact their customer service. Keep your proof of purchase for warranty claims.