

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Fame](#) /
- › [Fame G-3000 Homekeyboard User Manual](#)

Fame G-3000

Fame G-3000 Homekeyboard User Manual

MODEL: G-3000

Introduction

Thank you for choosing the Fame G-3000 Homekeyboard. This instrument is designed to provide a rich and engaging musical experience for players of all levels, from beginners to advanced musicians. With its wide array of sounds, styles, and features, the G-3000 offers extensive creative possibilities. This manual will guide you through the setup, operation, and maintenance of your new keyboard, ensuring you get the most out of its capabilities.

The Fame G-3000 features 61 velocity-sensitive keys, 128 voices, powerful 2x 40 Watt stereo speakers, 737 sounds, 240 styles, and 160 built-in songs. It also includes a metronome and an audio recorder. Connectivity options include audio input for external devices, audio output, MIDI I/O, and USB, allowing it to function as a MIDI master keyboard. Additionally, it supports two headphone connections for private practice.

1. Setup

1.1 Unpacking and Placement

Carefully remove the Fame G-3000 Homekeyboard from its packaging. Ensure all components are present: the keyboard unit, power adapter, and music rest. Place the keyboard on a stable, flat surface, such as a keyboard stand or a sturdy table, ensuring adequate ventilation around the unit.



Front view of the Fame G-3000 Homekeyboard, showing the 61-key layout, control panel, and integrated speakers.

1.2 Power Connection

1. Connect the included power adapter to the DC IN jack located on the rear panel of the keyboard.
2. Plug the other end of the power adapter into a standard electrical outlet.
3. Ensure the power switch on the keyboard is in the 'OFF' position before connecting to power.

1.3 Connecting Peripherals

The G-3000 offers various connection options for enhanced functionality.

- **Headphones:** Connect 3.5mm or 6.35mm headphones to the headphone jacks for private practice.
- **External Audio Devices:** Use the Audio Input (AUX IN) to connect external audio sources like smartphones or CD players.
- **MIDI/USB:** Connect the keyboard to a computer or other MIDI devices using the MIDI I/O ports or the USB port. This allows the G-3000 to function as a MIDI master keyboard for music production software (e.g., Cubase).



Close-up view of the rear panel connections, including USB, MIDI I/O, audio input/output, and power input.

2. Operating Instructions

2.1 Power On/Off and Volume Control

1. To power on, press the 'POWER' button. The display will illuminate.
2. Adjust the master volume using the dedicated volume knob.
3. To power off, press the 'POWER' button again.

2.2 Selecting Sounds (Voices)

The G-3000 offers 737 different sounds. Use the 'VOICE' section on the control panel to browse and select sounds.

- Press the 'VOICE' button to enter Voice selection mode.
- Use the data entry dial or number buttons to select a desired voice. The display will show the current voice name.



Close-up view of the central control panel, showing the display, data entry dial, and various function buttons for voices, styles, and songs.

2.3 Using Styles (Accompaniment)

The keyboard includes 240 accompaniment styles to enhance your playing.

- Press the 'STYLE' button to enter Style selection mode.
- Use the data entry dial or number buttons to select a desired style.
- Press 'START/STOP' to begin or end the accompaniment.
- Adjust the tempo using the 'TEMPO' buttons.

2.4 Playing Songs

The G-3000 has 160 built-in songs for listening or learning.

- Press the 'SONG' button to enter Song selection mode.
- Use the data entry dial or number buttons to select a song.
- Press 'PLAY/PAUSE' to start or pause the song.

2.5 Metronome and Audio Recorder

- **Metronome:** Press the 'METRO' button to activate the metronome. Adjust its tempo as needed.
- **Audio Recorder:** The built-in audio recorder allows you to record your performances. Refer to the on-screen instructions or the detailed manual for specific recording steps.



Top-down view of the Fame G-3000 Homekeyboard with the detachable music stand in place, ready for sheet music.

3. Maintenance

Proper care and maintenance will ensure the longevity and optimal performance of your Fame G-3000 Homekeyboard.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. For stubborn dirt, slightly dampen the cloth with water and a mild soap solution, then wipe dry immediately. Avoid abrasive cleaners, solvents, or waxes.
- **Key Care:** Keep the keys clean and free from dust. Avoid spilling liquids on the keys or into the gaps between them.
- **Storage:** When not in use for extended periods, store the keyboard in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity. Consider using a dust cover.
- **Handling:** Always handle the keyboard with care. Avoid dropping it or subjecting it to strong impacts.

4. Troubleshooting

If you encounter any issues with your Fame G-3000, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from speakers/headphones	Volume too low; headphones connected; power issue	Increase master volume; unplug headphones if using speakers; check power connection.

Problem	Possible Cause	Solution
Keyboard does not power on	Power adapter not connected; faulty outlet	Ensure power adapter is securely connected; try a different power outlet.
MIDI/USB connection not working	Incorrect cable; driver issue; software settings	Ensure correct USB/MIDI cables are used; install necessary drivers for your computer; check MIDI settings in your software.
Keys are not responding	Keyboard mode issue; internal error	Restart the keyboard; ensure no specific mode (e.g., demo) is active that prevents playing.

If the problem persists after trying these solutions, please contact Fame customer support or refer to the official Fame website for further assistance.

5. Specifications

Feature	Specification
Model Name	G-3000
Number of Keys	61 (Velocity-sensitive)
Voices	128
Sounds	737
Styles	240
Songs	160
Speakers	2 x 40 Watt Stereo
Connectivity	USB, MIDI I/O
Audio Input	Yes (for external devices)
Headphone Jacks	3.5 mm and 6.35 mm
Special Feature	Audio Recording
Product Dimensions	107.7 x 47 x 20 cm
Item Weight	12.34 kg
Power Source	Power Cable
Supported Software	Cubase (as MIDI controller)




6. Warranty and Support


The Fame G-3000 Homekeyboard comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Fame website for detailed information regarding warranty terms, conditions, and registration.

For technical support, service, or any inquiries not covered in this manual, please contact Fame customer service through their official website or the contact information provided with your purchase. Ensure you have your product model number (G-3000) and purchase details ready when contacting support.


© 2024 Fame. All rights reserved.

Related Documents - G-3000

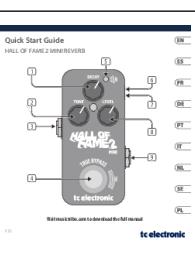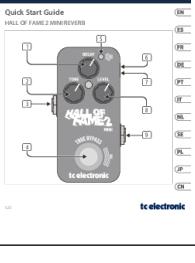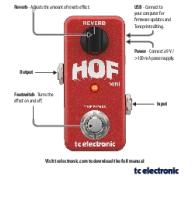	<p>TC Electronic Hall of Fame 2 Reverb Quick Start Guide</p> <p>A concise guide to the TC Electronic Hall of Fame 2 Reverb pedal, covering its controls, features, and basic operation. Includes information on USB connectivity, TonePrint editing, MASH function, and FCC compliance.</p>
	<p>TC Electronic Hall of Fame 2 Mini Reverb Quick Start Guide</p> <p>A concise guide to the TC Electronic Hall of Fame 2 Mini Reverb effects pedal, covering controls, connections, and compliance information.</p>
	<p>Sahara Beats User Manual</p> <p>User manual for Sahara Beats, a Kontakt library featuring Arabian Gulf and North African style beats with extensive customization options.</p>
	<p>TC Electronic Hall of Fame 2 Mini Reverb Quick Start Guide</p> <p>Quick start guide for the TC Electronic Hall of Fame 2 Mini Reverb guitar effects pedal, covering safety instructions, operation, and compliance information.</p>
	<p>TC Electronic Hall of Fame Mini Reverb Quick Start Guide</p> <p>A concise guide to setting up and using the TC Electronic Hall of Fame Mini Reverb guitar effects pedal, including details on controls, connections, and firmware updates.</p>

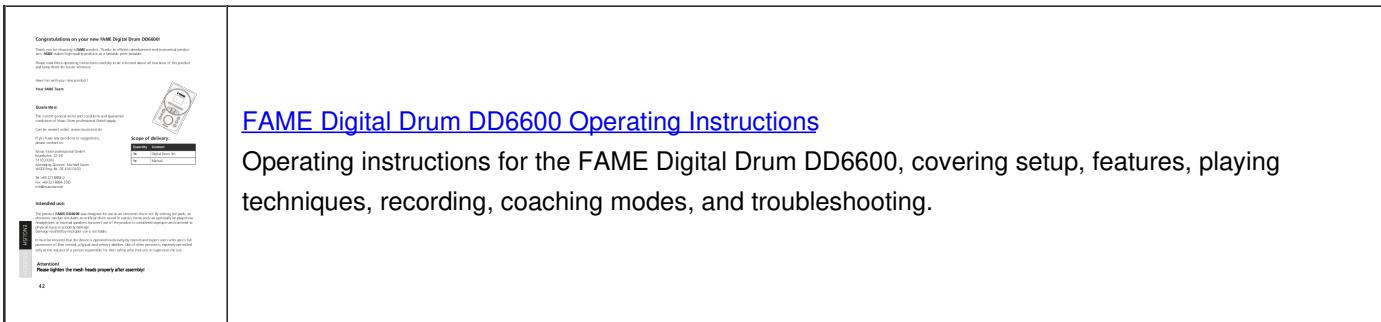

Documents - Fame – G-3000

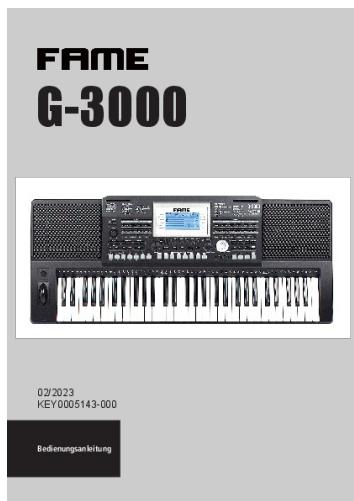


[\[pdf\] User Manual](#)

AW A810 Manual G01 170809 Fame G 3000 Homekeyboard MUSIC STORE professional

ViewProductAttachment ResolveManualURL File DE KEY0005143 000 musicstore de INTERSHOP web
WFS MusicStore MusicStoreShop Site EUR |||

 G-3000 02/2023 KEY0005143-000 Bedienungsanleitung Herzlichen Glckwunsch zu
Ihrem neuen FAME **G-3000** Homekeyboard Vielen Dank, dass Sie sich fr ein Produkt
von FAME entschieden haben. Durch effiziente Entwicklung und konomische
Produktion ermgllicht FAME hochwertige Produkte zu einem fantastischen P...
lang:de score:22 filesize: 14.96 M page_count: 60 document date: 2023-02-01



[FAME G-3000 User Manual: Setup, Features, and Operation](#)

Comprehensive user manual for the FAME G-3000 home keyboard, covering setup, connections, playing features, safety instructions, and specifications. Learn to use your digital keyboard effectively.

lang:en score:22 filesize: 13.16 M page_count: 60 document date: 2023-02-01




[\[pdf\] User Manual Instructions](#)

672abdc4fb0f88dfa2494cf394ada419e02eb7164a7a3a73a operator manual CD35 55 9 crown content
dam s en us manuals combustion trucks |||

11so x 210 x 8.8 H mm || OW Please visit crown.com to find your local Crown dealer.
www.crown.com ae ::, XSB2504E01 EU 10.2021 0 ;cuC.,, 0 Operation C ue,n 9 . D 0
Maintenance Manual e C en 0 co -0 a 0 ::l : CD35S-9, CD40S-9, CD45S-9, CD50C-9,
CD55C-9 - FDB41, FDB42,...

lang:en score:15 filesize: 22 M page_count: 186 document date: 2023-08-15

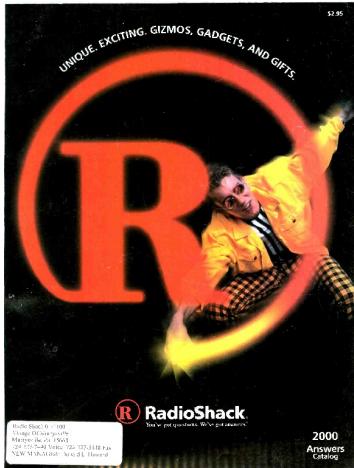

[\[pdf\] Instructions Accessories Catalog](#)

billboard earbuds instructions filetype Google Search Radio Shack 2000 worldradiohistory Archive

Catalogs ved 2ahUKEwiHgcG5p5j8AhV6JTQIHctuDYw4HhAWegQIAhAB |||

Radio Shack 01-4100 Village Of Murrysville Murrysv lle, Pa. 15668 724-327-7440 Voice 724-327-5148 Fa ... yers. AC powered. RSU 12078838 599.99 CD Graphics player turns your TV into a karaoke system CD **G-3000**. Sing the lyrics on TV when used with CD Graphics discs. Use your TV s own speaker s for ...

lang:en **score:14** filesize: 49.84 M page_count: 402 document date: 2018-04-23