

[manuals.plus](#) /› [Coleman](#) /› [Coleman Atacama 2-Person Tent Instruction Manual](#)**Coleman 2147151**

Coleman Atacama 2-Person Tent Instruction Manual

Model: 2147151

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Coleman Atacama 2-Person Tent. Please read this manual thoroughly before attempting to set up or use the tent. Proper setup, operation, and maintenance will ensure the longevity and performance of your tent. The Coleman Atacama tent is designed for 2 people, offering a lightweight and compact solution for camping and backpacking. It features a WeatherTec system for water resistance, UVGuard technology for sun protection, and a wide door for easy access.



Figure 1: Front view of the Coleman Atacama 2-Person Tent.

2. INCLUDED COMPONENTS

Before beginning setup, ensure all components are present:

- Tent body
- Rainfly
- Tent poles
- Tent stakes
- Guy lines
- Insect Mesh
- Carry bag

3. SETUP INSTRUCTIONS

Follow these steps to properly set up your Coleman Atacama 2-Person Tent:

1. **Choose a Site:** Select a flat, clear area free of sharp objects and debris. Consider wind direction and potential water runoff.

2. **Unpack:** Remove the tent and all components from the carry bag. Lay the tent body flat on the ground.
3. **Assemble Poles:** Connect the tent pole sections.
4. **Insert Poles:** Slide the assembled poles through the sleeves on the tent body.
5. **Secure Tent Body:** Insert the ends of the poles into the grommets or pins at the corners of the tent. Lift the tent to form its shape.
6. **Attach Rainfly:** Drape the rainfly over the tent body, ensuring it is oriented correctly. Secure the rainfly to the tent poles or tent body using the attached buckles, hooks, or straps.
7. **Stake Down:** Use the tent stakes to secure the tent corners and guy lines to the ground. Ensure guy lines are taut to provide stability, especially in windy conditions.



Figure 2: The Coleman Atacama Tent fully set up in a natural environment.

4. OPERATING INSTRUCTIONS

To maximize your experience with the Coleman Atacama tent:

- **Entry and Exit:** Utilize the wide door for convenient entry and exit. Ensure zippers are fully closed when not in use to prevent insect entry and maintain weather protection.
- **Ventilation:** The tent features advanced ventilation. Open mesh windows or vents as needed to

reduce condensation and improve airflow. The insect mesh on the door can be used for ventilation while keeping insects out.

- **Weather Protection:** The WeatherTec system with welded corners and inverted seams is designed to prevent water ingress. Always ensure the rainfly is properly secured and taut during wet weather.
- **Sun Protection:** The UVGuard technology helps protect the tent fabric from harmful UV rays, extending the tent's lifespan. Position the tent to minimize prolonged direct sun exposure when possible.



Figure 3: The Coleman Atacama Tent in use, demonstrating its suitability for outdoor environments.

5. MAINTENANCE

Proper maintenance will extend the life of your tent:

- **Cleaning:** Clean the tent by hand washing with mild soap and water. Do not use harsh detergents, bleach, or machine wash, as this can damage the fabric and waterproof coatings.
- **Drying:** Always ensure the tent is completely dry before packing it away. Packing a wet tent can lead to mildew and fabric degradation.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspections:** Periodically inspect poles for damage, fabric for tears, and zippers for smooth

operation. Repair minor issues promptly to prevent further damage.

6. TROUBLESHOOTING

Common issues and their solutions:

- Condensation Inside Tent:** This is common in certain weather conditions. Ensure proper ventilation by opening mesh windows or vents. If the tent has a separate rainfly, ensure there is adequate space between the tent body and rainfly for airflow.
- Water Leaks:** Check that the rainfly is properly positioned and taut. Ensure all zippers are fully closed. The WeatherTec system is designed to prevent leaks, but extreme conditions or improper setup can lead to minor ingress. Inspect for any tears in the fabric or seams that may require repair.
- Tent Instability in Wind:** Ensure all tent stakes are firmly driven into the ground and all guy lines are properly attached and tensioned. The tent is built for heavy-duty construction to withstand winds up to 56 km/h+, but proper anchoring is crucial.
- Zipper Sticking:** Clean the zipper teeth of any dirt or debris. Apply a silicone-based zipper lubricant if necessary. Avoid forcing stuck zippers.

7. SPECIFICATIONS

Feature	Detail
Brand	Coleman
Model Name	2147151
Occupancy	2 People
Product Dimensions (L x W x H)	58.4L x 14W x 14H Centimeters (Packed)
Item Weight	3.51 Kilograms
Material	Nylon
Colour	Gray
Seasons	4 Season
Special Feature	Waterproof (WeatherTec System), UVGuard
Water Resistance Level	Water Resistant
Installation Type	Free Standing
Assembly Required	No (refers to pre-assembled components, but user assembly is required for setup)
Product Care Instructions	Hand Wash
UPC	076501169249

8. WARRANTY INFORMATION

Your Coleman Atacama 2-Person Tent is covered by a manufacturer's warranty against defects in

materials and workmanship. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims. For detailed warranty information, refer to the documentation included with your purchase or visit the official Coleman website.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with setup, or encounter issues not covered in this manual, please contact Coleman customer service.

Online Support: Visit the official Coleman website for FAQs, product registration, and contact forms.

Telephone Support: Refer to the contact information provided on the Coleman website or product packaging for regional telephone support numbers.