



[Manuals.plus](#) /

› [Prox Devices](#) /

› Prox PRD - Phone Separation Alert Device User Manual

## Prox Devices F6

# Prox PRD - Phone Separation Alert Device

Model: F6

Brand: Prox Devices

## INTRODUCTION

---

The Prox PRD (Phone Reminder Device) is an innovative device designed to prevent you from accidentally leaving your smartphone behind. Utilizing patented Advanced Alert Technology, the PRD provides a reliable separation alert when it moves out of proximity from your paired phone. This device operates independently, requiring no subscription, no app, and collecting no personal data, ensuring your privacy.

This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your Prox PRD device, ensuring you get the most out of its features.

## SAFETY INFORMATION

---

Please read and understand all safety instructions before using the Prox PRD. Failure to follow these instructions may result in damage to the device or personal injury.

- Keep the device away from water and excessive moisture.
- Do not expose the device to extreme temperatures (hot or cold).
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Dispose of batteries responsibly according to local regulations.
- Keep out of reach of small children due to small parts.

For detailed safety guidelines, refer to the official [Safety Information \(PDF\)](#).

## PACKAGE CONTENTS

---

Your Prox PRD package should contain the following items:

- 1 x Prox PRD Device (Model F6)
- 1 x Pre-installed CR2032 Battery
- 1 x Quick Start Guide (or similar documentation)



Image: The Prox PRD device, a small white square with a loop, positioned next to two modern smartphones, demonstrating its intended use as a companion device.

## SETUP

---

### 1. Powering On/Off

To power on the Prox PRD, press and hold the button on the device until you hear a confirmation sound. To power off, press and hold the button again until you hear a different confirmation sound. The device is designed to be kept on 24/7 for continuous protection.

### 2. Pairing with Your Smartphone

The Prox PRD uses Bluetooth technology to connect with your smartphone. Ensure Bluetooth is enabled on your phone.

1. Turn on your Prox PRD device.
2. On your smartphone, navigate to your Bluetooth settings.
3. Look for a device named "PRD\_XXXX" (where XXXX is a unique identifier) in the list of available devices.
4. Select the Prox PRD to pair. A confirmation sound will indicate successful pairing.

No app download or account registration is required for pairing or operation.



The advertisement features a blue background with the text "Prox PRD® WIRELESS LEASH FOR YOUR PHONE" in white and blue. Below the text, a hand holds a smartphone displaying the time 1:38 and the date Wednesday, January 17. A dashed white line with blue signal waves at both ends connects the phone to a small, white, diamond-shaped Prox PRD device held in another hand. At the bottom, a dark blue banner contains the text "Advanced Alert Technology (ONLY alerts when PRD is moving)" in white. A red stamp with the word "PATENTED" is located in the bottom left corner of the banner.

Image: A visual representation of the Prox PRD device wirelessly linked to a smartphone, emphasizing its function as a "wireless leash" for your phone.

## OPERATING INSTRUCTIONS

### How the Alert System Works

The Prox PRD utilizes Advanced Alert Technology, which triggers an alert when the PRD device itself is moving and separates from your paired phone. This means it will alert you if you are leaving your phone behind, rather than if your

phone is moving away from you. The typical alert distance is approximately 50 to 150 feet. This range can vary based on environmental factors such as obstructions (walls, furniture) and whether you are indoors or outdoors. The device is not designed to alert at very short distances, such as 10 feet.



**MUST REMAIN ON FOR  
PRD TO WORK PROPERLY**



**Stop forgetting your phone.  
Get reliable separation alerts.**



**Alerts at approx. 50 ft to 150 ft**

**\*\*\* WILL NOT alert at short distances such as 10 ft \*\*\***

Image: The Prox PRD device shown in an urban setting, with a smartphone left on a bench, visually explaining how the device alerts when you move away from your phone.

### **Button Functions**

The single button on your Prox PRD device has multiple functions:

# Six Features in One Prox PRD®

with just  simple button!

...and built to last



User Manual is  
always available



1 click — Connectivity check



4 clicks — Change alert tune



2 clicks — Remote selfie clicker



5 clicks + hold — Home / Travel



3 clicks — Adjust alert distance



Hold button — Nap mode

Image: A detailed graphic illustrating the various functions of the Prox PRD's single button, including connectivity check, remote selfie, alert distance adjustment, alert tune change, home/travel mode, and nap mode.

**1 Click: Connectivity Check** - Verifies the Bluetooth connection between the PRD and your phone.

**2 Clicks: Remote Selfie Clicker** - Acts as a remote shutter for your phone's camera app.

**3 Clicks: Adjust Alert Distance** - Cycles through alert distance settings (e.g., 1 beep for near, 5 beeps for far). The default alert distance is approximately 50-150 feet and cannot be adjusted to very short distances like 10 feet.

**4 Clicks: Change Alert Tune** - Cycles through available alert sounds.

**5 Clicks + Hold: Home / Travel Mode** - Toggles between modes that might adjust sensitivity or alert behavior for different environments.

**Hold Button: Nap Mode** - Puts the device into a temporary sleep mode, preventing alerts for a set duration (e.g., 15m, 30m, 1hr, 2hr).

For a comprehensive understanding of the device's capabilities, please refer to the detailed feature comparison table below:

<b>PLEASE REVIEW BEFORE PURCHASING</b>	<b>YES</b>	<b>NO</b>
<b>RELIABLY ALERTS</b> when phone is left behind		
Helps prevent leaving your phone behind at home, work, restaurants, grocery stores, car, etc.		
Alert distance can be adjusted to very short distances such as 10 feet		
Default alert distance is approximately 50 feet to 150 feet		
Alert distances never vary		
<b>SIMPLE:</b> No adjustments needed Works well at default settings		
Can track, find, or ping your phone		
<b>No Subscription</b>		
Friendly, helpful, & knowledgeable customer support		

Image: A table titled "PLEASE REVIEW BEFORE PURCHASING" outlining key features of the Prox PRD, such as reliable alerts, fixed alert distance, simplicity, and privacy (no tracking, no subscription).

## MAINTENANCE

---

### Battery Replacement

The Prox PRD comes with a pre-installed CR2032 lithium metal battery, which typically lasts for 1 year. When the battery is low, the device will emit a chirp every two seconds upon movement until it is turned off. The device cannot be turned back on until the battery is replaced.

To replace the battery:

1. Locate the battery compartment on the back of the device.

2. Carefully open the compartment using a small coin or screwdriver.
3. Remove the old CR2032 battery.
4. Insert a new CR2032 battery with the positive (+) side facing up.
5. Close the battery compartment securely.

## Cleaning

To clean your Prox PRD, gently wipe it with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners, as these can damage the device's finish or internal components.

## TROUBLESHOOTING

If you encounter issues with your Prox PRD, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Device not powering on.	Low or dead battery.	Replace the CR2032 battery. Ensure it's inserted correctly.
No alert when phone is left behind.	Bluetooth disconnected; device not moving; phone too close.	Ensure Bluetooth is on and paired. Confirm the PRD is moving away from the phone. Check alert distance settings (3 clicks).
Alert range is shorter than expected.	Environmental obstructions (walls, metal); interference.	This is normal in certain environments. The range can vary. Try adjusting alert distance (3 clicks) to a "far" setting if available.
Device chirps every two seconds upon movement.	Low battery indicator.	Replace the CR2032 battery immediately.

For more detailed troubleshooting, please refer to the official [Troubleshooting Guide \(PDF\)](#) available online.

## SPECIFICATIONS

Feature	Detail
Model Number	F6
Product Dimensions	1.77 x 1.77 x 0.26 inches (4.5 x 4.5 x 0.66 cm)
Item Weight	1 ounce (28.35 grams)
Connectivity	Bluetooth
Battery Type	1 x CR2032 Lithium Metal (included)
Typical Battery Life	1 Year
Alert Range (Typical)	50-150 feet (15-45 meters)
Material	Acrylonitrile Butadiene Styrene (ABS), Aluminum, Polycarbonate (PC)
Color	White

Feature	Detail
Compatibility	Apple iPhones (iOS), Samsung & Google Pixel (Android) smartphones and tablets.

## WARRANTY AND SUPPORT

---

Prox Devices stands behind the quality of its products. For specific warranty details, please refer to the documentation included with your purchase or visit the official Prox Devices website.

If you have any questions, require assistance, or need to report an issue, please do not hesitate to contact Prox Devices support. Support information is provided in every product box. You can also find additional resources, including the full User Manual and Troubleshooting Guide, via the links below:

- [Official Prox PRD User Manual](#)
- [Troubleshooting Guide \(PDF\)](#)
- [Instructions for Use \(IFU\) \(PDF\)](#)
- [User Manual \(PDF\)](#)
- [User Guide \(PDF\)](#)

© 2025 Prox Devices. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.