

[Manuals.plus](#) /

› [UBay](#) /

› UBay AK59-00167A Remote Control Instruction Manual for Samsung Smart 3D Blu-ray DVD Players

UBay AK59-00167A

UBay AK59-00167A Remote Control Instruction Manual

For Samsung Smart 3D Blu-ray DVD Players

1. INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your UBay AK59-00167A replacement remote control. This remote is designed to be compatible with various Samsung Smart 3D Blu-ray DVD Player models, offering a direct replacement experience without the need for complex programming.

2. PACKAGE CONTENTS

- 1 x UBay AK59-00167A Remote Control

Note: AAA batteries are not included and must be purchased separately.

3. SETUP: BATTERY INSTALLATION

The UBay AK59-00167A remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No programming or pairing is required. The remote is ready for use immediately after battery installation.



Image 1: Front view of the UBay AK59-00167A Remote Control. This image displays the layout of all buttons, including power, volume, channel, navigation, and specific Blu-ray player functions like disc menu, title menu, smart hub, and playback controls.

4. OPERATING INSTRUCTIONS

This remote control functions identically to the original Samsung AK59-00167A remote. Simply point the remote towards your Samsung Smart 3D Blu-ray DVD Player and press the desired button.

4.1 Compatible Models

The UBay AK59-00167A remote control is compatible with the following Samsung Blu-ray Player models:

- UBD-K8500
- BD-F6500
- BD-F7500
- BD-J6300
- BD-J6300/ZA
- BD-JM63
- BD-JM63C
- BD-F7500/ZA
- BD-F6700
- BD-J7500
- BD-J7500/ZA
- TM1241

4.2 Key Functions Overview

The remote features standard buttons for controlling your Blu-ray player and potentially basic TV functions (e.g., Volume, Source if your player supports HDMI-CEC or Anynet+). Refer to your Blu-ray player's original manual for specific functions of each button.



Image 2: Angled view of the UBay AK59-00167A Remote Control. This perspective highlights the ergonomic design and button placement, showing the power buttons, number pad, navigation cluster, and colored function buttons at the bottom.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

5.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops functioning. Always replace both AAA batteries at the same time with new ones. Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote and the Blu-ray player's infrared sensor.
 - Ensure you are within the effective range of the Blu-ray player.
- **Certain buttons not working:**
 - This may indicate a specific button malfunction or a compatibility issue with that particular function on your player. Verify the button's function with your Blu-ray player's original manual.

7. SPECIFICATIONS

Model Number	AK59-00167A
Brand	UBay
Compatible Devices	Samsung Smart 3D Blu-ray DVD Players (Specific models listed in Section 4.1)
Power Supply	2 x AAA Batteries (not included)
Product Dimensions	7.5 x 2 x 0.7 inches
Item Weight	2.39 ounces
Color	Black

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09FYPRP6J>

More documents and user manuals: **<https://manuals.plus/>**