

## YUMKEM L211

# YUMKEM 10.1 inch Android Tablet User Manual

Model: L211

## 1. INTRODUCTION

Thank you for choosing the YUMKEM 10.1 inch Android Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read this manual thoroughly before using the tablet to ensure proper function and longevity.

## 2. SAFETY INFORMATION

To prevent damage to your tablet or injury to yourself or others, please observe the following safety precautions:

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to strong impacts.
- Use only the charger and accessories provided or approved by YUMKEM.
- Do not attempt to disassemble, repair, or modify the tablet yourself. Refer to qualified service personnel.
- Keep the tablet away from water and other liquids.
- Dispose of the tablet and its battery responsibly according to local regulations.

## 3. PACKAGE CONTENTS

Please check the box for the following items:

- YUMKEM 10.1 inch Android Tablet (Model L211)
- USB Type-C Cable
- Power Adapter
- User Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your YUMKEM tablet.



Image: Front and back view of the YUMKEM 10.1 inch Android Tablet.



Android 11



6000mAh



WIFI



4+64GB



Quad core



Dual Camera

Image: Key features of the YUMKEM tablet including Android 11, 6000mAh battery, WiFi, 4GB RAM, 64GB storage, Quad core processor, and Dual camera.

### Tablet Components:

- **Front Camera:** For video calls and selfies.
- **Display:** 10.1 inch IPS HD screen.
- **Power Button:** To turn the tablet on/off or put it to sleep.
- **Volume Buttons:** To adjust the audio volume.
- **USB Type-C Port:** For charging and data transfer.
- **Headphone Jack:** For connecting wired headphones.
- **MicroSD Card Slot:** For expanding storage.
- **Rear Camera:** For taking photos and videos.
- **Speakers:** For audio output.

## 5. GETTING STARTED

## 5.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the USB Type-C cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.



Image: The tablet highlighting its 6000mAh battery capacity and Type-C charging port.

## 5.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the YUMKEM logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.
- **To Sleep/Wake:** Briefly press the Power button to put the tablet to sleep or wake it up.

## 5.3 Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Accept the terms and conditions.
4. Sign in with your Google account or create a new one. This is necessary for downloading apps from

the Google Play Store.

5. Set up screen lock (optional).

## 5.4 Inserting a MicroSD Card

The tablet supports MicroSD cards up to 128GB for expanded storage. Locate the MicroSD card slot on the side of the tablet. Gently insert the MicroSD card with the gold contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.

**64GB ROM | Support 128GB SD Card**



Image: The tablet displaying family photos, illustrating its 64GB internal storage and support for up to 128GB MicroSD card expansion.

## 6. BASIC OPERATIONS

### 6.1 Touch Gestures

Navigate your tablet using standard Android touch gestures:

- **Tap:** To select an item or open an app.
- **Touch & Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.

### 6.2 Connecting to Wi-Fi

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi. The tablet will scan for available networks.
3. Select your desired network and enter the password if prompted.
4. Once connected, the Wi-Fi icon will appear in the status bar.

## 6.3 Managing Applications

Your tablet runs on Pure Android 11, offering a clean and efficient user experience.

# Pure Android 11 without Bloatware



Image: The tablet screen showing various popular app icons, highlighting the Pure Android 11 experience.

- **Downloading Apps:** Open the Google Play Store app to browse and download applications.
- **Uninstalling Apps:** Touch and hold an app icon on the home screen or in the app drawer, then drag it to "Uninstall" or select the uninstall option. Alternatively, go to **Settings > Apps & notifications > See all apps**, select the app, and tap "Uninstall".
- **Closing Apps:** Swipe up from the bottom of the screen and hold to view recent apps. Swipe an app card up to close it.

## 6.4 Using the Camera

The tablet features dual cameras for capturing photos and videos.

- Open the Camera app from the home screen or app drawer.
- Tap the shutter button to take a photo.

- Switch between front and rear cameras using the camera switch icon.
- Select video mode to record videos.

## 6.5 Battery Management

To optimize battery life:

- Reduce screen brightness.
- Turn off Wi-Fi or Bluetooth when not in use.
- Close unused applications running in the background.
- Enable battery saver mode in **Settings > Battery**.

## 7. MAINTENANCE AND CARE

### 7.1 Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid using harsh chemicals or abrasive materials.

### 7.2 Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

### 7.3 Storage Optimization

To maintain optimal performance, regularly manage your tablet's storage:

- Delete unnecessary apps and files.
- Clear cache data for apps in **Settings > Apps & notifications**.
- Move large files (photos, videos) to a MicroSD card or cloud storage.

## 8. TROUBLESHOOTING

Problem	Possible Solution
Tablet won't turn on	Ensure the tablet is charged. Connect to the charger and wait a few minutes before attempting to power on again. If unresponsive, try holding the power button for 10-15 seconds for a forced restart.
Tablet is slow or unresponsive	Close unused apps. Clear app cache. Restart the tablet. Check for system updates.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on the tablet. Restart your Wi-Fi router. Verify the Wi-Fi password. Try forgetting the network and reconnecting.
Apps are crashing	Ensure the app is updated. Clear the app's cache and data (Settings > Apps & notifications > [App Name] > Storage & cache). Reinstall the app.
Battery drains quickly	Reduce screen brightness. Disable unnecessary features like Bluetooth or GPS. Close background apps. Check battery usage in Settings to identify power-hungry apps.

## 9. PRODUCT SPECIFICATIONS

Feature	Specification
Model	L211
Operating System	Android 11 Go
Display Size	10.1 Inches
Display Resolution	1280 x 800 pixels IPS HD
RAM	4 GB
Internal Storage	64 GB
Expandable Storage	MicroSD up to 128 GB
Rear Camera	5 MP
Front Camera	2 MP (estimated based on dual camera and common configurations)
Wireless Connectivity	Wi-Fi (802.11ac), Bluetooth (version not specified, assumed standard)
Battery Life	Up to 15 Hours (Average)
Item Weight	1.96 pounds
Product Dimensions	9.84 x 5.91 x 1.57 inches

## 10. WARRANTY AND SUPPORT

YUMKEM products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official YUMKEM website. If you encounter any issues not covered in this manual or require further assistance, please contact YUMKEM customer support through the contact information provided on the product packaging or the official website.

Please retain your proof of purchase for warranty claims.

© 2024 YUMKEM. All rights reserved.

Documents - YUMKEM – L211



**Volume +** increase volume  
**Volume -** decrease volume

**Pull down notification bar**

User	click to switch local user accounts
Settings	click to access to system settings
Battery	click to access to battery settings
Wi-Fi	click to turn on/off Wi-Fi
Bluetooth	click to turn on/off Bluetooth
Mobile data	Click to open the sound / mute
Flight mode	click to turn on/off flight mode
Auto-rotation	click to turn on/off auto-rotation
GPS	click to turn on/off GPS
Miracast	click to turn on/off Miracast

**Wi-Fi connection**  
 1. Turn on Wi-Fi in "Settings" menu, click search, select the available network and connect it by entering relative password.

**Mobile network connection**  
 1. Insert SIM card before power on system  
 2. Click setting icon to access to settings screen  
 3. Switch on mobile data toggle  
 \*Above functions are only applicable for the supported devices.

(2)

**Bluetooth connection**

- Click settings icon to access to "Bluetooth" menu
- Switch on Bluetooth and system will automatically search the Bluetooth devices nearby
- Click on the connectable Bluetooth device then select "match" in pop up menu;
- Wait for the Bluetooth device to confirm the connection

\*Above functions are only applicable for the supported devices

**Screen settings**

Click settings to access to "Display" menu

- Brightness: Scroll the bar to control the screen brightness
- Wallpaper: set the wallpaper content
- Sleep: set the screen time-out
- Font size: set the size of font
- Auto-rotation: lock the screen direction or let device to automatically rotate screen based on the direction

**Audio settings**

Click settings to access to "Sound" menu

- Volume: Scroll the bar to adjust the volume of media, alarm and ringtone.

(3)

2. Notification sound: select notification sound  
 3. Ringtone: select incoming call ringtone  
 4. Other sounds: Turn on/off screen lock & touch sound effects

**HDMI settings**  
 Turn on TV and set the input source to HDMI, connect device to TV via HDMI cable.

- Mode: adjust the output screen resolution
- Zoom & scale: zoom in/out and adjust the screen ratio
- Screen adjustment compensation: Fine tuning the output screen ratio

**Battery status**

Click settings to access to "Battery" menu, battery usage can be viewed in here

Power display: switch on/off the toggle to turn on/off power remain percentage display

\*Above functions are only applicable for the supported devices

(4)

**Connect to PC**  
 Device can be connected with PC via USB cable to perform copy/delete actions.

- Operating system including Windows 7 and above version will automatically install MTP drivers when device connecting to PC at first time
- For Windows XP, Windows Media Player 11 must be installed before connecting device to PC

**Application management**

Click "Settings" to access to application menu to perform actions including un-installation, clean default action, clean cache & data and force close application.

- Third party applications: Un-installable
- System application: cannot be un-installed

**Users**

Click settings icon to access to "Users" menu

- System supports multi-user login
- Each user can set its personal applications and contents

## [YUMKEM L211 Tablet User Manual and First Boot Up Guide](#)

A comprehensive guide to the YUMKEM L211 tablet, covering initial setup, button functions, connectivity options (Wi-Fi, Bluetooth, Mobile Data, HDMI), screen and audio settings, PC connection, application management, user accounts, location services, security features, language and input, account management, factory reset, date and time settings, and USB OTG functionality.

lang: score:16 filesize: 4.95 M page\_count: 1 document date: 2021-11-16

5

## Location

1. Click settings icon to access to "Location" menu
2. Click "mode" to select the accuracy

## Security

Click settings icon to access to "Security" menu

1. Screen lock mode: can select between the swipe, Pattern, Pin and password modes
2. Unknown source: to allow/deny the app installation from unknown sources

## Language and input

Click settings to access to "language & input" menu

1. Language: select system language
2. Input: choose the default system input method and its relative settings

6

## Accounts management

Click settings to access to "accounts" menu

1. Add accounts for installed applications
2. Manage the account data sync

## Factory reset

1. Choose "factory data reset" to restore the system
2. Factory reset will clean all personal data, please do backup before taking the action

## Date & time

Click settings to access to "date & time" select menu

1. Select "Automatic date & time" to let system to sync the local time when connecting to internet. You can manually adjust the time by turning off this function
2. Select "Automatic time zone" to let system to sync the local time zone when connecting to internet. You can manually adjust the time zone by turning off this function
3. 24-hour format: choose the 12-hour or 24-hour display format

7

## USB OTG function

USB OTG function can be used to exchange data with other portable device (flash drive, mobile hard disk, 3G dongle, mouse and keyboard)

1. Devices need to be connected to this product via OTG cable
2. Please keep device power above 50% while using OTG function, separated power supply is needed for high-power consumption devices

8