

[Manuals.plus](#) /

› [Lomiluskr](#) /

› Lomiluskr 5117 2.4G Wireless Keyboard and Mouse Combo User Manual

Lomiluskr 5117

Lomiluskr 2.4G Wireless Keyboard and Mouse Combo

MODEL: 5117

1. Introduction

Thank you for choosing the Lomiluskr 2.4G Wireless Keyboard and Mouse Combo. This manual provides essential information for setting up, operating, and maintaining your new wireless peripheral set. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.



Image 1: The Lomilusk 2.4G Wireless Keyboard and Mouse Combo.



2.4G Colorful Wireless Keyboard and Mouse Set

Image 2: Top-down view of the keyboard and mouse, highlighting the full-size layout.

2. Package Contents

- 1 x Lomiluskr 2.4G Wireless Keyboard
- 1 x Lomiluskr 2.4G Wireless Mouse
- 1 x USB Receiver (shared for keyboard and mouse)
- Batteries (1 x AA for keyboard, 1 x AA for mouse)

3. Setup Instructions

1. **Insert Batteries:** Open the battery compartments on the underside of both the keyboard and the mouse. Insert the provided AA batteries, ensuring correct polarity (+/-).
2. **Connect USB Receiver:** Locate the USB receiver, typically stored in the mouse's battery compartment or a dedicated slot. Plug the USB receiver into an available USB port on your computer (PC or Laptop).



Image 3: The USB receiver, which connects both the keyboard and mouse.

3. **Automatic Connection:** The keyboard and mouse are designed for plug-and-play functionality. Your computer should automatically detect and install the necessary drivers.
4. **Compatibility:** This combo is compatible with Notebooks and PCs. It is not compatible with iPads or mobile phones via Bluetooth as it uses a 2.4G USB receiver.

Suitable for PC / Laptops

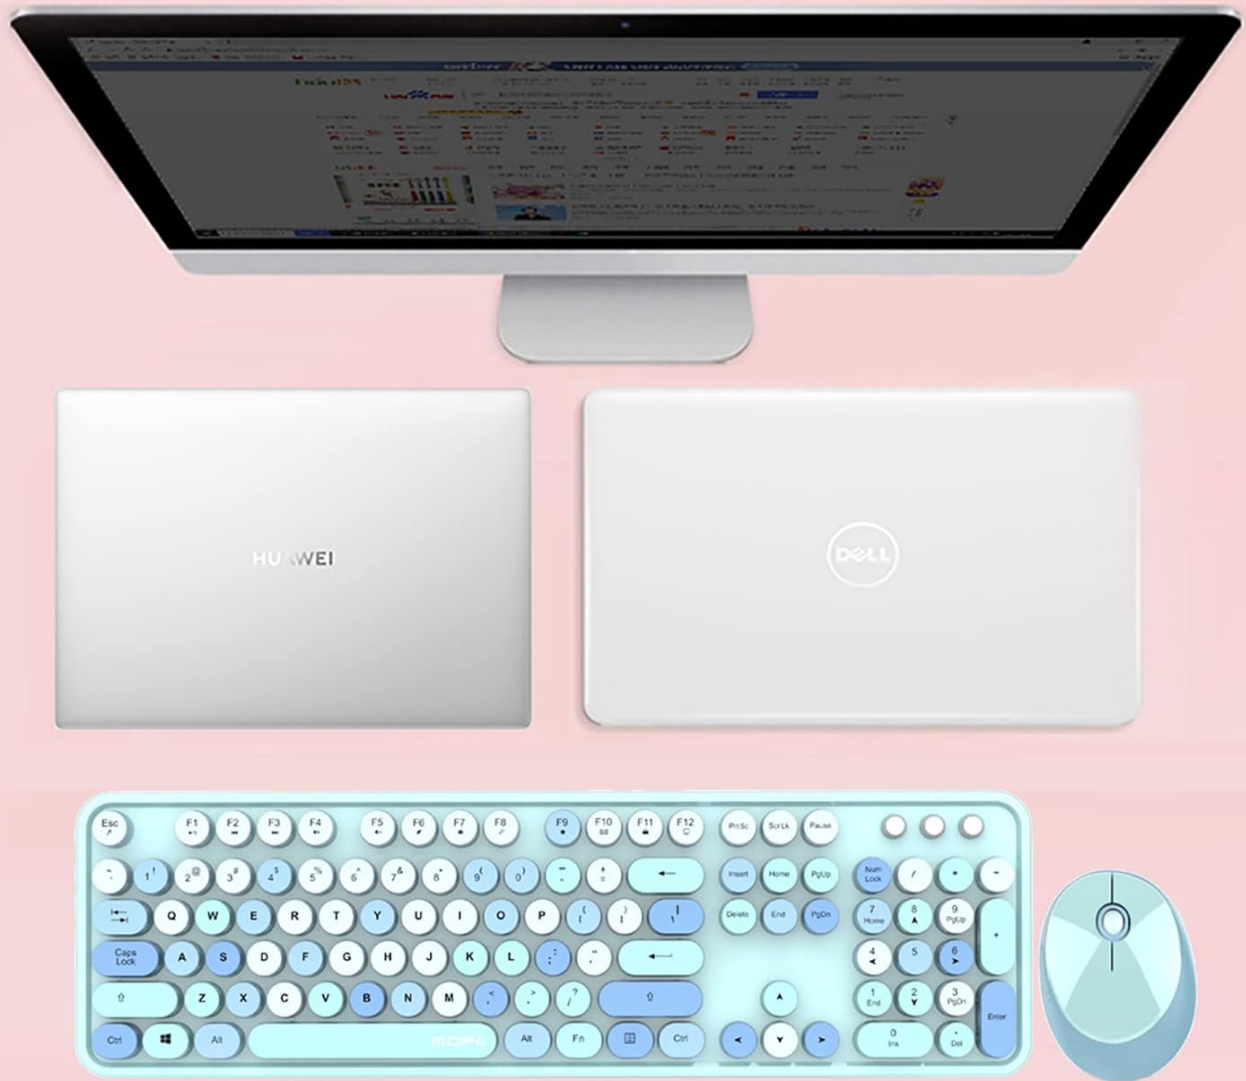


Image 4: The keyboard and mouse are suitable for use with PCs and Laptops.

4. Operating Instructions

4.1 General Use

Once connected, the keyboard and mouse are ready for immediate use. The 2.4G wireless technology provides a stable connection up to 10 meters (approximately 33 feet) from the USB receiver.



Image 5: Close-up of the keyboard and mouse, showing the round keycaps.

4.2 Hot Keys (Function Keys)

The keyboard features 13 easily accessible function keys (F1-F12, and others) that provide shortcuts for various multimedia and system controls. To activate these functions, press the **FN** key simultaneously with the desired function key.

- Example: Press **FN + F1** to control music play/pause.
- *Note: Some hotkeys may not be available or function differently on Mac operating systems.*

4.3 Smart Power Saving Mode

To conserve battery life, both the keyboard and mouse will automatically enter a power-saving sleep mode after a few minutes of inactivity (typically 3-5 minutes). To wake them up, simply click any key on the keyboard or any button on the mouse. The devices will resume operation within seconds.

A low battery indicator light is located in the upper right corner of the keyboard. This light will illuminate when the battery level is low, signaling that battery replacement is needed.

5. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no liquid enters the device.
- **Battery Replacement:** When the low battery indicator on the keyboard lights up, or if the mouse becomes unresponsive, replace the AA batteries in both devices. Always use fresh, high-quality alkaline batteries.

- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the devices in a cool, dry place.

6. Troubleshooting

- **No Response from Keyboard/Mouse:**

- Ensure the USB receiver is securely plugged into a working USB port on your computer.
- Check the batteries in both the keyboard and mouse. Replace them if they are low or depleted.
- Wake the devices from power-saving mode by pressing any key or button.
- Try plugging the USB receiver into a different USB port.

- **Intermittent Connection:**

- Ensure the devices are within the 10-meter operating range of the USB receiver.
- Avoid placing the receiver near strong electromagnetic interference sources (e.g., other wireless devices, large metal objects).

- **Keys Not Registering Properly:**

- Check battery levels.
- Clean around the affected keycaps to ensure no debris is obstructing movement.

- **Mouse Cursor Jumps or is Unresponsive:**

- Check battery levels.
- Ensure the mouse sensor is clean and free of obstructions.
- Use the mouse on a suitable surface (not highly reflective or transparent).

7. Specifications

Product Specifications



Keyboard

Link method 2.4G Hz Wireless

Size 445*136*35mm

Weight 658g

Keys 104 Keys

Mouse

Link method 2.4G Hz Wireless

Size 101*75*34mm

Weight 80g

Sensitivity 1600dpi

Image 6: Detailed product specifications and dimensions.

Feature	Keyboard	Mouse
Model	5117	
Connectivity	2.4G Wireless (USB Receiver)	
Dimensions (L x W x H)	445 x 136 x 35 mm	101 x 75 x 34 mm
Weight	658 g	80 g
Number of Keys	104 Keys (Full-size with numeric keypad)	N/A
DPI Sensitivity	N/A	1600 DPI
Battery Type	1 x AA Battery	1 x AA Battery
Operating Range	Up to 10 meters	
Special Features	Round Keycaps, Numeric Keypad, Hot Keys, Smart Power Saving	

Feature	Keyboard	Mouse
Compatible Devices	Laptop, Personal Computer	

8. Warranty and Support

All Lomiluskr products undergo quality inspection before shipping. If you encounter any quality issues with this product within one year of purchase, we offer a refund or a free replacement.

For any questions or support needs, please feel free to contact Lomiluskr customer service. Refer to your purchase documentation for contact details.

© 2025 Lomiluskr. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question