

[Manuals.plus](#) /

› [CURECURE](#) /

› CURECURE Electric Heated Throw Blanket User Manual

CURECURE OWF-PJE

CURECURE Electric Heated Throw Blanket User Manual

Model: OWF-PJE

Size: 50" x 60"

[Safety Information](#) [Setup](#) [Operation](#) [Care & Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the CURECURE Electric Heated Throw Blanket. This manual provides essential information for the safe and efficient use of your new heated blanket. Please read all instructions carefully before use and retain this manual for future reference.



Image: The CURECURE Electric Heated Throw Blanket, 50" x 60" in Rose Red, featuring a soft flannel top and a white Shu Cotton underside, draped over a wooden armchair, illustrating its comfortable and versatile design for home use.

IMPORTANT SAFETY INFORMATION

To reduce the risk of burns, electric shock, fire, or injury, this product must be used in accordance with the following instructions:

- Do not use with infants, children, invalids, or persons insensitive to heat.
- Do not use on an animal.
- Never use the blanket if the cord or plug is damaged.
- Do not use with pointed objects.
- Do not use when folded or bunched.
- Do not use if wet.
- Always unplug the blanket when not in use.
- Do not dry clean this product. Cleaning solvents may damage the insulation of the heating element.

- Ensure the controller is not covered or placed under the blanket during use to prevent overheating.



Image: A user sleeping soundly under the heated blanket, highlighting the built-in safety features such as fast heating, even heat distribution, and overheating protection, ensuring a secure and comfortable experience.

SETUP INSTRUCTIONS

1. **Unpack the Blanket:** Carefully remove the heated blanket from its packaging. Unfold it completely, ensuring there are no creases or folds that could cause localized overheating.
2. **Connect the Controller:** Locate the connector on the blanket. Align the plug from the control unit with the connector and push firmly until it clicks into place. Ensure a secure connection.
3. **Position the Blanket:** Place the blanket on a sofa, bed, or wherever you intend to use it. Ensure the control unit is easily accessible and not covered by the blanket or other items.
4. **Plug into Power Outlet:** Insert the power plug into a standard 120V AC electrical outlet.

OPERATING YOUR HEATED BLANKET

The CURECURE Electric Heated Throw Blanket features an easy-to-use controller with multiple heat settings and an automatic shut-off timer.



Image: A user demonstrating the use of the blanket's controller, which clearly displays the four heating levels (Warm, Low, Med, High) and the 4-hour auto-off feature, indicating user-friendly controls.

Controller Functions:

- **Power Button:** Press the power button to turn the blanket ON or OFF. The indicator lights will illuminate when the blanket is on.
- **Heat Level Adjustment:** The controller offers 4 heating levels:
 - **Level 1 (Warm):** For gentle warmth.
 - **Level 2 (Low):** For moderate warmth.
 - **Level 3 (Med):** For significant warmth.
 - **Level 4 (High):** For maximum warmth.

Press the heat level button to cycle through the available settings. The corresponding indicator light will show the selected level.

- **Automatic Shut-off:** For safety and energy conservation, the blanket is designed to automatically shut off after 4 hours of continuous use. This feature cannot be adjusted. To restart the blanket after auto-off, simply press the power button again.

CARE & MAINTENANCE

Proper care will ensure the longevity and performance of your heated blanket. Always follow these instructions carefully.



Image: A user demonstrating the machine washability of the blanket by placing it into a washing machine, with a close-up inset illustrating the simple process of detaching the controller before washing.

Washing Instructions:

1. **Disconnect Power:** Ensure the blanket is unplugged from the wall outlet.
2. **Remove Controller:** Detach the control unit from the blanket by gently pulling the connector. Ensure the connector is completely dry before reattaching.

3. **Machine Wash:** Machine wash the blanket on a gentle cycle with cold water (below 30 °C / 86 °F). Use a mild detergent. Do not bleach.
4. **Rinse Thoroughly:** Ensure all detergent is rinsed out.
5. **Tumble Dry:** Tumble dry on low heat or air dry. Ensure the blanket is completely dry before reconnecting the controller and using it. Do not iron.

Storage:

When not in use, store the blanket in a cool, dry place. Avoid folding it tightly or placing heavy objects on top, which could damage the internal heating wires.

TROUBLESHOOTING

If you experience issues with your CURECURE Electric Heated Throw Blanket, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blanket does not heat.	Not plugged in; controller not connected securely; power outage; internal safety shut-off activated.	Ensure power cord is firmly plugged into a working outlet. Check that the controller is securely connected to the blanket. Unplug and re-plug the blanket to reset.
Controller feels warm.	Normal operation; controller covered.	A slight warmth in the controller during operation is normal. Ensure the controller is not covered by the blanket or other items, allowing for proper ventilation.
Blanket heats unevenly.	Blanket is folded or bunched.	Unfold and spread the blanket evenly. Avoid folding or bunching the blanket during use.
Blanket automatically turns off too soon.	4-hour auto-off feature; overheating protection activated.	The blanket has a built-in 4-hour auto-off timer. If it turns off before 4 hours, it may be due to overheating protection. Unplug, let it cool for 30 minutes, then restart. Ensure it's not covered or bunched.

If the problem persists after trying these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	OWF-PJE
Dimensions	50"L x 60"W (127 cm x 152 cm)
Material	Flannel & Shu Cotton
Color	Rose Red
Heating Levels	4 (Warm, Low, Med, High)
Auto-Off Timer	4 Hours

Feature	Detail
Power Supply	120V AC
Care Instructions	Machine Washable (Controller Removable)
Item Weight	3 Pounds

WARRANTY & SUPPORT

CURECURE products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the product packaging or contact our customer support.

Customer Support:

If you have any questions, concerns, or require assistance with your CURECURE Electric Heated Throw Blanket, please do not hesitate to contact our customer support team. Please have your model number (OWF-PJE) and purchase information ready when contacting support.

For the most up-to-date contact information, please visit the official CURECURE brand store on Amazon or refer to the contact details provided with your product packaging.

Online Store: [CURECURE Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question