

[Manuals.plus](#) /

› [dgtenk](#) /

› dgtenk MB06 Portable Bluetooth MP3 Player with Clip User Manual


dgtenk MB06

dgtenk MB06 Portable Bluetooth MP3 Player with Clip User Manual

Model: MB06

1. PRODUCT OVERVIEW

The dgtenk MB06 is a compact and versatile portable MP3 player designed for music enthusiasts and active users. It features Bluetooth 5.0 connectivity, HiFi lossless sound, a 2.4-inch screen, and a convenient clip design for portability. This device supports various functions including music playback, voice recording, FM radio, video playback, photo viewing, and e-book reading.

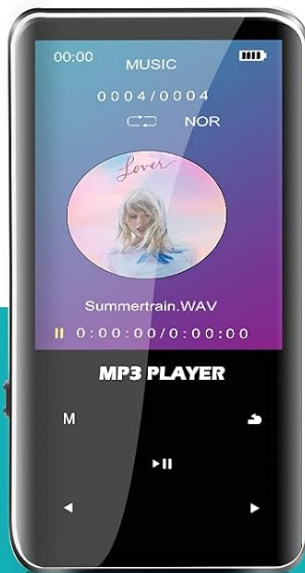

Portable Clip design, free your hands



Image: The dgtenk MB06 MP3 Player showcasing its portable clip design and how it can be worn during activities like running, cycling, and gym workouts, freeing your hands.

2. WHAT'S IN THE BOX

Please check the package contents upon unboxing:

- 1x dgtenk Bluetooth MP3 Player with Clip
- 1x Earphone
- 1x USB Cable
- 1x User Manual
- 1x 32GB TF card (pre-installed or included separately)



- ① 1x Bluetooth MP3 Player
- ② 1x User Manual
- ③ 1x USB Cable
- ④ 1x earphone
- ⑤ 1x 32G TF card

Image: A visual representation of the items included in the product package: the MP3 player, earphones, USB cable, user manual, and a 32GB TF card.

3. SETUP GUIDE

3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB cable to the device's charging port and plug the other end into a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

3.2 Inserting the TF Card

The device comes with a 32GB TF card. Locate the TF card slot on the side of the player. Gently insert the TF card into the slot until it clicks into place. To remove, push the card in again until it springs out.

3.3 Connecting Headphones

Plug the included earphones into the 3.5mm audio jack on the device. For optimal sound quality and FM radio reception, wired headphones are recommended.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The MP3 player features sensitive touch buttons for navigation. Use the directional arrows to move between menu options and the 'M' button for menu/back, and the play/pause button to select. The 'back' arrow typically returns to the previous screen.

Touch button

Sensitive touch buttons ,easy to operate



Image: Close-up of the dgtenk MB06 MP3 Player's screen, illustrating the touch-sensitive navigation buttons at the bottom.

4.2 Music Playback (HiFi Lossless Sound)

To play music, navigate to the 'Music' icon on the main menu. Select your desired song from the stored files. The device supports HiFi lossless sound quality for an enhanced listening experience.



Image: A person enjoying music with the dgtenk MB06 MP3 Player and over-ear headphones, emphasizing the HiFi lossless sound feature.

4.3 Bluetooth 5.0 Connectivity

The MB06 features Bluetooth 5.0 for wireless audio streaming. Navigate to the 'Bluetooth' menu, turn on Bluetooth, and search for available devices. Select your Bluetooth headphones or speaker to pair. The device also has a built-in speaker for listening without headphones.

Bluetooth 5.0

The latest Bluetooth technology

Transmits data faster, farther and more stable

It uses less energy and lasts longer



Earphone or Headphone



Speaker



Image: The dgtenk MB06 MP3 Player displaying its Bluetooth 5.0 capability, with icons for connecting to earphones or a speaker.

4.4 FM Radio

To use the FM radio, ensure wired earphones are connected as they act as the antenna. Select the 'FM Radio' icon from the main menu. You can manually tune or auto-scan for stations.

4.5 Voice Recorder

The device includes a voice recorder function. Select the 'Recorder' icon. You can start recording with a single key press. Recorded files are saved and can be accessed through the 'Recording Library'.



One-key recording

Record every important moment quickly and easily

Image: The dgtenk MB06 MP3 Player displaying its voice recording interface, with a microphone icon and recording time, highlighting the one-key recording feature.

4.6 Other Functions

The MB06 offers additional utility tools:

- **Video Playback:** Supports MP4 format.
- **Picture Viewing:** Browse stored images.
- **E-book:** Read text files.
- **Alarm Clock:** Set alarms with your favorite music.
- **Stopwatch:** A basic timing function.
- **Calendar:** View the current date.



Multi-function



Lossless
Music



Bluetooth 5.0



video



Picture



Recorder



FM radio



E-book



A-B repeat



Calendar



Alarm clock



Stopwatch

Image: The dgtenk MB06 MP3 Player's main menu, illustrating various functions such as Lossless Music, Bluetooth 5.0, Video, Picture, Recorder, FM Radio, E-book, A-B Repeat, Calendar, Alarm Clock, and Stopwatch.

5. MAINTENANCE AND CARE

- Avoid dropping or violently hitting the MP3 player, as this can cause serious damage or malfunction.
- Do not attempt to open or disassemble the device. There are no user-serviceable parts inside.
- If the MP3 player is not used for an extended period, charge and discharge the product once every two months to maintain battery health.
- To transfer music, connect the device to your computer using the Type-C USB cable. The device will be recognized as a mass storage device, allowing you to drag and drop music files into the appropriate folders.

6. TROUBLESHOOTING

- **Device not recognized by PC:** Ensure the USB cable is securely connected. Try a different USB port or cable. The device should appear as a removable disk.
- **Files not playing or recognized:** Ensure your audio files are in a compatible format (e.g., MP3, WAV, FLAC for lossless). Video files should be in MP4 format. Some audiobooks may require specific formats or software for proper indexing.
- **Volume button unresponsive:** If the volume 'up' button stops working, try a factory reset (refer to the 'System Settings' menu for this option). If using headphones with built-in volume control, you may still adjust volume through them.
- **Accidental voice recording:** If the device frequently enters voice recording mode unintentionally, be mindful of button presses as the touch controls can be sensitive. Exit recording mode by pressing the 'M' button or navigating back.
- **Poor FM radio reception:** Ensure wired earphones are properly plugged in, as they serve as the antenna for the FM radio function.

7. SPECIFICATIONS

Feature	Description
Brand	dgtenk
Model Name	MB06 Wireless Mini Digital Hifi Lossless sound Music Players
Connectivity Technology	Bluetooth 5.0
Memory Storage Capacity	32 GB (expandable up to 128GB via Micro SD)
Color	Black
Screen Size	2.4 Inches
Special Features	HIFI lossless sound, Clip design, Built-in speaker, FM radio, Voice recorder, Video playback, Photo viewer, E-book, Alarm clock, Stopwatch
Supported Media Type	Micro SD
Supported Standards	MP4 (for video)

8. WARRANTY AND SUPPORT

The dgtenk MB06 MP3 Player comes with a one-year warranty covering non-human damage. For any issues or support, please contact dgtenk customer service through the retailer where the product was purchased.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question