

Manuals.plus /

› PowerXL /

› Power XL Shaq Smokeless Grill and Press Instruction Manual

PowerXL SHAQ-SGP

Power XL Shaq Smokeless Grill and Press

Instruction Manual

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS BEFORE USE.**
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Power XL Shaq Smokeless Grill and Press:

- Main Unit with Digital Display

- Upper Grill Plate
- Lower Grill Plate
- Drip Tray
- Power Cord



Image: The Power XL Shaq Smokeless Grill and Press, featuring its sleek stainless steel finish and prominent digital control panel. The unit is shown closed, highlighting its compact design.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wipe the main unit with a clean, damp cloth. Wash the removable grill plates and drip tray in warm, soapy water or in the dishwasher. Rinse and dry thoroughly.
3. **Assemble:** Ensure the drip tray is correctly inserted into its slot at the bottom of the unit. Place the lower and upper grill plates securely onto their respective heating elements.
4. **Placement:** Place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
5. **Power Connection:** Plug the power cord into a grounded 120V AC outlet. The digital display will illuminate.

OPERATING INSTRUCTIONS

General Operation

1. **Power On:** Press the **ON/OFF** button to turn on the grill. The default temperature and time settings will appear on the digital display.
2. **Adjust Settings:** Use the **Temperature Up/Down** arrows to set your desired cooking temperature. Use the **Time Up/Down** arrows to set the cooking duration.
3. **Preheat:** Allow the grill to preheat until it reaches the set temperature. The indicator light will change or

the display will confirm readiness.

4. **Place Food:** Carefully place your food onto the lower grill plate. Close the lid for contact grilling or leave open for open grilling.
5. **Smokeless Fan:** Press the **FAN** button to activate the smoke-extracting fan. It is recommended to use the fan during all cooking operations to minimize smoke.
6. **Cooking:** Cook food until desired doneness is achieved. The floating hinge allows the top plate to adjust to various food thicknesses.
7. **Power Off:** Once cooking is complete, press the **ON/OFF** button to turn off the grill. Unplug the appliance from the wall outlet and allow it to cool completely before cleaning.

3-in-1 Functionality

- **Contact Grill:** Ideal for burgers, chicken, and vegetables. Close the lid to cook both sides simultaneously.
- **Panini Press:** Perfect for sandwiches, paninis, and quesadillas. The floating hinge ensures even pressure and browning.
- **Open Grill:** Lay the grill flat to use both plates as an open grilling surface, suitable for larger quantities or different types of food. Consult the manual for specific instructions on how to open the grill fully.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and optimal performance of your grill.

1. **Always Unplug:** Ensure the grill is unplugged and completely cooled before cleaning.
2. **Remove Parts:** Carefully remove the grill plates and drip tray.
3. **Dishwasher Safe:** The removable grill plates and drip tray are dishwasher safe for easy cleaning. For best results, place them on the top rack.
4. **Hand Washing:** If hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry completely before reassembling or storing.
5. **Main Unit:** Wipe the exterior of the main unit with a clean, damp cloth. Do not immerse the main unit in water or any other liquid.
6. **Stubborn Residue:** For stubborn food residue on the grill plates, soak them in warm, soapy water for a few minutes before cleaning. Do not use metal scouring pads or abrasive cleaners, as they may damage the non-stick coating.
7. **Storage:** Once clean and dry, reassemble the grill and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; power outlet malfunction; unit malfunction.	Ensure power cord is securely plugged into a working outlet. Check circuit breaker. If issue persists, contact customer support.
Excessive smoke during cooking.	Fan not activated; drip tray full; excessive grease/marinade.	Ensure the smokeless fan is turned on. Empty and clean the drip tray. Trim excess fat from food and use marinades sparingly.
Food not cooking evenly.	Grill not preheated; food thickness uneven.	Allow grill to fully preheat before placing food. Ensure food is of relatively even thickness for best results.
Digital display not working.	Power issue; internal fault.	Check power connection. Unplug and plug back in. If display remains off, contact customer support.

SPECIFICATIONS

- **Model Number:** SHAQ-SGP
- **Dimensions:** Approximately 16.3 x 15.1 x 9.7 inches (Package Dimensions)
- **Weight:** Approximately 14.77 pounds
- **Power:** Standard 120V AC (details not specified, typical for indoor grills)
- **Special Features:** Temperature control, grease management system, smokeless technology with fan.
- **Material:** PFAS Free, PFOA Free, BPA Free, Lead Free.

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official PowerXL website. Keep your purchase receipt as proof of purchase.

For technical support, troubleshooting assistance, or to order replacement parts, please contact PowerXL Customer Service. Contact details can typically be found on the product packaging or the official brand website.

Note: This manual provides general guidelines. Specific cooking times and temperatures may vary based on food type and personal preference.