

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [QWORK](#) /

› [QWORK 20-Inch Chainsaw Chain Cover \(3-Pack\) Instruction Manual](#)

QWORK WD5530

QWORK 20-Inch Chainsaw Chain Cover (3-Pack) Instruction Manual

Model: WD5530

1. PRODUCT OVERVIEW

The QWORK Chainsaw Chain Cover is designed to provide protection for chainsaw bars and chains during storage and transportation. This product includes three 20-inch covers, suitable for various chainsaw models. The cover helps prevent accidental contact with the sharp chain, reduces the risk of damage to the chain, and protects other items from chain lubricant and debris.



Image 1.1: A single QWORK 20-inch chainsaw chain cover, shown in bright orange, designed to protect the chainsaw bar and chain.

2. SAFETY INFORMATION

Always prioritize safety when handling chainsaws. This chain cover is intended to add a layer of protection but does not replace safe handling practices. Ensure the chainsaw engine is off and the chain is stationary before installing or removing the cover. Keep hands and fingers clear of the chain and bar at all times. Store chainsaws with the cover installed in a secure location, out of reach of children and unauthorized users.

3. PRODUCT FEATURES

- **Durable Construction:** Manufactured from impact-resistant plastic material, ensuring thickness, sturdiness, and long-term durability.
- **Enhanced Safety:** Designed to protect the chainsaw chain from accidental damage and to safeguard users and surrounding objects from the sharp chain.
- **Ease of Use:** The cover is designed for simple installation, sliding onto the chainsaw bar without difficulty.
- **Universal Fit:** Provides a practical solution for the storage and transport of chainsaws, accommodating various bar and chain sizes up to 20 inches.



Image 3.1: Three QWORK 20-inch chainsaw chain covers, indicating the multi-pack offering.

4. SPECIFICATIONS

Specification	Detail
Model Number	WD5530
Material	Impact-resistant plastic

Specification	Detail
Size	20 Inch (50cm)
Item Length	Approximately 20.25 inches (510mm)
Item Weight	Approximately 14 ounces (per pack of 3)
Package Dimensions	20.25 x 4.25 x 1.9 inches
Color	Orange

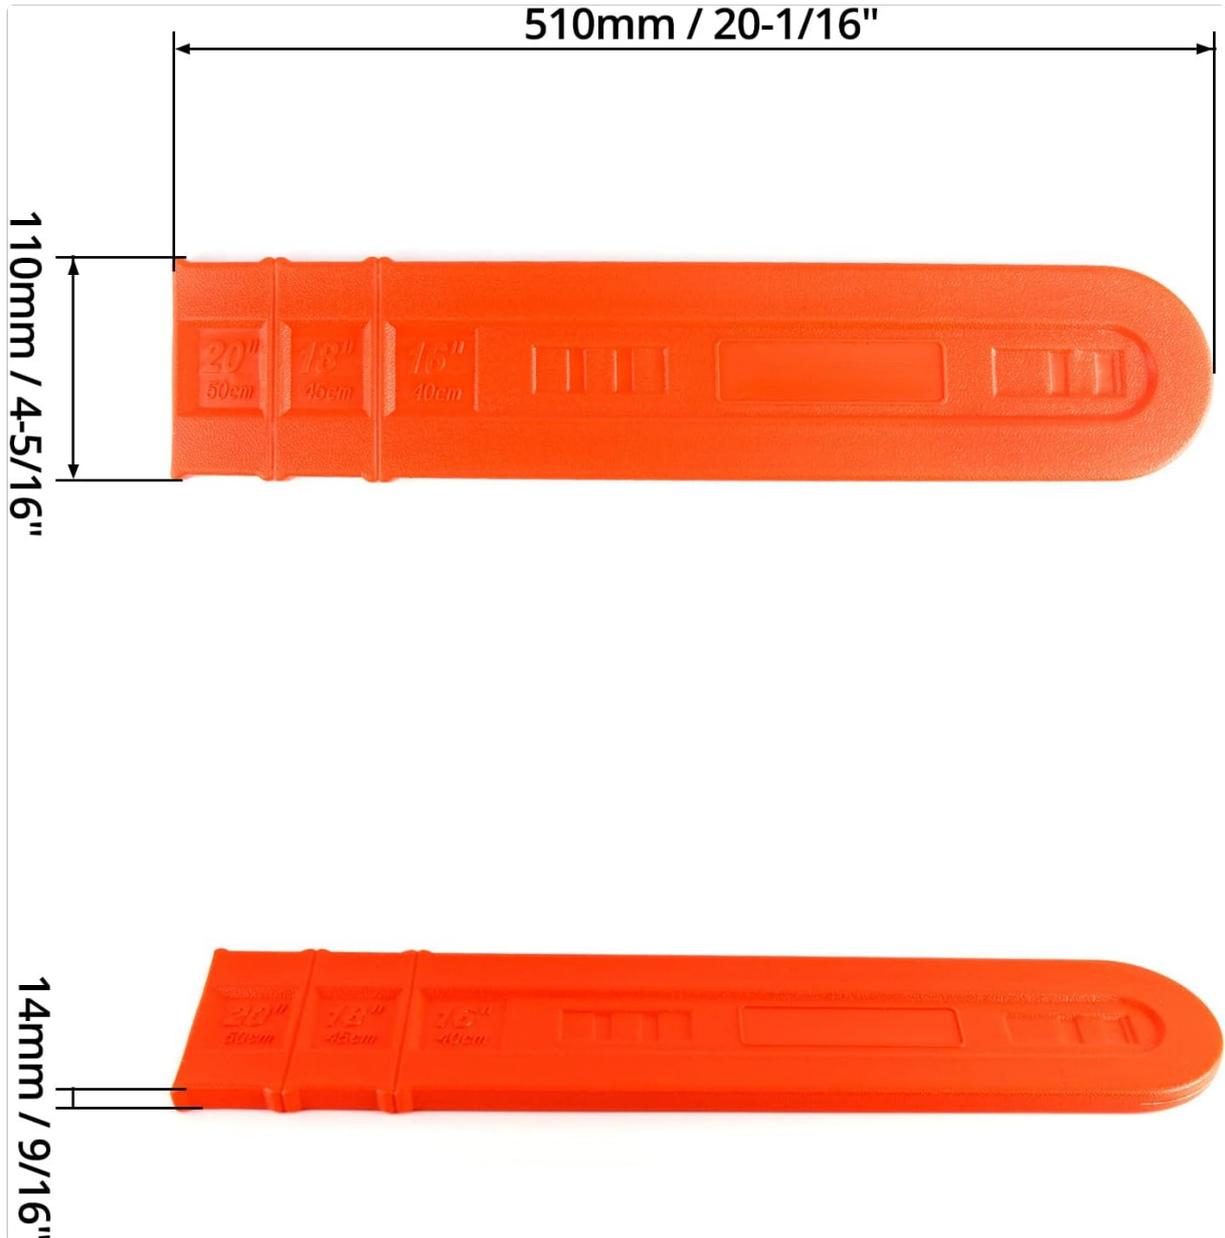


Image 4.1: Diagram illustrating the key dimensions of the chainsaw chain cover, including length and width.



Image 4.2: Close-up view of the size markings (20", 18", 16") embossed on the chainsaw chain cover, indicating compatibility.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the physical dimensions and features of the QWORK Chainsaw Chain Cover, including measurements and material overview.

5. SETUP AND INSTALLATION

1. **Ensure Safety:** Before installation, confirm that the chainsaw engine is turned off and the chain is completely stopped.
2. **Position the Cover:** Align the open end of the chain cover with the tip of the chainsaw bar.
3. **Slide On:** Gently slide the cover along the chainsaw bar until it fully encloses the chain and bar. Ensure the cover is seated firmly and securely.
4. **Verify Fit:** Check that the cover completely covers the sharp edges of the chain and the entire length of the bar. The cover should not easily slip off.



Image 5.1: A close-up view of the open end of the chainsaw chain cover, showing the entry point for the chainsaw bar.

6. OPERATING INSTRUCTIONS

The QWORK Chainsaw Chain Cover is straightforward to operate:

- **For Storage:** After using your chainsaw and ensuring it is clean and the engine is off, slide the chain cover onto the bar as described in the Setup section. This protects the chain from environmental elements and prevents accidental contact.
- **For Transport:** Always transport your chainsaw with the chain cover securely in place. This minimizes the risk of injury during handling and protects vehicle interiors or other equipment from damage and oil residue.
- **Removal:** To use the chainsaw, simply slide the cover off the bar. Store the cover in a safe place where it will not be damaged or lost.

7. MAINTENANCE

Maintaining your QWORK Chainsaw Chain Cover is simple:

- **Cleaning:** Periodically wipe the cover clean with a damp cloth to remove any sawdust, oil, or dirt. For stubborn grime, a mild soap solution can be used. Ensure the cover is dry before re-installing.
- **Inspection:** Regularly inspect the cover for any signs of cracks, damage, or excessive wear. A damaged cover may not provide adequate protection and should be replaced.
- **Storage:** When not in use, store the cover in a cool, dry place away from direct sunlight to prolong its lifespan.

8. TROUBLESHOOTING

- **Cover Does Not Fit:** Ensure your chainsaw bar length is 20 inches or less. While the cover is designed for 20-inch bars, it may also accommodate slightly shorter bars (e.g., 16" or 18") as indicated by the markings. If the bar is longer than 20 inches, this cover will not be suitable.
- **Cover Feels Loose:** The cover is designed to slide on easily. If it feels excessively loose, ensure it is fully seated. If it still feels loose, it might be due to a thinner bar profile than anticipated. While it still offers protection, exercise caution during transport.
- **Cover is Damaged:** If the cover shows signs of significant cracks or breaks, it should be replaced immediately to ensure continued safety and protection.

9. WARRANTY AND SUPPORT

QWORK products are manufactured to high standards. For specific warranty information or support inquiries, please refer to the product packaging or contact QWORK customer service directly through their official website or the retailer where the product was purchased. Please retain your proof of purchase for any warranty claims.