

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SECRUI](#) /

› [SECRUI Wireless Doorbell System \(Model M520x2+F55\) Instruction Manual](#)

SECRUI M520x2+F55

SECRUI Wireless Doorbell System (Model M520x2+F55)

User Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your SECRUI Wireless Doorbell System, Model M520x2+F55. This system is designed for ease of use and reliable performance in various environments, including homes, classrooms, and offices.

PRODUCT OVERVIEW

The SECRUI Wireless Doorbell System includes the following components:

- 1 x Transmitter (Push Button, battery included)
- 2 x Plug-in Receivers
- 1 x Adhesive Tape for mounting
- 2 x Screws and 2 x Anchors for mounting
- 1 x User Manual

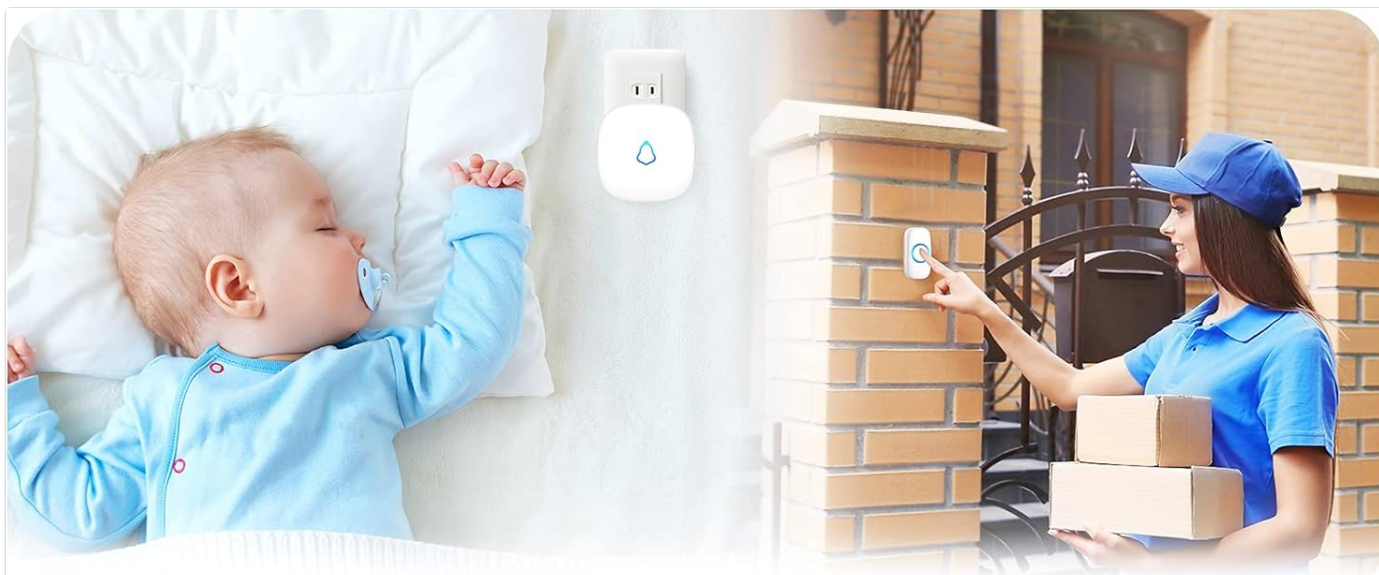


Image: The main components of the SECRUI Wireless Doorbell System, including the white push button and two white plug-in receivers.

SETUP & INSTALLATION

The doorbell system is designed for quick and easy setup, ready to operate right out of the box.

1. **Receiver Placement:** Plug each mini door bell receiver into a standard AC socket. Ensure the socket is easily accessible and not obstructed.
2. **Transmitter (Push Button) Installation:** Choose a suitable location for the push button, typically near your entrance. The button can be installed using either the provided double-sided adhesive tape or screws.
 - **Adhesive Installation:** Clean the mounting surface thoroughly. Peel off the protective film from one side of the adhesive tape and attach it to the back of the transmitter. Peel off the other side and firmly press the transmitter onto the desired surface for at least 30 seconds.
 - **Screw Installation:** For a more secure attachment, use the provided screws and anchors. Mark the desired drilling points, drill pilot holes, insert the anchors, and then secure the transmitter with the screws.



52 CHIMES TO CHOOSE FROM



Image: Visual guide demonstrating the installation of the doorbell push button and the plug-in receiver.

Installation Video Guide

Video: A short demonstration by SECRUI on the easy installation process of the wireless doorbell system.

OPERATING INSTRUCTIONS

Your SECRUI Wireless Doorbell offers customizable settings for chimes and volume levels.

Chime Selection

The system features 58 different chimes. To change the chime:

- Locate the music selection button on the side of the receiver.
- Press the button repeatedly to cycle through the available chimes until you find your preferred melody.
- The system includes a memory function, which will retain your last selected chime even after a power outage.

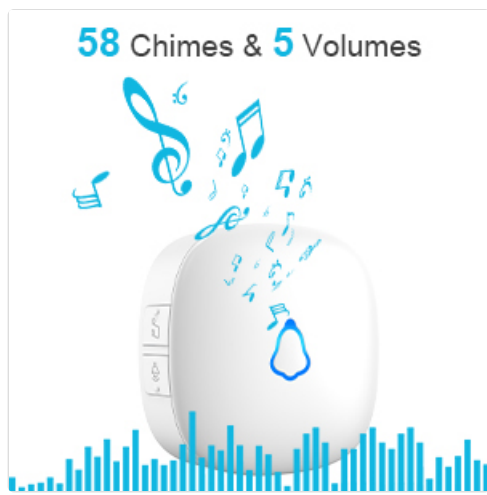


Image: An illustration highlighting the 58 available chimes and 5 volume levels.

Volume Adjustment

There are 5 adjustable volume levels to ensure the doorbell is audible in any part of your home or office.

- Locate the volume control button on the side of the receiver.
- Press the button to cycle through the 5 volume levels. Select the level that best suits your needs.

LED Indicator

The push button and receivers feature an LED indicator that flashes when activated, providing a visual alert in addition to the audible chime.



Image: The LED indicator on both the push button and receiver provides a visual alert.

MAINTENANCE

To ensure optimal performance and longevity of your doorbell system, follow these maintenance guidelines:

- **Battery Replacement:** The transmitter (push button) uses 1 CR2032 battery. The average battery life is approximately 3 years. When the LED indicator on the transmitter no longer lights up or the signal range decreases, it's time to replace the battery. Carefully open the transmitter casing and replace the CR2032 battery, ensuring correct polarity.
- **Cleaning:** Wipe the doorbell components with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Weather Resistance:** The push button is IP55 waterproof and designed to withstand various weather conditions, including wind, snow, sleet, and extreme temperatures (-4°F to 140°F). However, avoid submerging it in water.



Image: Instructions for replacing the CR2032 battery in the push button.

TROUBLESHOOTING

If you encounter issues with your SECRUI Wireless Doorbell, consider the following:

- **No Sound/Signal:** Check if the receiver is properly plugged into a working outlet. Ensure the transmitter battery is not depleted and is installed correctly. Verify that the distance between the transmitter and receiver is within the specified 300 ft range (up to 1000 ft in open areas) and that there are no major obstructions.
- **Interference:** The doorbell uses high-frequency electronic technology with anti-interference features. However, strong electromagnetic fields or large metal objects nearby can sometimes affect performance. Try relocating the receiver or transmitter.
- **Chime/Volume Not Changing:** Ensure the receiver is powered on. Press the respective buttons firmly to cycle through options. If the issue persists, unplug the receiver for a few seconds and plug it back in to reset.

SPECIFICATIONS

Brand	SECRUI
Model Number	M520x2+F55
Item Weight	6.4 ounces
Product Dimensions	2.36 x 2.36 x 0.98 inches
Batteries	1 CR2032 battery required (included)
Average Battery Life	3 years
Color	White
Material	ABS
Power Source	AC & Battery-Powered
Voltage	120 Volts (AC)
Installation Method	Self-Adhesive & Screw-In
Temperature Range	-4-140 Degrees Fahrenheit
Sound Level	120 Decibels

Special Features	Adjustable Volume, Optional Ringtone, Memory Function, LED Indicator
Accessory Connection Type	Wireless

Safety Information






Please observe the following safety precautions:

- Always follow manufacturer's advice when using power tools and wear suitable protective equipment (e.g., safety goggles) when drilling holes.
- Before drilling holes in walls, check for hidden electricity cables and water pipes. The use of a cable/pipe locator is advisable if in doubt.

Warranty & Support

SECRUI products typically come with a 1-year warranty. For any product inquiries, technical support, or warranty claims, please contact SECRUI customer service. Many users have reported positive experiences with SECRUI's responsive and helpful support team.

Related Documents - M520x2+F55

	<p>SECRUI Wireless Doorbell M5373/F152 - Long Range, 32 Chimes, IP55 Waterproof</p> <p>Explore the SECRUI Wireless Doorbell M5373/F152, featuring a 1,000 ft long range, 32 selectable chimes, and IP55 waterproof rating. This easy-to-install, battery-operated doorbell is ideal for homes, schools, and offices.</p>
	<p>SECRUI Wireless Doorbell M520+F55 User Manual</p> <p>Comprehensive user manual for the SECRUI Wireless Doorbell, Model M520+F55. Learn about setup, operation, installation, troubleshooting, and specifications for this plug-in doorbell with a 1000ft range and 58 melodies.</p>
	<p>SECRUI Wireless Doorbell M520+F55 User Manual</p> <p>Comprehensive user manual for the SECRUI Wireless Doorbell, Model M520+F55. Includes installation instructions, setup, operation, troubleshooting, and specifications for the doorbell and push button.</p>
	<p>Secrui Doorbell M523 User Manual: Setup, Features, and Pairing Guide</p> <p>Comprehensive user manual for the Secrui Doorbell M523 wireless doorbell. Learn about its features, specifications, setup, operation, pairing, and safety guidelines. Includes contact information for support.</p>
	<p>SECRUI Wireless Doorbell M508+F55 User Manual: Setup, Installation, and Troubleshooting</p> <p>Comprehensive user manual for the SECRUI Wireless Doorbell Model M508+F55. Learn how to install, set up, pair transmitters, troubleshoot common issues, and understand specifications. Features include adjustable volume, multiple tunes, and a waterproof transmitter.</p>



[SECURI Wireless Doorbell M520+F55 User Manual | Installation & Operation Guide](#)

Comprehensive user manual for the SECURI Wireless Doorbell Set (M520+F55). Learn about installation, pairing, features, troubleshooting, and technical specifications for your SECURI doorbell.