

Vileda Steam Plus 168932

Vileda Steam Plus Triangular Edition with Power Pad - Instruction Manual

Brand: Vileda | Model: Steam Plus 168932

1. PRODUCT OVERVIEW

The Vileda Steam Plus Triangular Edition with Power Pad is a powerful steam mop designed for hygienic cleaning of all hard floors and carpets without the need for harsh chemicals. Its innovative design ensures efficient and thorough cleaning, reaching even difficult corners.



The Vileda Steam Plus in action, demonstrating its steam cleaning capability on a hard floor.

Key Features:

- **Hygienic Cleaning:** Eliminates up to 99.9% of bacteria and viruses* from all floors and carpets using only steam.
- **Triangular Head:** Designed for easy cleaning in corners, under furniture, and in small spaces.
- **Quick Heat-up:** Ready to use in just 15 seconds.
- **Easy Storage:** The handle can be easily detached and stored compactly.
- **Versatile:** Suitable for all hard floors and carpets (with carpet glider).
- **Power Pad:** An additional PowerPad is included for tackling stubborn dirt.

2. SAFETY INSTRUCTIONS

Please read all safety warnings and instructions carefully before using this appliance. Failure to follow the warnings and instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the electrical outlet before filling with water, cleaning, or performing maintenance.
- Use only distilled or demineralized water in the water tank to prevent limescale buildup and ensure optimal performance. **Do not use tap water.**
- **Never add any cleaning detergents, perfumes, essential oils, vinegar, or other chemical products to the water tank.** This can damage the appliance and void the warranty.
- Do not direct steam at people, animals, or electrical outlets.
- Keep the appliance out of reach of children and pets.
- Do not leave the steam mop unattended while it is plugged in or operating.
- Ensure the power cord is not damaged and avoid kinking or stretching it.
- Always allow the appliance to cool down completely before storing.



The Vileda Steam Plus operates without the need for chemical cleaning agents, promoting a chemical-free cleaning process.

3. PACKAGE CONTENTS

Carefully unpack your Vileda Steam Plus and check that all items are present and in good condition. If any items are missing or damaged, please contact your retailer.

- 1 x Vileda Steam Plus Unit
- 2 x Standard Microfiber Cleaning Pads
- 1 x PowerPad Microfiber Cleaning Pad
- 1 x Carpet Glider (for use on carpets)

- 1 x Water Filling Jug



The Vileda Steam Plus unit, accompanied by its included Power Pad and two standard microfiber cleaning pads.

4. SETUP

4.1 Assembling the Steam Mop

1. Insert the handle into the main body of the steam mop until it clicks securely into place.
2. Ensure all connections are firm before use.



Instructions for assembling the handle and a visual representation of the Vileda Steam Plus's compact storage design.

4.2 Filling the Water Tank

1. Ensure the appliance is unplugged from the power outlet.
2. Open the water tank cap.
3. Using the provided filling jug, carefully pour distilled or demineralized water into the tank. Do not overfill. The tank capacity is 400 ml.
4. Close the water tank cap securely.



A detailed view of the water tank on the Vileda Steam Plus, indicating the water level.

4.3 Attaching the Cleaning Pad

1. Place the desired microfiber cleaning pad (standard or PowerPad) on the floor with the white side facing up.
2. Align the steam mop head with the pad and press down firmly to attach it using the hook-and-loop fasteners.

3. For carpet cleaning, place the carpet glider over the cleaning pad.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Heating Up

1. Plug the power cord into a suitable electrical outlet.
2. The steam mop will begin to heat up immediately. It is ready for use in approximately 15 seconds.



The Vileda Steam Plus heats up quickly, ready for use in just 15 seconds.

5.2 Adjusting Steam Settings

1. The Vileda Steam Plus features three different steam settings: Min, Mid, and Max.
2. Rotate the red dial on the main body of the mop to select the appropriate steam level for your floor type:
 - **Min:** For delicate floors like laminate or wood.
 - **Mid:** For general cleaning of tiles or vinyl.
 - **Max:** For heavily soiled areas or carpets.



The control dial allows selection of three distinct steam settings for various cleaning needs.

5.3 Cleaning Your Floors

1. Once heated, gently push the mop forward and backward over the floor surface.
2. The triangular head design allows for easy maneuverability into corners and tight spaces.
3. For stubborn stains, hold the mop over the area for a few seconds to allow the steam to penetrate.
4. When cleaning carpets, ensure the carpet glider is attached and move the mop slowly over the carpet surface.



The triangular head design allows the steam mop to effectively clean hard-to-reach corners.



The Vileda Steam Plus can also be used for refreshing and cleaning carpets.

5.4 Switching Off

1. To switch off the appliance, simply unplug it from the power outlet. The steam mop is designed to be ready for use again immediately upon re-plugging, without needing to reheat.

6. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your Vileda Steam Plus.

6.1 Cleaning Pads

1. After each use, remove the cleaning pad from the mop head.
2. The microfiber cleaning pads are machine washable at up to 60°C (140°F). Do not use fabric softener or bleach.
3. Allow the pads to air dry completely before storing or reusing.



The cleaning pads are machine washable for easy maintenance.

6.2 Descaling the Appliance

Limescale buildup can affect steam production. Regular descaling is crucial, especially if using hard water (even if filtered, some minerals may remain). It is recommended to descale every 3-6 months depending on water hardness and frequency of use.

1. Ensure the appliance is unplugged and completely cool.
2. Prepare a descaling solution according to the instructions of a commercial descaler specifically designed for steam appliances or coffee machines. **Do not use vinegar, as it may not be effective for severe buildup and can potentially damage internal components over time.**
3. Pour the descaling solution into the water tank.
4. Plug in the appliance and allow it to heat up. Let it run until the tank is empty, directing the steam into a sink or bucket.
5. Repeat the process with clean distilled water to rinse out any remaining descaling solution.

6.3 Storage

1. Empty any remaining water from the tank after each use.
2. Allow the mop to cool down completely.
3. For compact storage, the handle can be detached and clipped to the back of the main unit.
4. Store the appliance in a dry, safe place.



The low profile design allows for easy storage under furniture.

7. TROUBLESHOOTING

If you encounter any issues with your Vileda Steam Plus, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank is empty. Limescale buildup. Appliance not plugged in.	Refill the water tank with distilled water. Perform descaling procedure (see Section 6.2). Ensure the appliance is securely plugged into a working outlet.
Mop head not gliding smoothly.	Cleaning pad is too dirty or worn. Incorrect pad for surface.	Replace or wash the cleaning pad. Ensure the correct pad is used for the floor type. Use carpet glider for carpets.
Water leaking from the unit.	Water tank cap not securely closed. Tank overfilled. Internal seal issue.	Ensure the water tank cap is tightly closed. Do not overfill the water tank. If problem persists, contact customer support.
Appliance not heating up.	No power. Appliance malfunction.	Check power outlet and cord connection. Contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Vileda
Model Number	168932
Color	Black
Product Dimensions (L x W x H)	14.7 x 25.6 x 68.7 cm (5.79 x 10.08 x 27.05 inches)
Weight	2.3 Kilograms (5.07 lbs)
Power	1550 Watts
Voltage	230 Volts
Water Tank Volume	400 Milliliters
Heat-up Time	15 seconds
Special Feature	Portable
Surface Recommendation	Hard Floor, Carpet

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. Vileda products typically come with a manufacturer's warranty covering defects in materials and workmanship.

For technical support, spare parts, or further assistance, please visit the official Vileda website or contact their customer service department. Keep your proof of purchase handy when seeking support.

Vileda Official Website: www.vileda.com



[Vileda Steam Mop User Manual and Safety Guide](#)

Comprehensive guide for the Vileda Steam Mop, covering assembly, operation, safety precautions, troubleshooting, and maintenance. Learn how to effectively use the steam mop for hygienic cleaning of floors and carpets.



[Vileda Looper/Looper One Electrical Spray Mop User Manual](#)

Comprehensive user manual for the Vileda Looper and Looper One electrical spray mops, covering assembly, operation, charging, safety, and warranty information.



[Vileda Ultramax Mop: Frequently Asked Questions](#)

Find answers to common questions about the Vileda Ultramax Complete Mop and Bucket Set, including cleaning instructions, suitable surfaces, and set contents.



[Vileda Steam PLUS: Bruksanvisning och Säkerhetsregler](#)

En omfattande guide för säker och korrekt användning av Vileda STEAM PLUS ångmopp, inklusive monteringsanvisningar, användningstips och underhåll.