

Desview T12

Desview T12 Portable Teleprompter User Manual

Model: T12

1. INTRODUCTION

The Desview T12 is a portable and foldable teleprompter designed for use with DSLR/mirrorless cameras, smartphones, and tablets. It features a 70/30 beam splitter glass, an all-metal construction, and includes a Bluetooth remote control for convenient operation. This manual provides detailed instructions for setting up, operating, and maintaining your Desview T12 teleprompter.

2. PRODUCT FEATURES

- **Wide Compatibility:** Supports DSLR/mirrorless cameras and smartphones or tablets up to 28 cm (11 inches) in size.
- **Portable & Foldable Design:** Features a foldable screen and adjustable glass for quick and easy setup. The entire system folds down for convenient transport.
- **Durable Construction:** Manufactured from aluminum alloy, ensuring a robust and well-engineered structure.
- **High-Definition Beam Splitter Glass:** Equipped with a 12.5-inch, 7H hardness, 70/30 visible light transmission beam splitter glass, allowing clear text readability without ghosting.
- **Wide-Angle Lens Support:** Compatible with wide-angle lenses such as 18-105mm without interference.
- **Bluetooth Remote Control:** Includes a remote for controlling text scrolling, speed, and other functions via the dedicated "Desview" app.
- **Included Carrying Bag:** Comes with a protective and attractive carrying bag for secure transportation.

3. PACKAGE CONTENTS

Please verify that all items are present in the package:

- Desview T12 Teleprompter Unit
- Bluetooth Remote Control

- Camera Mounting Plate
- Carrying Bag
- Cleaning Cloth (may vary)

4. SETUP INSTRUCTIONS

4.1 Unpacking and Initial Inspection

Carefully remove all components from the carrying bag. Inspect for any signs of damage during transit. If any parts are missing or damaged, contact customer support.

4.2 Assembling the Teleprompter

1. Unfold the teleprompter unit. The glass panel should be positioned at an angle for reflection.
2. Attach the camera mounting plate to the base of the teleprompter. Ensure it is securely fastened.
3. Adjust the height of the camera mounting platform as needed using the adjustment knobs.

Adjustable lifting platform

All-metal frame, Protect your teleprompter

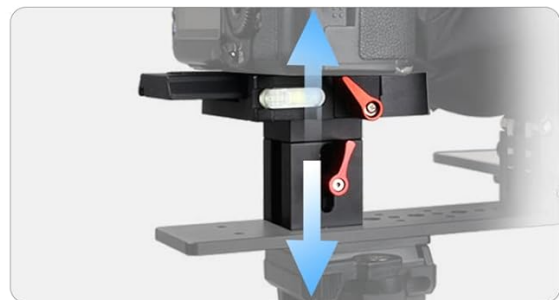


Image: The adjustable lifting platform of the Desview T12 teleprompter, designed to protect the unit and accommodate various camera setups. The image highlights the all-metal frame and adjustment mechanisms.

4.3 Mounting Your Camera

Mount your DSLR or mirrorless camera onto the camera mounting plate. Ensure the lens is positioned correctly to shoot through the teleprompter's glass. Adjust the camera's position to prevent vignetting.



Image: Side view of the Desview T12 teleprompter, illustrating how a camera is mounted and positioned to record through the teleprompter's glass.

4.4 Inserting Your Smartphone or Tablet

Place your smartphone or tablet into the designated tray at the bottom of the teleprompter. The device should be positioned horizontally, facing upwards, so its screen content reflects onto the teleprompter glass. The teleprompter supports devices up to 11.9 inches (30 cm).



Maximum up to 11.9 inch

- smartphone
- tablet
- ipad



Image: A diagram detailing the dimensions of the Desview T12 teleprompter and its maximum compatibility for smartphones, tablets, and iPads, indicating support for devices up to 11.9 inches.



Image: Top-down perspective of the Desview T12 teleprompter, highlighting the camera mounting area and the adjustable tray designed to securely hold a tablet or smartphone.

4.5 App Installation and Remote Pairing

1. Download the free "Desview" app from the App Store (for iOS devices) or Google Play (for Android devices).
2. Install the app on your smartphone or tablet.
3. Turn on the Bluetooth remote control.
4. Open the "Desview" app and follow the in-app instructions to pair the remote control via Bluetooth.

5. OPERATING INSTRUCTIONS

5.1 Preparing Your Script

Input your script into the "Desview" app. You can adjust font size, color, and background color within the app for optimal readability.

5.2 Using the Teleprompter

1. Ensure your camera is recording and properly focused.
2. Start the script scrolling in the "Desview" app.

3. Use the Bluetooth remote control to adjust the scrolling speed to match your speaking pace. The remote allows you to pause, play, and adjust speed.
4. Maintain eye contact with the camera lens while reading the reflected script on the teleprompter glass.



Image: Front view of the Desview T12 teleprompter, demonstrating the clarity of the 70/30 beam splitter glass and how the tablet's screen content is reflected for the presenter to read.

6. MAINTENANCE

6.1 Cleaning the Glass

To clean the beam splitter glass, use a soft, lint-free microfiber cloth. For stubborn smudges, lightly dampen the cloth with a small amount of lens cleaning solution. Avoid abrasive materials or harsh chemicals, as these can damage the glass coating.

6.2 General Care

- Always store the teleprompter in its provided carrying bag when not in use to protect it from dust and physical damage.
- Avoid exposing the teleprompter to extreme temperatures or high humidity.
- Do not attempt to disassemble the teleprompter beyond the intended folding mechanism.

7. TROUBLESHOOTING

7.1 Text Appears Blurry or Ghosted

- Ensure the teleprompter glass is clean. Refer to Section 6.1 for cleaning instructions.
- Verify that your smartphone/tablet screen brightness is set to an appropriate level.
- Check if the tablet/smartphone is correctly positioned in the tray, facing directly upwards.

7.2 Remote Control Not Connecting

- Ensure the remote control has fresh batteries and is powered on.
- Check that Bluetooth is enabled on your smartphone or tablet.
- Restart the "Desview" app and attempt to re-pair the remote control.
- If issues persist, try restarting your smartphone/tablet.

7.3 Camera Lens Vignetting

- Adjust the camera's position on the mounting plate. Move it forward or backward to ensure the lens is centered within the teleprompter's opening.
- If using a wide-angle lens, ensure it is within the supported range (e.g., 18-105mm).

8. SPECIFICATIONS

Model Number	T12
Brand	Desview
Compatible Devices	DSLR/Mirrorless Cameras, iPad, Tablets, Smartphones
Max Device Size (Tablet/Smartphone)	11.9 inches (30 cm)
Screen Size (Glass)	12.5 inches
Beam Splitter Ratio	70/30
Glass Hardness	7H
Material	Aluminum Alloy
Product Weight	1500 Grams
Color	Black
UPC/GTIN	723884578112

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Desview T12 Teleprompter comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures free service for eligible issues. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Desview customer support through the official website or your retailer. We are committed to providing good after-sales service.