

[Manuals.plus](#) /

› [DL-pro](#) /

› DL-pro Drive Unit for Bosch Siemens MUM4 ProfiMixx Food Processors (Model 177509)

DL-pro 177509

DL-pro Drive Unit for Bosch Siemens MUM4 ProfiMixx Food Processors (Model 177509)

Instruction Manual

1. PRODUCT OVERVIEW

This DL-pro drive unit is a replacement part designed for various Bosch Siemens MUM4 ProfiMixx series food processors. It includes the conical wheel and metal ring, essential components for the proper functioning of your kitchen machine.



Image 1: Overview of the DL-pro Drive Unit, Model 177509.

Specifications

- **Model Number:** 177509 (replaces 00177503)
- **Dimensions:** Length: 65 mm, Width: 60 mm, Height: 63 mm
- **Color:** Gray/White
- **Material:** Plastic (PA 66 GF 30)
- **Components:** Drive unit with conical wheel and metal ring



Image 2: Detailed view of the drive unit, showing its physical characteristics and approximate dimensions.

2. COMPATIBILITY

This drive unit is compatible with a wide range of Bosch Siemens MUM4 ProfiMixx food processor models. It is crucial to verify your appliance's model number against the provided compatibility lists to ensure proper fit and function. The part number for this drive unit is 177509, which replaces the older part number 00177503.

Please refer to the images below for a comprehensive list of compatible Bosch Siemens MUM4 series models:

Ersatzteil passend für folgende Bosch und SiemensGeräte:

MUM4410DE/05		MUM4875EU/07	
MUM4410DE/07		MUM4880/05	
MUM4415JP/01		MUM4880/07	
MUM4415TW/01		MUM48A06/07	
MUM4419/01	ProfiMixx 44	MUM48A1/05	
MUM4419/02	ProfiMixx 44	MUM48A1/07	
MUM4419/03	ProfiMixx 44	MUM48A11/05	
MUM4426/01	ProfiMixx 44	MUM48CR1/05	
MUM4426/02	ProfiMixx 44	MUM48CR1/07	
MUM4426/03	ProfiMixx 44	MUM48CR2/05	
MUM4426/04		MUM48R1/05	
MUM4426/05		MUM48R1/07	
MUM4426/07		MUM48R1GB/05	
MUM4427/03		MUM48R1GB/07	
MUM4427/04		MUM48RE/05	
MUM4427/05		MUM48SL/05	
MUM4427/06		MUM48W1/05	
MUM4427/07		MUM48W1/07	
MUM4428/06		MUM48W11/07	
MUM4428/07		MUMP1000/05	
MUM4485/05		MUM4607/01	
MUM44K1/03		MUM4607/02	
MUM46A1GB/04		MUM4607/03	
MUM46A1GB/05		MUM4656COE/03	Collection
MUM46A1GB/07		MUM4757COE/05	Collection
MUM46ZA/02		MUM4405JP/02	
MUM46ZA/03		MUM4405UC/01	
MUM4750UC/01	Compact 450 W	MUM4405UC/02	
MUM48010DE/05		MUM4405UC/03	
MUM48010DE/07		MUM4405UC/04	
MUM48020DE/05		MUM4420UC/02	Compact 400 W KitchenCenter
MUM48020DE/07		MUM4420UC/03	Compact 400 W KitchenCenter
MUM4807GB/05		MUM4435JP/02	
MUM48120DE/05		MUM4420UC/01	Compact 400 W KitchenCenter
MUM48120DE/07		MUM4422UC/01	Compact 400 W KitchenCenter
MUM48140DE/05		MUM4422UC/02	Compact 400 W KitchenCenter
MUM48140DE/07		MUM4422UC/03	Compact 400 W KitchenCenter
MUM4825/05		MUM4622UC/01	
MUM4825/07		MUM4622UC/02	
MUM4830/05		MUM4622UC/03	
MUM4830/07		MUM4750UC/02	Compact 450 W KitchenCenter
MUM4832/05		MUM4620UC/01	
MUM4835/05		MUM4620UC/02	
MUM4835/07		MUM4620UC/03	
MUM4855/05		MUM4635UC/01	Compact 450 W KitchenCenter
MUM4855/07		MUM4635UC/02	Compact 450 W KitchenCenter
MUM4856EU/05		MUM4635UC/03	Compact 450 W KitchenCenter
MUM4856EU/07		MUM4750UC/03	Compact 450 W KitchenCenter
MUM4875EU/05		MUM4630/03	

Ersatzteil passend für folgende Bosch und SiemensGeräte:

MUM4640/03		MUM4405CH/01	
MUM4640/04		MUM4405CH/02	
MUM4640/05		MUM4405CH/03	
MUM4650/03		MUM4405EU/01	
MUM4650/04		MUM4405EU/02	
MUM4650/05		MUM4405EU/03	
MUM46CR1/03	Electronic	MUM4406/02	ProfiMixx 44
MUM46CR1/04		MUM4406/03	ProfiMixx 44
MUM46CR1/05		MUM4406/04	
MUM46CR2/03		MUM4406/05	
MUM46CR2/04		MUM4406/07	
MUM46CR2/05		MUM4407/05	
MUM46R1/03	Electronic	MUM4409/05	
MUM46R1/04		MUM4486/01	
MUM46R1/05		MUM4486/02	
MUM4505/05		MUM4486/03	
MUM4505/06		MUM44R1/05	
MUM4555/06	Family Microtronic	MUM4600/01	
MUM4555EU/04	Family Microtronic	MUM4600/02	
MUM4555EU/05	Family Microtronic	MUM4600/03	
MUM4555EU/06	Family Microtronic	MUM4600/04	
MUM4400/05		MUM4600/05	
MUM4400/06		MUM4600EU/01	
MUM4400CH/05		MUM4600EU/02	
MUM4400EU/05		MUM4600EU/03	
MUM4400RK/05		MUM4600GB/01	
MUM47A1/03	Microtronic	MUM4600GB/02	
MUM47A1/04		MUM4600GB/03	
MUM47A1/05		MUM4600UC/01	
MUM4500/05		MUM4600UC/02	
MUM4500/06		MUM4600UC/03	
MUM4500CH/05		MUM4612/01	
MUM4500CH/06		MUM4625/01	ProfiMixx 46
MUM4500EU/05		MUM4625/02	ProfiMixx 46
MUM4500EU/06		MUM4625/03	ProfiMixx 46
MUM4570/05	Profi 45 Microtronic	MUM4625/04	
MUM4570/06	Profi 45 Microtronic	MUM4625/05	
MUM4570EU/05	Profi 45 Microtronic	MUM4655/01	ProfiMixx 46
MUM4570EU/06	Profi 45 Microtronic	MUM4655/02	ProfiMixx 46
MUM4590CH/05	Profi 45 Microtronic	MUM4655/03	ProfiMixx 46
MUM4590CH/06	Profi 45 Microtronic	MUM4655EU/01	ProfiMixx 46
MUM4404/01		MUM4655EU/02	ProfiMixx 46

MUM4404/01	MUM4655EU/02	ProfiMixx 46
MUM4404/02	MUM4655EU/03	ProfiMixx 46
MUM4404/03	MUM4655EU/04	
MUM4405/01	MUM4655EU/05	
MUM4405/02	MUM4655EU/07	
MUM4405/03	MUM4655GB/01	ProfiMixx 46
MUM4405/04	MUM4655GB/02	ProfiMixx 46
MUM4405/05	MUM4655GB/03	ProfiMixx 46

Image 4: Partial list of compatible Bosch Siemens MUM4 food processor models (Part 2).

Ersatzteil passend für folgende Bosch und SiemensGeräte:

MUM4655IL/01	ProfiMixx 46	MUM47Z1/05	ProfiMixx 47 microtronic
MUM4655IL/02	ProfiMixx 46	MUM4701/01	ProfiMixx47 electronic
MUM4655IL/03	ProfiMixx 46	MUM4701/03	ProfiMixx47 electronic
MUM4675EU/01	ProfiMixx 46	MUM4701/04	
MUM4675EU/02	ProfiMixx 46	MUM4701/05	
MUM4675EU/03	ProfiMixx 46	MUM4756EU/02	ProfoMixx 47 microtronic
MUM4675EU/04		MUM4657/03	
MUM4675EU/05		MUM4657/04	
MUM4700/01		MUM4657/05	
MUM4700/02		MUM4657/07	
MUM4700/03			
MUM4700/04			
MUM4700/05			
MUM4700CH/01			
MUM4700CH/02			
MUM4700CH/03			
MUM4700CH/04			
MUM4700CH/05			
MUM4700EU/01			
MUM4700EU/02			
MUM4700EU/03			
MUM4700EU/04			
MUM4700EU/05			
MUM4750/01	ProfiMixx 47 microtronic		
MUM4750/02	ProfiMixx 47 microtronic		
MUM4750/03	ProfiMixx 47 microtronic		
MUM4750EU/01	ProfiMixx 47 microtronic		
MUM4750EU/02	ProfiMixx 47 microtronic		
MUM4750EU/03	ProfiMixx 47 microtronic		
MUM4750EU/04	ProfiMixx 47 microtronic		
MUM4750EU/05	ProfiMixx 47 microtronic		
MUM4756EU/03	ProfiMixx 47 microtronic		
MUM4756EU/04	ProfiMixx 47 microtronic		
MUM4756EU/05	ProfiMixx 47 microtronic		
MUM4756EU/06			
MUM4756EU/07			
MUM4770/01	ProfiMixx 47 microtronic		

MUM4770/02	ProfiMixx 47 microtronic
MUM4770/03	ProfiMixx 47 microtronic
MUM4770/04	ProfiMixx 47 microtronic
MUM4770/05	ProfiMixx 47 microtronic
MUM4770EU/01	ProfiMixx 47 microtronic
MUM4770EU/02	ProfiMixx 47 microtronic
MUM4770EU/03	ProfiMixx 47 microtronic
MUM4770EU/04	ProfiMixx 47 microtronic
MUM4770EU/05	ProfiMixx 47 microtronic
MUM4780/05	
MUM4780/06	
MUM4780/07	

Image 5: Partial list of compatible Bosch Siemens MUM4 food processor models (Part 3).

If your specific model is not explicitly listed, compare the appearance and dimensions of your existing part with the images provided, or contact support for assistance.

3. INSTALLATION GUIDE

Replacing the drive unit in your Bosch Siemens MUM4 food processor is generally a straightforward process. However, always prioritize safety and ensure the appliance is disconnected from the power supply before beginning any repair work.

1. **Safety First:** Unplug your food processor from the electrical outlet before attempting any installation or repair.
2. **Access the Drive Unit:** Depending on your specific MUM4 model, you may need to disassemble certain parts of the food processor to access the existing drive unit. Refer to your appliance's original service manual if available.
3. **Remove Old Unit:** Carefully detach the old, broken drive unit. Note its orientation and how it connects to other components.
4. **Install New Unit:** Position the new DL-pro drive unit (Model 177509) in the same manner as the old one. Ensure it fits securely and all connections are properly aligned. The conical wheel and metal ring should integrate smoothly.
5. **Reassemble:** Reassemble any parts of the food processor that were removed during the process. Ensure all screws and fasteners are tightened appropriately.
6. **Test Functionality:** Once fully reassembled, plug the food processor back into the power supply and perform a test run to ensure the new drive unit functions correctly.

If you encounter any difficulties during installation, it is recommended to seek assistance from a qualified technician or contact DL-pro support.

4. MAINTENANCE

To ensure the longevity and optimal performance of your DL-pro drive unit, follow these general maintenance guidelines:

- **Regular Inspection:** Periodically inspect the drive unit for any signs of wear, damage, or debris accumulation.
- **Cleaning:** If accessible, gently clean the exterior of the drive unit with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the plastic or metal components.
- **Avoid Overloading:** Ensure your food processor is not consistently overloaded, as this can put undue stress

on the drive unit and other internal components.

- **Proper Storage:** If the food processor is stored for extended periods, ensure it is in a clean, dry environment.

5. TROUBLESHOOTING

If you experience issues after installing the DL-pro drive unit, consider the following troubleshooting steps:

- **Unit Does Not Fit:** Double-check the compatibility lists (Images 3, 4, 5) and your appliance's model number. Ensure you have the correct replacement part.
- **Appliance Not Functioning:**
 - Verify that the food processor is properly plugged into a working electrical outlet.
 - Ensure all components of the food processor are correctly assembled and locked into place, as safety mechanisms may prevent operation otherwise.
 - Re-check the installation of the drive unit to ensure it is seated correctly and all connections are secure.
- **Unusual Noises:** If you hear grinding or unusual noises, immediately turn off and unplug the appliance. Re-inspect the drive unit installation for any misalignments or obstructions.

If troubleshooting steps do not resolve the issue, do not attempt further repairs. Contact customer support for professional assistance.

6. SUPPORT

For any questions, concerns, or if the product is not functioning as expected, please do not hesitate to contact DL-pro customer support. We are committed to assisting you and ensuring your satisfaction.

While specific contact details are not provided in this manual, you can typically find support information on the product packaging, the retailer's website where you purchased the item, or by searching for "DL-pro support" online.

We believe that repairing household appliances is the most sustainable solution for addressing defects. By providing high-quality spare parts, we enable our customers to repair their devices and give them a new life.

© 2024 DL-pro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09G6P74HJ>

More documents and user manuals: <https://manuals.plus/>