

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch Serie 4 KFN96VPEA Side-by-Side Refrigerator User Manual

Bosch KFN96VPEA

Bosch Serie 4 KFN96VPEA Side-by-Side Refrigerator User Manual

Model: KFN96VPEA

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Bosch Serie 4 KFN96VPEA side-by-side refrigerator. Please read these instructions carefully before using the appliance and keep them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for household use only. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. Ensure proper ventilation around the appliance.

- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments.
- Unplug the appliance before cleaning or maintenance.
- Keep ventilation openings clear of obstruction.

SETUP


1. Unpacking

Carefully remove all packaging materials. Dispose of packaging responsibly. Check the appliance for any damage during transit. If damaged, contact your retailer immediately.

2. Placement

Place the refrigerator on a firm, level surface away from direct sunlight and heat sources. Ensure adequate air circulation around the appliance. Maintain the recommended clearances as shown in the dimension diagrams.

Maße in mm

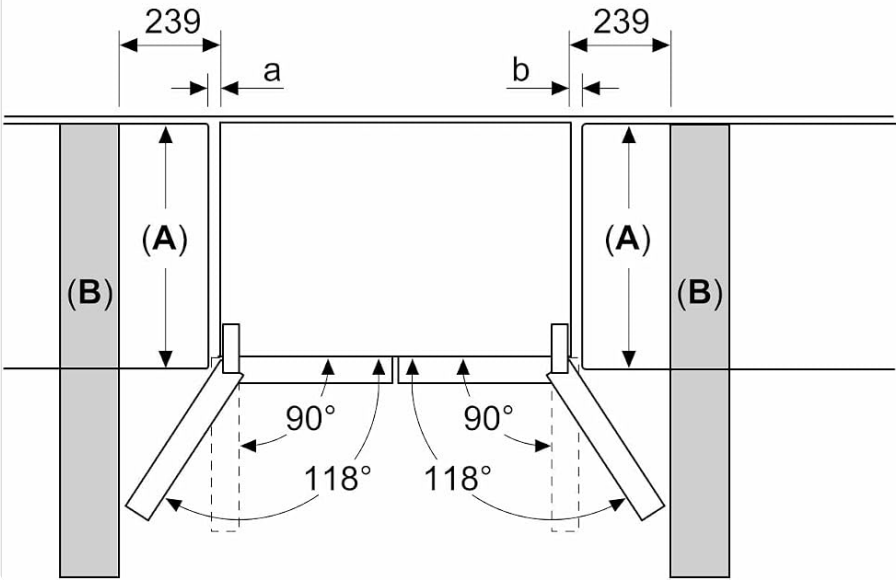


A	a	b
≤ 600	0	0
$600 < A \leq 650$	45	45
$650 < A \leq 700$	60	60
> 700	239	239

A: Möbel- oder
Arbeitsplattentiefe

B: Wand
Schubladen ausziehbar und
herausnehmbar bei 90°
geöffneter Tür

Figure 1: Installation diagram with recommended clearances. Ensure sufficient space for door opening and ventilation.

Maße in mm

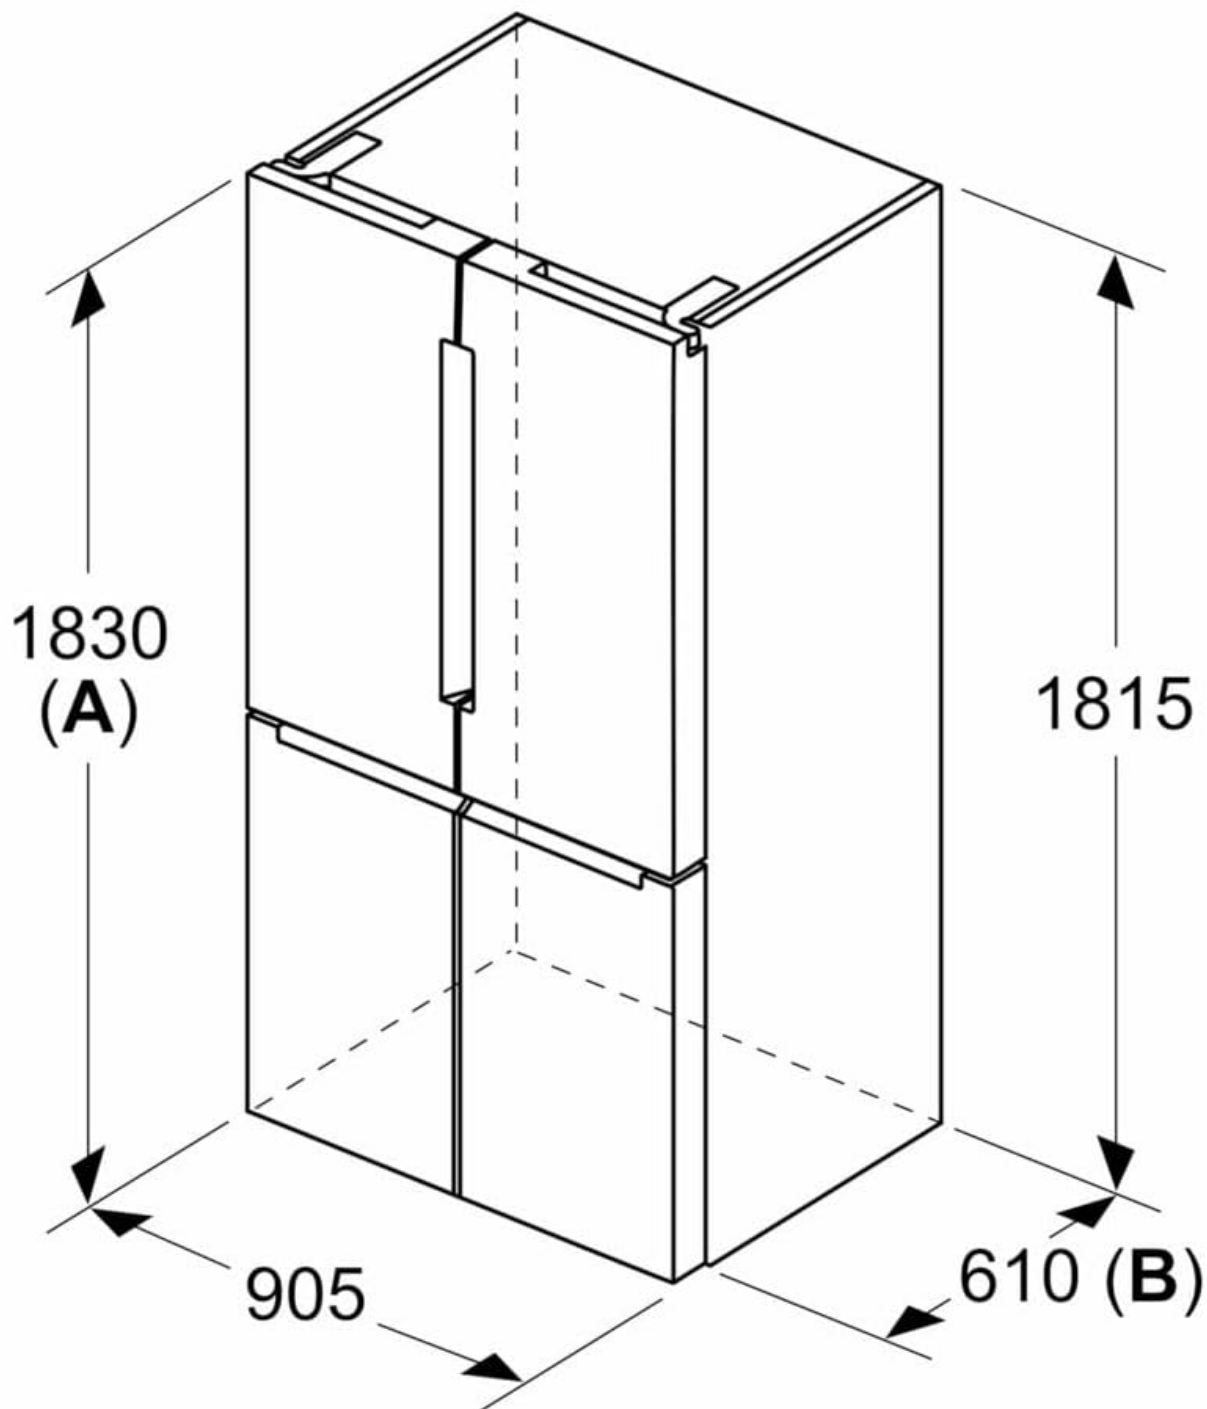

A: Front ist von 1830–1847 mm, bei voll ausgezogenen vorderen Nivellierfüßen, verstellbar

B: 25 mm für feste Abstandshalter auf der Rückseite hinzufügen

Figure 2: Front and side view with key dimensions. Front is adjustable from 1830-1847 mm with fully extended front leveling feet. Add 25

mm for fixed spacers at the rear.

3. Electrical Connection

Connect the appliance to a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate. Do not use extension cords or multiple socket adapters.

4. Initial Operation

After placement and connection, wait at least 4 hours before switching on the appliance to allow the refrigerant to settle. Clean the interior before first use. Set the desired temperatures using the control panel.

OPERATING INSTRUCTIONS

1. Control Panel

The control panel allows you to adjust temperature settings and activate special functions. It is located on the exterior of the refrigerator door.



Figure 3: Digital control panel for setting refrigerator and freezer temperatures, and activating modes like Super Cool, Super Freeze, and Eco.

2. Temperature Settings

Use the control panel to set the desired temperature for the refrigerator and freezer compartments. Recommended settings are typically 4°C for the refrigerator and -18°C for the freezer.

3. Special Features

- **VitaFresh Pro:** Specialized drawers designed to keep fruits, vegetables, meat, and fish fresh for longer by maintaining optimal humidity and temperature levels.



Figure 4: VitaFresh drawers for optimal storage of fresh produce, meat, and fish.

- **NoFrost:** Prevents ice build-up in the freezer compartment, eliminating the need for manual defrosting.



Figure 5: NoFrost freezer drawers, designed to prevent ice accumulation.

- **MultiAirflow System:** Ensures even and consistent cooling throughout the refrigerator compartment, maintaining food freshness.
- **LED Lighting:** Provides bright and energy-efficient illumination of the interior.



LED-Beleuchtung

Die LED-Beleuchtung stellt Ihre Lebensmittel immer ins Rampenlicht.

Figure 6: Interior with bright LED lighting and a convenient bottle rack.

- **Door Alarm:** An audible alarm sounds if the refrigerator door is left open for too long, helping to conserve energy and maintain internal temperature.

MAINTENANCE

1. Cleaning

Regularly clean the interior and exterior of your refrigerator. Use a soft cloth and a mild detergent. Avoid abrasive cleaners or solvents. Clean the door seals with warm soapy water to ensure a tight seal.

2. Defrosting

The NoFrost feature in the freezer compartment automatically prevents ice build-up, eliminating the need for manual defrosting. The refrigerator compartment also features an automatic defrost system.

3. Replacing Parts

For replacement of internal components such as shelves or drawers, refer to the specific part numbers and contact

authorized service personnel or your retailer.

TROUBLESHOOTING

If you experience issues with your refrigerator, consult the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Appliance not cooling	Power supply issue, thermostat setting, door left open	Check power connection, adjust thermostat, ensure door is closed properly
Excessive noise	Appliance not level, objects touching the back wall, compressor operation	Level the appliance, reposition items, normal compressor noise is expected
Water on floor	Blocked drain hole, loose water connection	Clear drain hole, check water connections
Door alarm sounds frequently	Door not fully closed, door seal damaged	Ensure door is closed, inspect and clean door seal

SPECIFICATIONS

Key technical specifications for the Bosch Serie 4 KFN96VPEA refrigerator:

- **Brand:** Bosch
- **Model:** KFN96VPEA
- **Configuration:** Side-by-Side (French Door)
- **Total Capacity:** 605 Liters
- **Refrigerator Net Capacity:** 605 Liters
- **Freezer Net Capacity:** 321 Liters
- **Dimensions (DxWxH):** 99.8P x 99.8I x 190.5H cm
- **Material:** Stainless Steel
- **Defrost System:** Automatic (NoFrost)
- **Annual Energy Consumption:** 229 kWh/year
- **Voltage:** 240 Volt
- **Special Features:** Door Alarm, VitaFresh Pro, MultiAirflow, LED Lighting



ENERG





Bosch

KFN96VPEA

A

B

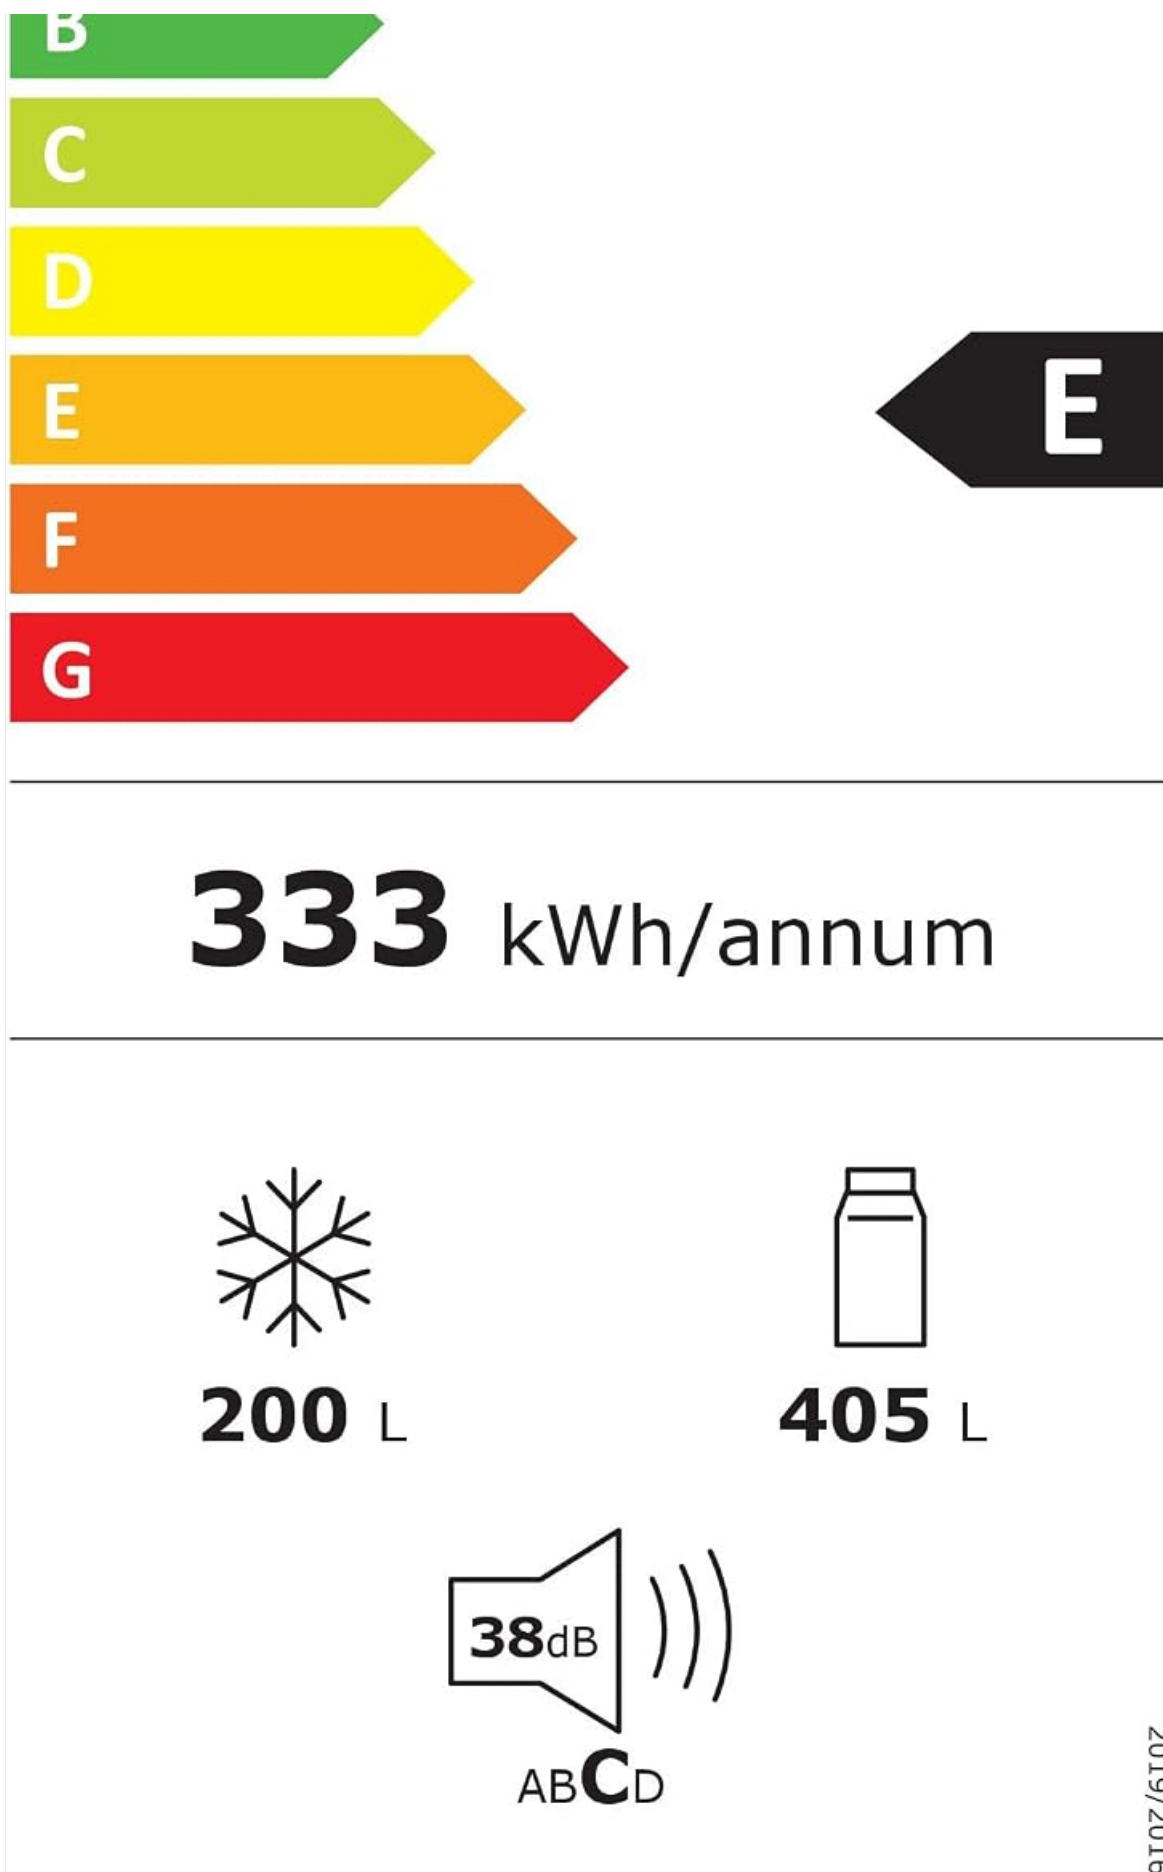


Figure 7: European Energy Label. For more details, visit the official EPREL database: <https://eprel.ec.europa.eu/qr/380060>

Your Bosch Serie 4 KFN96VPEA refrigerator comes with a**Two year warranty**. For warranty claims, technical support, or service requests, please contact your retailer or an authorized Bosch service center. Keep your proof of purchase for warranty validation.

For further assistance, please refer to the official Bosch website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question