

- Manuals.plus /
- > Candy /
 - > Candy Fresco CCE3T618FS Combi Refrigerator User Manual

Candy CCE3T618FS

Candy Fresco CCE3T618FS Combi Refrigerator User Manual

Model: CCE3T618FS

Introduction	Safety Instructions	Setup	Operation	Maintenance	Troubleshooting
	Specifications		Warranty & Support		

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Candy Fresco CCE3T618FS Combi Refrigerator. Please read it thoroughly before installation and use, and keep it for future reference.

The Candy Fresco CCE3T618FS is a modern combi refrigerator designed with Italian aesthetics, offering a total capacity of 344 liters. It features advanced Total No Frost technology to prevent ice build-up, flexible interior storage options with up to 100 shelf and door balcony combinations, and reversible doors for adaptable kitchen integration. Its interior LED lighting ensures excellent visibility and energy efficiency.

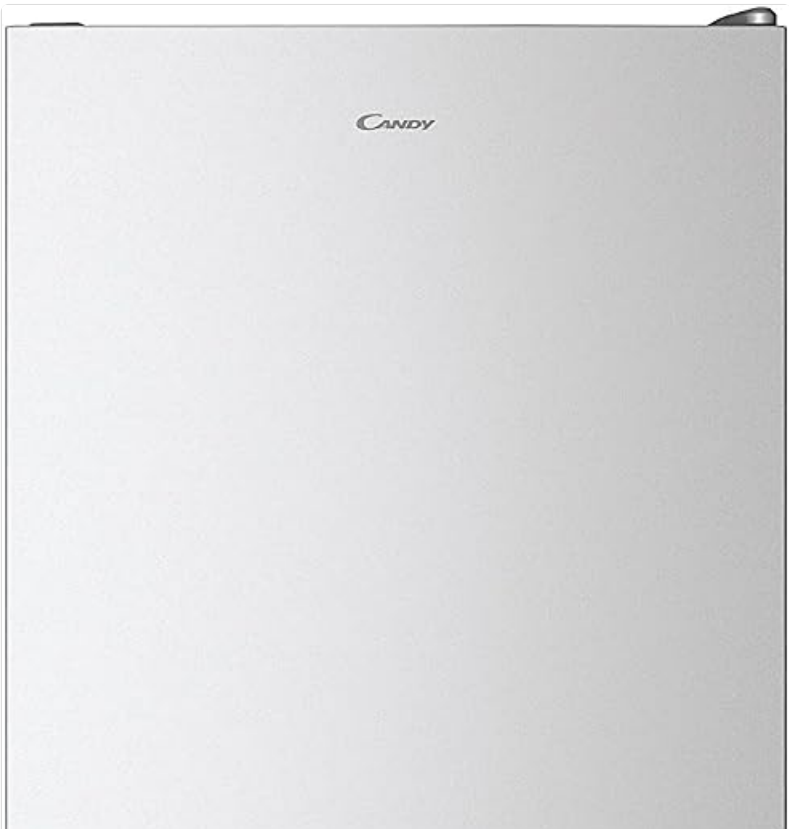




Figure 1: Front view of the Candy Fresco CCE3T618FS Combi Refrigerator.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

2.1 General Safety

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended

by the manufacturer.

- Do not use electrical appliances inside the food storage compartments, unless they are of the type recommended by the manufacturer.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- This appliance is intended for household use only.
- Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

2.2 Electrical Safety

- Before cleaning or maintenance, always unplug the appliance from the power supply.
- Do not pull the power cord to disconnect the appliance. Always grasp the plug firmly and pull straight out from the outlet.
- Do not use extension cords or ungrounded (two-prong) adapters.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

3. SETUP

3.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Keep packaging materials out of reach of children. Inspect the appliance for any damage during transit. Report any damage immediately to your retailer.

3.2 Positioning

- Place the refrigerator on a firm, level floor.
- Ensure adequate ventilation around the appliance. Maintain a minimum distance of 10 cm from the back wall and 5 cm from the sides.
- Avoid placing the appliance in direct sunlight or near heat sources such as stoves, radiators, or ovens, as this will increase energy consumption.
- The appliance is designed to operate in ambient temperatures between 16°C and 38°C.

3.3 Leveling

Adjust the adjustable feet at the front of the refrigerator to ensure it is level. A level appliance will operate more efficiently and quietly, and the doors will close properly.

3.4 Door Reversal

The doors of the Candy Fresco CCE3T618FS are reversible, allowing them to open from either the left or the right side to suit your kitchen layout. This procedure should be performed by a qualified technician or service agent. Refer to the detailed instructions provided in the full technical manual for this process.

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2016 with regard to energy labelling of refrigerating appliances

Supplier's name or trade mark: CANDY

Supplier's address: Candy Hoover Group contact, Comolli 16, 20861 Brugherio MB, IT

Model identifier: CCE3T618FS

Type of refrigerating appliance:

Low-noise appliance:

No

Design type:

freestanding

Wine storage appliance:

No

Other refrigerating appliance:

Yes

General product parameters:

Parameter

Value

Parameter

Value

Overall dimensions (millimetre)

Height

1 850

Width

595

Depth

658

Total volume (dm³ or l)

342

EER

124

Energy efficiency class

F

Airborne acoustical noise emissions (dB(A) re 1 pW)

39

Airborne acoustical noise emission class

C

Annual energy consumption (kWh/a)

319

Climate class:

temperate, subtropical

Minimum ambient temperature (°C), for which the refrigerating appliance is suitable

16

Maximum ambient temperature (°C), for which the refrigerating appliance is suitable

38

Winter setting

No

Compartment Parameters:

Compartment type

Compartment Volume (dm³ or l)

Recommended temperature setting for optimised food storage (°C)
These settings shall not contradict the storage conditions set out in Annex IV, Table 3

Freezing capacity (kg/24h)

Defrosting type (auto-defrost=A, manual defrost=M)

Pantry

No

-

-

-

-

Wine storage

No

-

-

-

-

Cellar

No

-

-

-

-

Fresh food

Yes

223,0

4

-

A

Chill

No

-

-

-

-

0-star or ice-making

No

-

-

-

-

1-star

No

-

-

-

-

2-star

No

-

-

-

-

3-star

No

-

-

-

-

4-star

Yes

119,0

-18

5,4

A

2-star section

No

-

-

-

-

Variable temperature compartment

-

-

-

-

-

For 4-star compartments

Fast freeze facility

No

Light source parameters:

Type of light source

LED

Energy efficiency class

F

Minimum duration of the guarantee offered by the manufacturer: 24 months

Additional information:

Weblink to the manufacturer's website, where the information in point4(a) Annex of Commission Regulation (EU) 2019/2019 is found: <https://corporate.haier-europe.com/en/>

Page 1 / 2

Page 2 / 2

Wine storage	No	-	-	-	-
Cellar	No	-	-	-	-
Fresh food	Yes	223,0	4	-	A
Chill	No	-	-	-	-
0-star or ice-making	No	-	-	-	-
1-star	No	-	-	-	-
2-star	No	-	-	-	-
3-star	No	-	-	-	-
4-star	Yes	119,0	-18	5,4	A
2-star section	No	-	-	-	-
Variable temperature compartment	-	-	-	-	-
For 4-star compartments					
Fast freeze facility			No		
Light source parameters:					
Type of light source			LED		
Energy efficiency class			F		
Minimum duration of the guarantee offered by the manufacturer: 24 months					
Additional information:					
Weblink to the manufacturer's website, where the information in point4(a) Annex of Commission Regulation (EU) 2019/2019 is found: https://corporate.haier-europe.com/en/					

Figure 2: Reversible door configuration.

3.5 Initial Power-On

After positioning and leveling, wait at least 2-4 hours before plugging the appliance into the power outlet. This allows the refrigerant fluid to settle. Once plugged in, allow the refrigerator to run for several hours (e.g., 4-6 hours) before placing food inside, to ensure it reaches the optimal operating temperature.

4. OPERATION

4.1 Temperature Control

The refrigerator features internal controls for temperature adjustment. The recommended temperature for the refrigerator compartment is typically between 2°C and 4°C, and for the freezer compartment, it is -18°C or lower. Adjust the thermostat dial or digital control (if applicable) to set the desired temperature. Higher settings generally mean colder temperatures.

4.2 Flexible Storage System

Your Candy Fresco refrigerator offers a highly flexible interior with Safety Glass shelves and door balconies that can be adjusted to create over 100 different storage combinations. This allows you to customize the space to accommodate items of various sizes and shapes.





Figure 3: Interior view showcasing flexible storage options.

Produktdatenblatt				Tabelle 3 stehen			
DELEGIERTE VERORDNUNG (EU) 2019/2016 DER KOMMISSION zur Energieverbrauchskennzeichnung von Kühlgeräten							
Name oder Handelsmarke des Lieferanten: CANDY							
Anschrift des Lieferanten: Candy Hoover Group contact, Comolli 16, 20861 Brugherio MB, IT							
Modellkennung: CCE3T618FS							
Art des Kühlgeräts:							
Geräuscharmes Gerät:		Nein	Bauart:		freistehend		
Weinlagerschrank:		Nein	Anderes Kühlgerät:		Ja		
Allgemeine Produktparameter:							
Parameter		Wert	Parameter		Wert		
Gesamtabmessungen (in Millimeter)	Höhe	1 850	Gesamtrauminhalt (in dm³ oder l)	342			
	Breite	595					
	Tiefe	658					
EEI		124	Energieeffizienzklasse		F		
Luftschallemissionen (in dB(A) re 1 pW)		39	Luftschallemissionsklasse		C		
Jährlicher Energieverbrauch (in kWh/a)		319	Klimaklasse:		gemäßigte Zone, subtropische Zone		
Mindestumgebungstemperatur (in °C), für die das Kühlgerät geeignet ist		16	Höchstumgebungstemperatur (in °C), für die das Kühlgerät geeignet ist		38		
Winterschaltung		Nein					
Fachparameter:							
Fachtyp	Fachparameter und #werte						
	Rauminhalt des Fachs (in dm³ oder l)	Empfohlene Temperatureinstellung für eine optimierte Lebensmittellagerung (in °C) Diese Einstellungen dürfen nicht im Widerspruch zu den Lagerbedingungen nach Anhang IV	Gefrierermögen (in kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)			

Speisekammerfach	Nein	-	-	-
Weinlagerfach	Nein	-	-	-
Kellerfach	Nein	-	-	-
Lagerfach für frische Lebensmittel	Ja	223,0	4	A
Kaltlagerfach	Nein	-	-	-
Null-Sterne- oder Eisbereiterfach	Nein	-	-	-
Ein-Stern-Fach	Nein	-	-	-
Zwei-Sterne-Fach	Nein	-	-	-
Drei-Sterne-Fach	Nein	-	-	-
Vier-Sterne-Fach	Ja	119,0	-18	5,4 A
Zwei-Sterne-Abteil	Nein	-	-	-
Fach mit variabler Temperatur	-	-	-	-
Für Vier-Sterne-Fächer				
Schnelleinfrierfunktion			Nein	
Lichtquellenparameter:				
Art der Lichtquelle			LED	
Energieeffizienzklasse			F	
Mindestlaufzeit der vom Hersteller angebotenen Garantie: 24 Monate				
Weitere Angaben:				
Weblink zur Website des Herstellers, auf der die Informationen gemäß Nummer 4 Buchstabe a des Anhangs der Verordnung (EU) 2019/2019 der Kommission zu finden sind: https://corporate.haier-europe.com/en/				

Seite 1 / 2

Seite 2 / 2

Figure 4: Illustration of the refrigerator's generous 344L capacity.

4.3 Total No Frost Technology

The Total No Frost system prevents the formation of ice and frost in both the refrigerator and freezer compartments, eliminating the need for manual defrosting. This technology also ensures efficient air circulation, maintaining optimal freshness and inhibiting bacterial growth by up to 94%.

<

Figure 5: Total No Frost feature ensures a frost-free interior.

4.4 Super Freezing and Super Cooling Functions

These functions are designed to rapidly lower the temperature in the freezer (Super Freezing) or refrigerator (Super Cooling) compartments. Use Super Freezing when adding a large quantity of fresh food to the freezer to quickly freeze it and preserve its quality. Use Super Cooling to rapidly chill newly added items in the refrigerator. These functions typically deactivate automatically after a set period or when the target temperature is reached.

5. CARE AND MAINTENANCE

5.1 Cleaning

- Always unplug the appliance before cleaning.
- Clean the interior and exterior surfaces regularly with a soft cloth and a mild detergent solution. Avoid abrasive cleaners or solvents.
- The Safety Glass shelves and door balconies can be removed for easier cleaning. Wash them with warm soapy water and dry thoroughly before replacing.
- Clean the condenser coils at the back of the appliance periodically (at least once a year) using a soft brush or vacuum cleaner to remove dust and dirt. This improves energy efficiency.
- Wipe the door seals regularly to ensure they remain clean and flexible, maintaining a good seal.

5.2 Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain the internal temperature for as long as possible. Food can remain safely stored for several hours depending on the ambient temperature and how full the appliance is.

5.3 Vacation

For short vacations (a few days), leave the refrigerator running normally. For long vacations, empty the refrigerator, unplug it, clean it thoroughly, and leave the doors slightly ajar to prevent odors and mold growth.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and their solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; power cord not plugged in; circuit breaker tripped.	Check power connection; check circuit breaker; try another outlet.
Refrigerator is not cold enough.	Temperature setting too high; door opened too frequently; large amount of warm food added; poor ventilation.	Adjust temperature setting lower; ensure door is closed properly; allow warm food to cool before storing; ensure adequate clearance around appliance.
Excessive noise.	Appliance not level; objects vibrating against the appliance; fan obstruction.	Level the appliance using adjustable feet; ensure nothing is touching the back or sides; check for obstructions around the fan.
Water on the floor.	Drain hole blocked; drip tray overflowing.	Clear the drain hole (usually at the back of the refrigerator compartment); check and empty the drip tray if accessible.
Door does not close properly.	Appliance not level; food packages obstructing; door gasket dirty or damaged.	Level the appliance; rearrange food; clean or replace door gasket.

7. TECHNICAL SPECIFICATIONS

Below are the key technical specifications for the Candy Fresco CCE3T618FS Combi Refrigerator:

Feature	Specification
Model Number	CCE3T618FS
Brand	Candy
Type	Combi Refrigerator (Bottom Freezer)
Installation Type	Freestanding
Total Net Capacity	344 Liters
Refrigerator Net Capacity	224 Liters
Freezer Net Capacity	120 Liters
Dimensions (H x W x D)	185 x 59.5 x 65.8 cm
Noise Level	39 dB
Annual Energy Consumption	319 kWh/annum
Energy Efficiency Class	F

Feature	Specification
Defrost System	Total No Frost (Automatic)
Reversible Doors	Yes
Shelves Material	Safety Glass
Interior Lighting	LED
Climate Class	Temperate, Subtropical
Color	Silver

7.1 Energy Label and Product Information Sheet

For detailed energy consumption data and product information, please refer to the official energy label and product information sheet:

- [View Energy Label and Product Information Sheet \(EPREL Database\)](#)

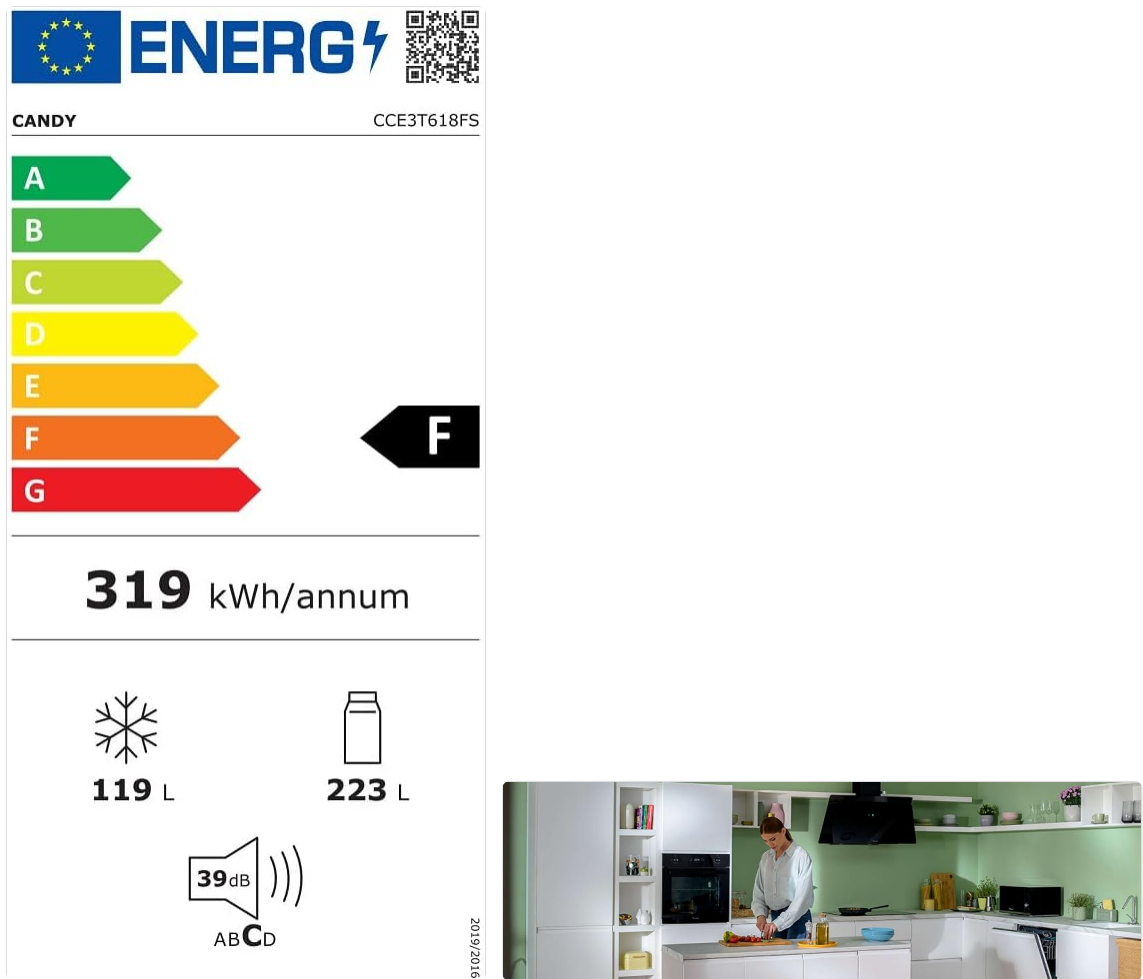


Figure 6: Energy Label and Product Information Sheet.

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Warranty Information

This appliance comes with a manufacturer's guarantee. The minimum duration of the guarantee offered by the manufacturer is 24 months from the date of purchase. Please retain your proof of purchase for warranty claims.

8.2 What's in the Box

Upon unpacking, you should find the following components:

- Combi Refrigerator Unit
- 4 Safety Glass Shelves
- 5 Door Balconies
- 1 Vegetable Drawer
- 3 Freezer Drawers
- Electrical Connection Cable
- Adjustable Feet and Wheels
- User Manual

8.3 Customer Support

For technical assistance, spare parts, or warranty claims, please contact your retailer or the official Candy customer service in your region. You can find more information on the manufacturer's website: corporate.haier-europe.com/en/.

© 2024 Candy. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09G73K8ZV>

More documents and user manuals: <https://manuals.plus/>