

[Manuals.plus](#) /

› [Apple](#) /

› Apple Leather Wallet with MagSafe for iPhone (Wisteria) - User Manual

Apple MM0W3ZM/A

Apple Leather Wallet with MagSafe for iPhone (Wisteria) - User Manual

PRODUCT OVERVIEW

The Apple Leather Wallet with MagSafe is designed to securely hold identification and credit cards. It attaches magnetically to the back of compatible iPhone models and MagSafe-enabled cases. This wallet integrates with the Find My network, providing notifications of its last known location if it becomes separated from your iPhone.

Crafted from specially tanned European leather, the wallet features strong built-in magnets for effortless attachment. It is shielded to protect up to three credit cards and includes a back slot for easy card removal.

Compatibility: This wallet is compatible with iPhone 14 Pro Max, iPhone 14 Pro, iPhone 14 Plus, iPhone 14, iPhone 13 Pro Max, iPhone 13 Pro, iPhone 13, iPhone 13 mini, iPhone 12 Pro Max, iPhone 12 Pro, iPhone 12, and iPhone 12 mini.

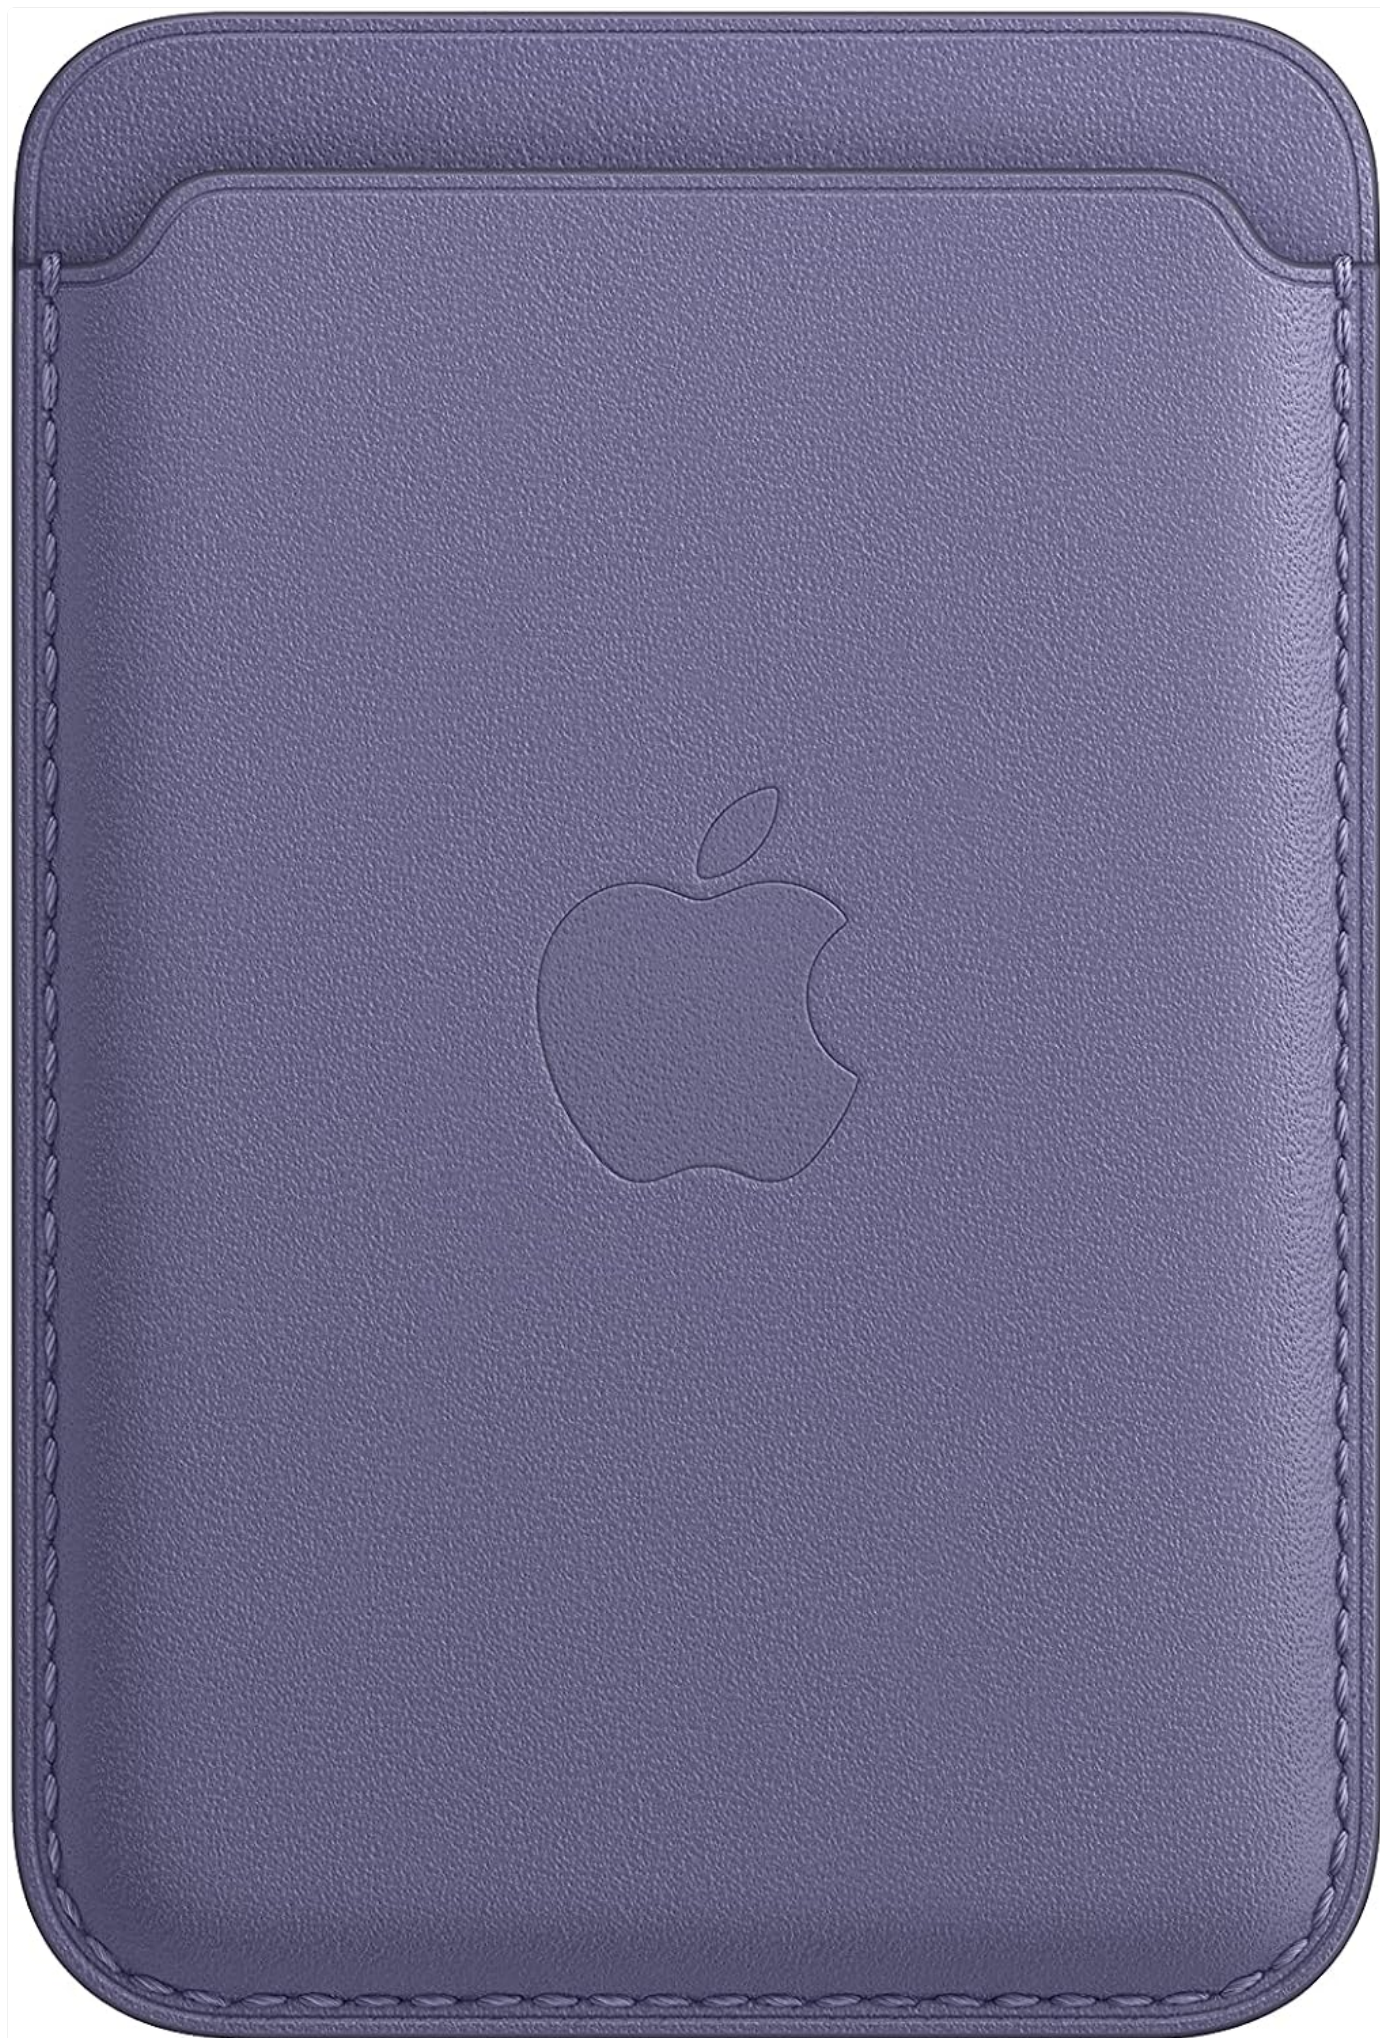


Image: The Apple Leather Wallet with MagSafe in Wisteria, showcasing its textured leather finish and rounded corners.

SETUP INSTRUCTIONS

Attaching the Wallet to iPhone

1. Ensure your iPhone is a compatible model (iPhone 12 series or newer) or has a MagSafe-compatible case installed.
2. Align the Apple Leather Wallet with MagSafe to the back of your iPhone or MagSafe case.
3. The built-in magnets will automatically snap the wallet into place, securing it to your device.



Image: The Wisteria Apple Leather Wallet with MagSafe securely attached to the back of a white iPhone, demonstrating the magnetic connection.

Inserting Cards

1. The wallet is designed to hold up to three standard-sized credit or ID cards.
2. Gently slide your cards into the main slot of the wallet.

3. For optimal RFID protection and ease of use, it is recommended to place cards with chips in the middle slot.

OPERATING INSTRUCTIONS

Removing Cards

To remove cards, use the thumb slot located on the back of the wallet. Push the cards upwards through this slot to access and retrieve them.





Image: A close-up view of the Apple Leather Wallet, highlighting the card slot opening and the convenient thumb cutout at the bottom for easy card access.

Using Find My Support

The wallet integrates with Apple's Find My network. If the wallet becomes detached from your iPhone, you will receive a notification on your device indicating its last known location. This feature helps in locating the wallet if it is misplaced.

- The Find My feature provides the location where the wallet was last connected to your iPhone. It does not offer real-time tracking when separated.
- Ensure Find My is enabled on your iPhone for this feature to function.

MAINTENANCE

Cleaning the Leather Wallet

- To clean the leather, gently wipe it with a soft, lint-free cloth.
- If necessary, slightly dampen the cloth with water. Avoid excessive moisture.
- Do not use harsh chemicals, alcohol-based cleaners, or abrasive materials, as these can damage the leather finish.

General Care

- Avoid prolonged exposure to direct sunlight, extreme heat, or humidity, which can affect the leather's appearance and durability.
- Minimize contact with rough surfaces to prevent scratches or abrasions.
- The magnetic attachment is strong, but repeated forceful detachment or placement in tight pockets may cause the wallet to separate from the iPhone.

TROUBLESHOOTING

Wallet Detaches Easily

- Ensure the iPhone or MagSafe case is clean and free of debris where the wallet attaches.
- Avoid placing the phone with the wallet attached into overly tight pockets or bags where it might snag or be forced off.

- If using a non-Apple MagSafe case, verify its magnetic strength and compatibility.

Cards Not Scanning or Malfunctioning

- The wallet is shielded to protect cards. If a card with a chip is not scanning, try placing it in the middle slot of the wallet.
- Remove the card from the wallet entirely for scanning if issues persist.

Find My Location Inaccurate

- The Find My feature reports the wallet's last known location when it was connected to your iPhone. It does not provide live tracking once separated.
- Ensure your iPhone's location services and Find My network settings are enabled.

SPECIFICATIONS

Product Dimensions	4.54 x 3.24 x 0.59 inches
Item Weight	2.57 ounces
Manufacturer	Apple
ASIN	B09G8TV8TB
Item Model Number	MM0W3ZM/A
Material	Leather
Color	Wisteria
Special Features	Magnetic, Slim Fit, Lightweight, RFID Protection, Card Slots

MagSafe accessories



Image: An illustration of various MagSafe accessories, including a MagSafe charger, a MagSafe Battery Pack, and the MagSafe Leather Wallet, demonstrating the ecosystem.

WARRANTY INFORMATION

Apple accessories, including the Leather Wallet with MagSafe, are typically covered by Apple's one-year limited warranty against defects in materials and workmanship. This warranty does not cover damage caused by accidents, misuse, or normal wear and tear.

For detailed warranty terms and conditions, please refer to the official Apple warranty documentation provided with your product or visit the [Apple Support website](#).

SUPPORT

For further assistance, technical support, or to inquire about service options, please visit the official Apple Support website:

<https://support.apple.com/>

You can also find additional information and resources on the Apple website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question