

Apple MM0Q3ZM/A

Apple Leather Wallet with MagSafe for iPhone (Model MM0Q3ZM/A) User Manual

Brand: Apple | Model: MM0Q3ZM/A

1. INTRODUCTION

1.1 Product Overview

The Apple Leather Wallet with MagSafe is designed to securely hold your ID and credit cards, attaching effortlessly to the back of your iPhone or a MagSafe-compatible case. Crafted from specially tanned European leather, this wallet integrates with the Find My network, providing notifications of its last known location if it becomes separated from your iPhone. It is shielded to protect up to three credit cards and features a convenient back slot for easy card removal.

1.2 What's in the Box

- One Apple Leather Wallet with MagSafe - Golden Brown

2. SETUP

2.1 Attaching the Wallet to Your iPhone

The wallet features strong built-in magnets. Align the wallet with the back of your compatible iPhone or a MagSafe-compatible case. The magnets will automatically snap the wallet into place, ensuring a secure attachment.



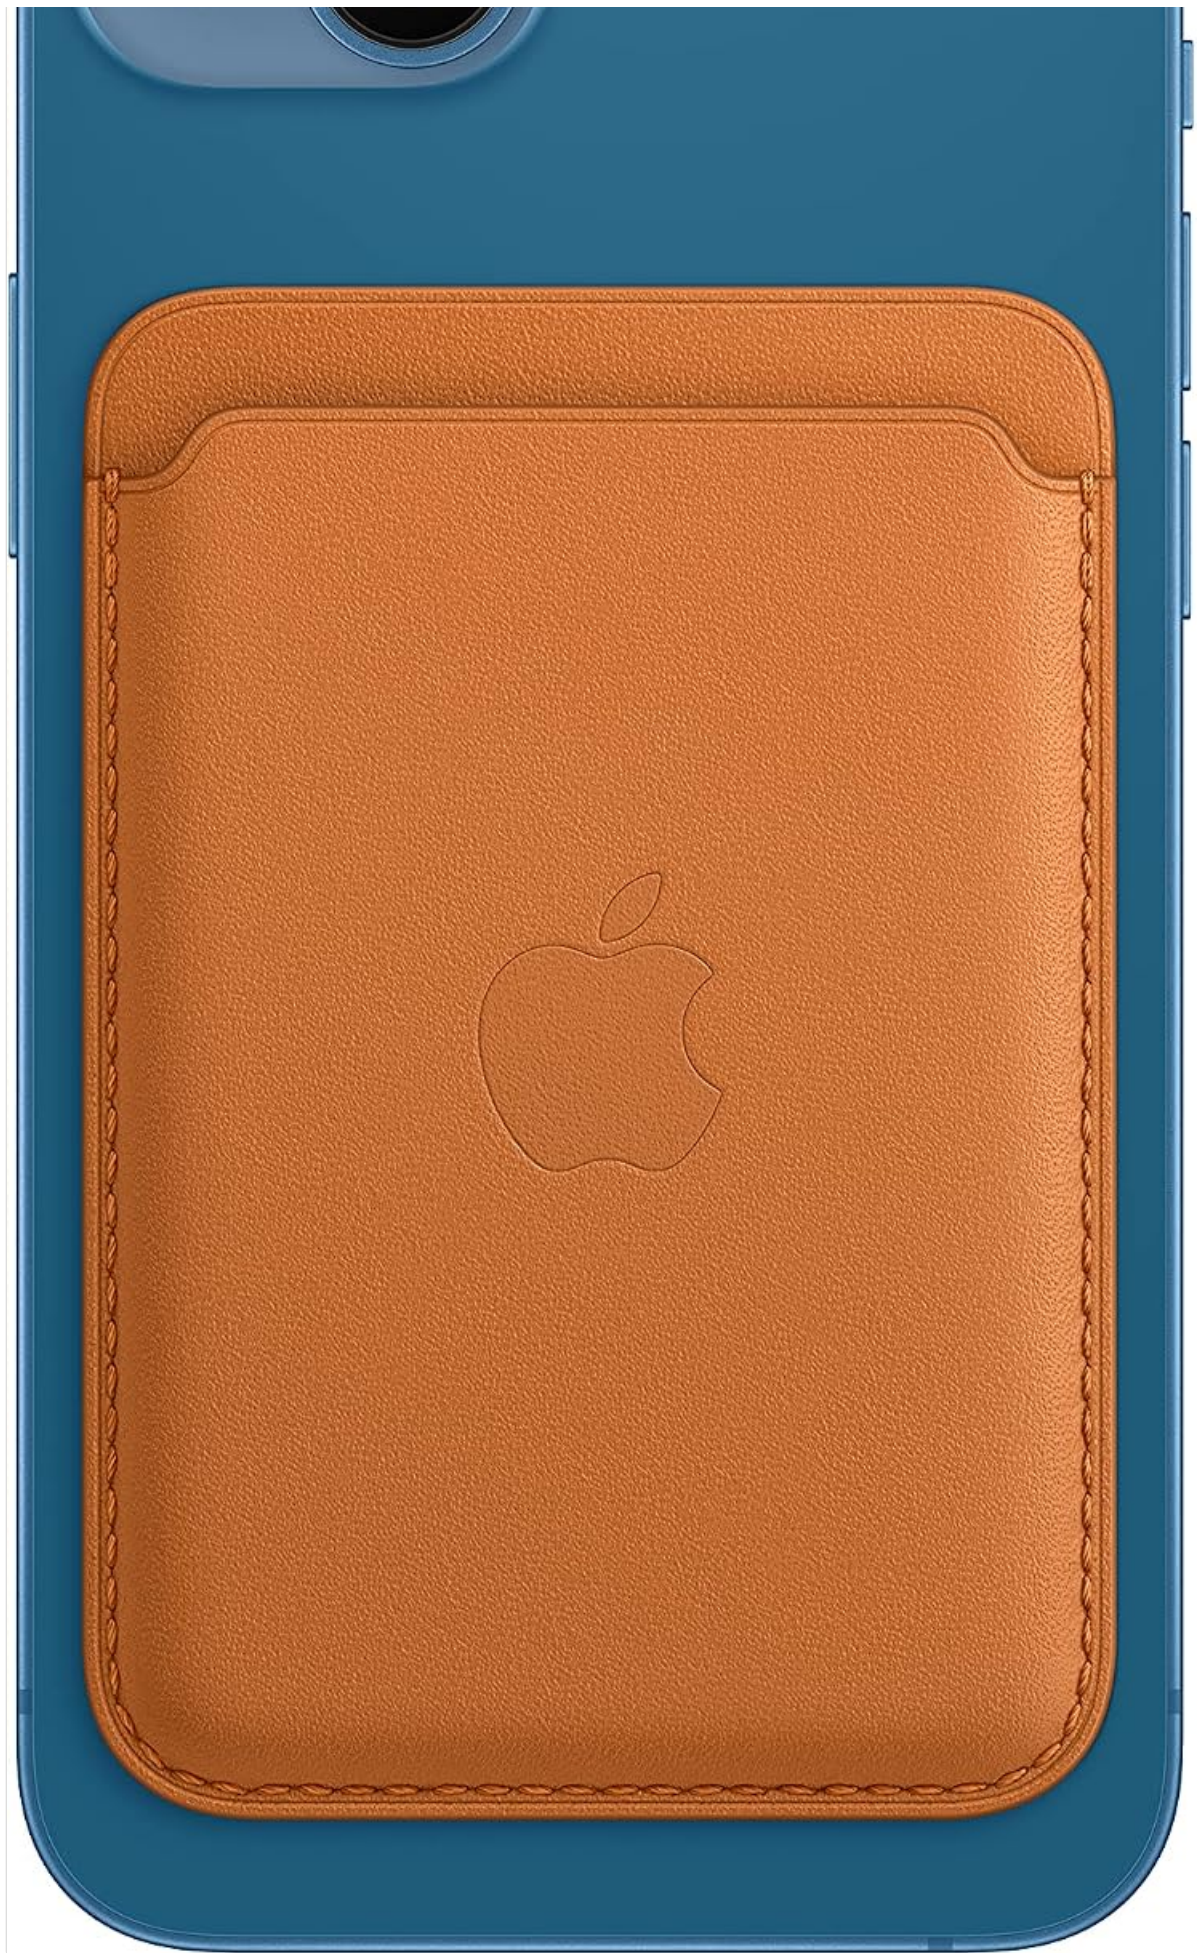


Image: The Golden Brown Apple Leather Wallet securely attached to the back of a blue iPhone.

2.2 Inserting Cards

Gently slide up to three credit cards or ID cards into the wallet's main compartment. The wallet is designed to hold cards securely without stretching excessively. Avoid forcing more than three cards into the wallet to prevent damage or loss of card retention.



Image: A detailed view of the Golden Brown leather texture and stitching of the Apple Leather Wallet.

3. OPERATING INSTRUCTIONS

3.1 Accessing Cards

To remove cards, use the thumb slot located on the back of the wallet. Push the cards upwards through this slot to easily slide them out. This design allows for quick access to your cards.

3.2 MagSafe Functionality

The wallet utilizes MagSafe technology for a strong magnetic connection to your iPhone. It can be stacked on top of an iPhone that has a MagSafe-compatible case, allowing for personalized accessory combinations.

MagSafe accessories



Image: An illustration of various MagSafe accessories, including a wallet, charger, and battery pack, demonstrating their magnetic attachment to iPhones.

4. FIND MY FEATURE

4.1 Enabling Find My

When the wallet is attached to your iPhone, it automatically integrates with the Find My network. Ensure your iPhone's Find My feature is enabled to utilize this functionality.

4.2 Location Notifications

If the wallet becomes separated from your iPhone, you will receive a notification on your device indicating its last known

location. This feature assists in tracking the wallet if it is misplaced.

4.3 Important Considerations for Find My

The Find My feature for the wallet provides the location where it was last detached from your iPhone. It does not offer real-time tracking like an AirTag or an iPhone. If the wallet is moved after detachment, its reported location will remain where it was last connected to your phone.

5. COMPATIBILITY

The Apple Leather Wallet with MagSafe is compatible with the following iPhone models:

- iPhone 14 Pro Max
- iPhone 14 Pro
- iPhone 14 Plus
- iPhone 14
- iPhone 13 Pro Max
- iPhone 13 Pro
- iPhone 13
- iPhone 13 mini
- iPhone 12 Pro Max
- iPhone 12 Pro
- iPhone 12
- iPhone 12 mini

6. MAINTENANCE

6.1 Cleaning the Leather Wallet

To clean your leather wallet, gently wipe it with a soft, damp, lint-free cloth. Avoid using harsh chemicals, abrasive materials, or excessive moisture, as these can damage the leather finish. Allow the wallet to air dry completely.

6.2 Protecting the Leather

Leather is a natural material and may show signs of wear, such as fading or minor scratches, over time with regular use. Exposure to direct sunlight, extreme temperatures, and moisture can accelerate wear. Consider using a leather conditioner periodically to maintain its appearance and suppleness.

7. TROUBLESHOOTING

7.1 Wallet Detaching Unexpectedly

While the MagSafe connection is strong, the wallet may detach if subjected to significant force or friction, such as when sliding your phone into a tight pocket or if dropped. To minimize detachment, ensure you hold both the phone and wallet when placing it into or removing it from pockets.

7.2 Card Chip Interference

The wallet is shielded to protect your cards. However, if you experience issues with card chips (e.g., payment failures), try placing the affected card in the front or middle slot of the wallet. This can help prevent potential interference from the wallet's magnets.

7.3 Find My Location Inaccuracy

As noted in Section 4.3, the Find My feature reports the wallet's last known location when it was connected to your iPhone. If the wallet has been moved since detaching, the reported location will not update in real-time. This is expected behavior for this accessory.

8. SPECIFICATIONS

Product Dimensions	4.54 x 3.24 x 0.59 inches
Item Weight	2.57 ounces
Material	Leather
Color	Golden Brown
Model Number	MM0Q3ZM/A
Manufacturer	Apple

9. WARRANTY AND SUPPORT

For information regarding product warranty, service, and support, please refer to the official Apple support website or contact Apple customer service directly. Specific warranty terms and conditions may vary by region and purchase date. You can find more information and contact details at the official Apple Support page support.apple.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question