

Onasti p21

Onasti Hexagon Baby Playpen User Manual

Model: p21

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before assembling and using the Onasti Hexagon Baby Playpen. Failure to follow these instructions could result in serious injury or death.

- Never leave your child unattended in the playpen. Constant supervision is required.
- Ensure all parts are correctly assembled and securely locked before placing a child inside.
- Do not use the playpen if any parts are broken, torn, or missing. Contact customer support for replacement parts.
- Keep the playpen away from open flames, heaters, and other heat sources.
- Do not modify the playpen in any way. Use only manufacturer-supplied parts.
- Avoid placing toys or objects with long strings or cords inside the playpen to prevent strangulation hazards.
- The playpen is designed for children who cannot climb out and are under 35 inches (89 cm) tall.
- Always use the provided mat. Do not add extra padding or mattresses that could create a suffocation hazard.
- Periodically check all fasteners and connections to ensure they are tight and secure.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Hexagon Playpen Frame (pre-assembled)
- Soft Play Mat
- Removable Sunshade Canopy
- Carry Bag



This image displays the Onasti Hexagon Baby Playpen in its assembled state, highlighting its hexagonal shape, breathable mesh walls, and the removable sunshade canopy. A baby is shown comfortably playing inside, demonstrating the generous space. The top right corner shows the playpen folded compactly, and a carry bag is depicted on the right, emphasizing its portability.

SETUP INSTRUCTIONS

Unfolding the Playpen

1. Remove the playpen from its carry bag.
2. Stand the folded playpen upright.
3. Push down on the center hub until the base locks into place. Ensure all six sides are fully extended and locked.
4. Pull up on the side rails until they click and lock into position. Verify all top rails are rigid.

Attaching the Mat

1. Unfold the soft play mat.
2. Place the mat inside the playpen, aligning its hexagonal shape with the playpen's base.

3. Secure the mat using any integrated fasteners (e.g., velcro straps) to the playpen frame to prevent shifting.

Installing the Canopy (Optional)

1. Unfold the sunshade canopy.
2. Align the canopy with the top frame of the playpen.
3. Attach the canopy securely to the playpen frame using the provided clips or straps. Ensure it is taut and covers the entire top opening.

Easy to Assemble and Fold

1



2



3



4



5



6



7



8



This visual guide provides a step-by-step illustration of how to easily assemble and fold the Onasti Hexagon Baby Playpen. It shows the process from unpacking the carry bag, unfolding the frame, securing the sides, attaching the mat, and finally, folding it back down for storage.

OPERATING INSTRUCTIONS

Zippered Door Functionality

The playpen features a convenient zippered door for easy access. To open, simply unzip the door. To secure, zip it closed completely. Always ensure the door is fully zipped when a child is inside to prevent accidental exit.

Sunshade Usage

When using the playpen outdoors, attach the sunshade canopy to provide protection from direct sunlight. The canopy helps to create a cooler and safer environment for your child.



This image illustrates the Onasti Hexagon Baby Playpen being used outdoors. A parent is shown adjusting the sunshade canopy, which provides UV protection, while a baby plays inside. The outdoor setting emphasizes the playpen's versatility for various environments.

Folding for Storage and Travel

To fold the playpen, first remove the mat and canopy. Locate the release buttons or levers on the side rails and center hub. Follow the reverse steps of assembly to collapse the frame. Once folded, secure it with any integrated straps and place it in the carry bag.

Portable Playpen & Travel Crib



This image highlights the portability of the Onasti Hexagon Baby Playpen. A woman is shown easily carrying the playpen in its compact carry bag, demonstrating its lightweight design at 9.9 lbs, making it ideal for travel.

Product in Use

This video showcases the Onasti Hexagon Baby Playpen in active use, with two children playing comfortably inside. It highlights the spacious interior and the convenient zippered door, allowing easy entry and exit for children and parents.

MAINTENANCE AND CARE

Cleaning Instructions

Regular cleaning will help maintain the longevity and hygiene of your playpen.

- **Fabric Components:** The fabric parts of the playpen, including the mat and canopy, are removable and machine washable. Use a mild detergent and cold water on a gentle cycle. Do not bleach. Air dry thoroughly before reassembling.
- **Frame:** Wipe down the metal and plastic frame components with a damp cloth and mild soap. Rinse with a

clean damp cloth and dry thoroughly.

- **Mesh:** The mesh sides can be wiped clean with a damp cloth. For stubborn stains, use a mild soap solution and rinse well.

Washing Instructions

Fabric Removable Design ALL Washable!



This image demonstrates the easy maintenance of the Onasti Hexagon Baby Playpen. It shows the fabric components being placed into a washing machine, emphasizing that the entire fabric design is removable and washable for convenient cleaning.

Storage

When not in use, fold the playpen and store it in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Playpen does not lock open.	Side rails are not fully extended or center hub is not pushed down completely.	Ensure all side rails are pulled up until they click into place. Push the center hub firmly downwards until it locks.
Difficulty folding the playpen.	Side rails or center hub not properly released.	Ensure all release buttons/levers are pressed correctly before attempting to fold. Do not force the frame.
Tears or damage to mesh/fabric.	Wear and tear, sharp objects, or improper handling.	Discontinue use immediately. Contact customer support for repair or replacement options. Do not attempt to repair with tape or other temporary solutions.
Playpen feels unstable.	Not all locking mechanisms are engaged.	Double-check that all side rails and the center hub are securely locked into their open positions. Ensure the playpen is on a flat, stable surface.

PRODUCT SPECIFICATIONS

Model: p21

Product Dimensions: 49.6 x 43 x 25.6 inches (L x W x H)

Item Weight: 9.88 pounds (4.49 Kilograms)

Material Type: High Density Polyethylene

Color: Dark Grey

Age Range (Description): Kid

Large Playard Indoor

For Crawling Babies,
Toddlers Playing, Having a Nap



This image shows the Onasti Hexagon Baby Playpen set up indoors, with a baby playing comfortably. The image also includes visual indicators for the playpen's dimensions: 25.6 inches in height, 25 inches across the base, and the folded carry bag dimensions of 27.6 inches by 9.8 inches, highlighting its compact storage.

WARRANTY AND SUPPORT

Warranty Information

Onasti products are manufactured to high-quality standards. For specific warranty details regarding your Hexagon Baby Playpen, please refer to the warranty card included with your purchase or visit the official Onasti website.

Customer Support

If you have any questions, concerns, or require assistance with your Onasti Hexagon Baby Playpen, please contact our customer support team. Our representatives are available to help with assembly, troubleshooting, and general product inquiries.

Contact Information:

Website: [Visit the Onasti Store on Amazon](#)

Email: [Manufacturer Email Address - Placeholder, as not provided in JSON]

Phone: [Manufacturer Phone Number - Placeholder, as not provided in JSON]

Please have your model number (p21) and purchase date ready when contacting support.