

[Manuals.plus](#) /

> [Nokia](#) /

> Nokia 6310 Dual SIM Keypad Phone User Manual

Nokia 6310

Nokia 6310 Dual SIM Keypad Phone User Manual

Model: 6310

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Nokia 6310 Dual SIM Keypad Phone. Please read it carefully before using the device and keep it for future reference.



Figure 1: Front view of the Nokia 6310 phone.

1.1 Package Contents

Ensure your package contains the following items:

- Nokia 6310 Handset
- Battery

- Charger
- Quick Start Guide

2. GETTING STARTED

2.1 Inserting the SIM Card and Battery

1. **Remove the back cover:** Gently pry open the back cover from the notch located at the bottom edge of the phone.
2. **Insert SIM cards:** Locate the SIM card slots. Insert your SIM cards into the designated slots with the gold contacts facing down. The Nokia 6310 supports Dual SIM functionality.
3. **Insert the battery:** Align the battery contacts with the phone's contacts and gently press the battery into place.
4. **Replace the back cover:** Place the back cover over the battery compartment and press firmly until it clicks into place.



Figure 2: Rear view of the Nokia 6310, indicating the back cover area.

2.2 Charging the Battery

Before first use, fully charge the battery. Connect the charger to a power outlet and then to the phone's charging port. The battery indicator on the screen will show the charging status. A full charge takes approximately 2 hours and 27 minutes.

2.3 Powering On/Off

- **To power on:** Press and hold the Power key (usually the red end call key) until the phone vibrates and the Nokia logo appears.
- **To power off:** Press and hold the Power key, then select "Power off" from the options.

3. BASIC OPERATION

3.1 Keypad Functions

The Nokia 6310 features a classic keypad for navigation and input.

- **Navigation keys:** Use the directional keys (up, down, left, right) around the center select button to navigate menus.
- **Select key:** The center key confirms selections.
- **Call key:** Green key to make or answer calls.
- **End/Power key:** Red key to end calls or power the phone on/off.
- **Numeric keys (0-9, *, #):** For dialing numbers and text input.



Figure 3: Detailed view of the phone's keypad.

3.2 Making and Receiving Calls

- **To make a call:** Enter the phone number using the keypad and press the Call key.
- **To answer a call:** Press the Call key when the phone rings.
- **To end a call:** Press the End key.



Figure 4: Call log display on the Nokia 6310.

3.3 Messaging

To send and receive text messages (SMS):

1. Go to **Menu > Messages > Create message**
2. Type your message using the keypad.
3. Select **Options > Send** and enter the recipient's number or select from contacts.

3.4 Wireless FM Radio

The Nokia 6310 features a wireless FM radio. To use it:

1. Go to **Menu > Radio**.
2. Select **Options > Auto tune** to scan for available stations.
3. Use the navigation keys to switch between stations.

3.5 Camera Functionality

The phone includes a basic rear camera with flash.

1. Go to **Menu > Camera**.
2. Frame your shot using the screen.
3. Press the center Select key to capture the image.

Nokia 6310




**Made in India.
Made for India.**

**Rear camera with
LED Flash**



**Colors
Black, Blue, Green, Yellow**

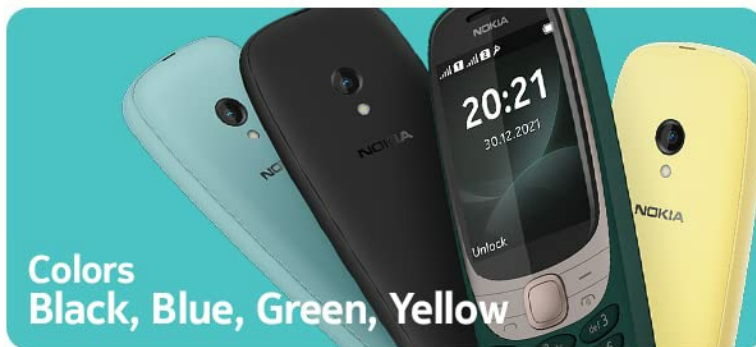

Long lasting battery



**Time to
charge 100%
2h 27mins**



**Talk Time
19.45 hours***



**Music Playback
Up to
45 hours**



**Standby time
Up to
35 days**



**Zoomed in
menus &
Big buttons**

Dual sim



Wireless FM

Figure 5: Overview of Nokia 6310 features, including the rear camera.

3.6 Pre-loaded Games

The Nokia 6310 comes with pre-loaded games, including the classic Snake. Access games via **Menu > Games**.

4. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Battery Care:**
 - Do not expose the battery to extreme temperatures.
 - Avoid fully discharging the battery frequently.
 - Use only Nokia-approved chargers.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight.

5. TROUBLESHOOTING

Problem	Possible Solution
Phone does not power on	Ensure the battery is correctly inserted and charged. Try charging the phone for at least 30 minutes.
Cannot make or receive calls	Check if SIM cards are properly inserted. Verify network signal strength. Contact your service provider if issues persist.
Battery drains quickly	Reduce screen brightness. Close unused applications. Ensure no background processes are running.
Keypad unresponsive	Restart the phone. Ensure no physical obstruction is affecting the keys.

6. SPECIFICATIONS

Feature	Detail
Model	Nokia 6310
Operating System	Nokia Series 30+
Display	2.8" Curved Window Display
RAM	8 MB
Internal Storage	32 GB (expandable via microSD, not included)
Camera	Rear Camera with LED Flash
Connectivity	GSM 2G, Radio Frequency
Special Features	Wireless FM Radio, Pre-loaded Games (Snake), Dual SIM
Battery Capacity	1200 mAh (Lithium Ion)
Talk Time	Up to 24 Hours
Dimensions (LxWxH)	13.6 x 5.6 x 1.4 cm
Weight	100 g

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your Nokia 6310 comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects. For detailed terms and conditions, please refer to the warranty card included in your package or visit the official Nokia support website.

7.2 Customer Support

For technical assistance, troubleshooting, or service inquiries, please contact Nokia customer support. You can find contact details on the official Nokia website or in the Quick Start Guide.

Online Support: Visit [Nokia Phones Support](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09G9TQ4FR>

More documents and user manuals: <https://manuals.plus/>